



# 8000 Series Showerhead

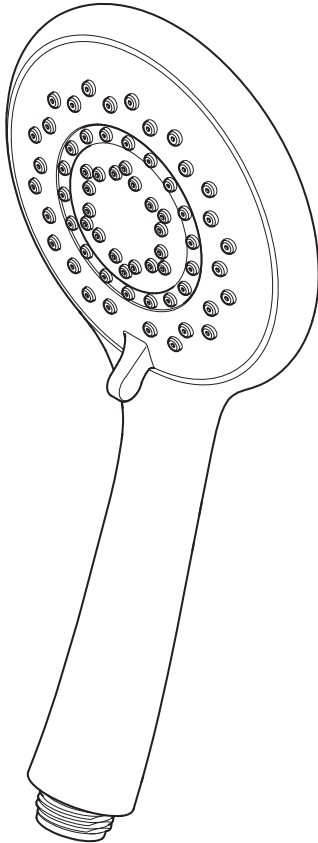


## Maintenance Instructions

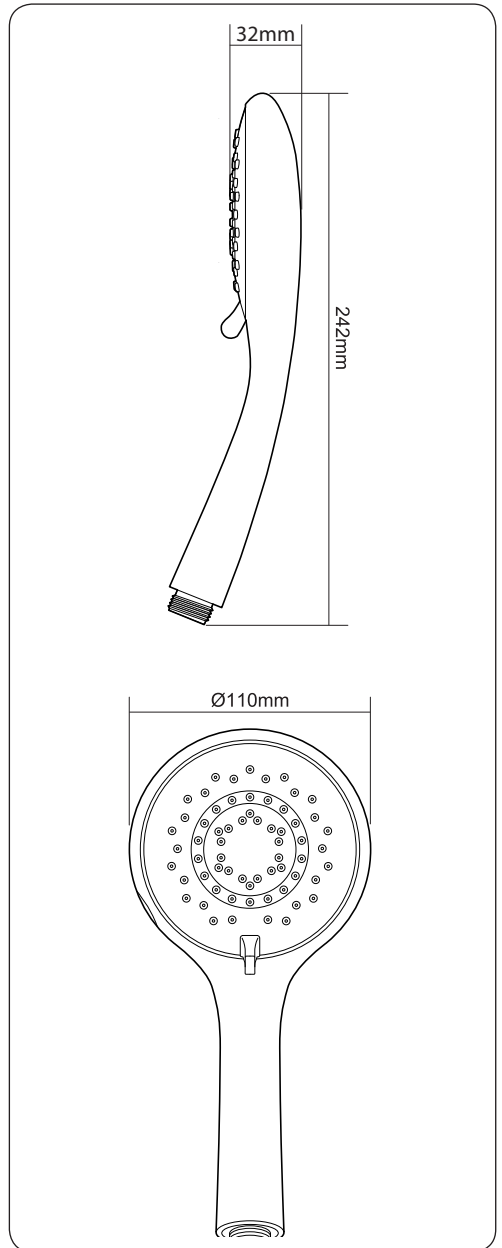

INSTALLERS PLEASE NOTE THESE INSTRUCTIONS ARE TO BE LEFT WITH THE USER

## 8000 SERIES SHOWERHEAD

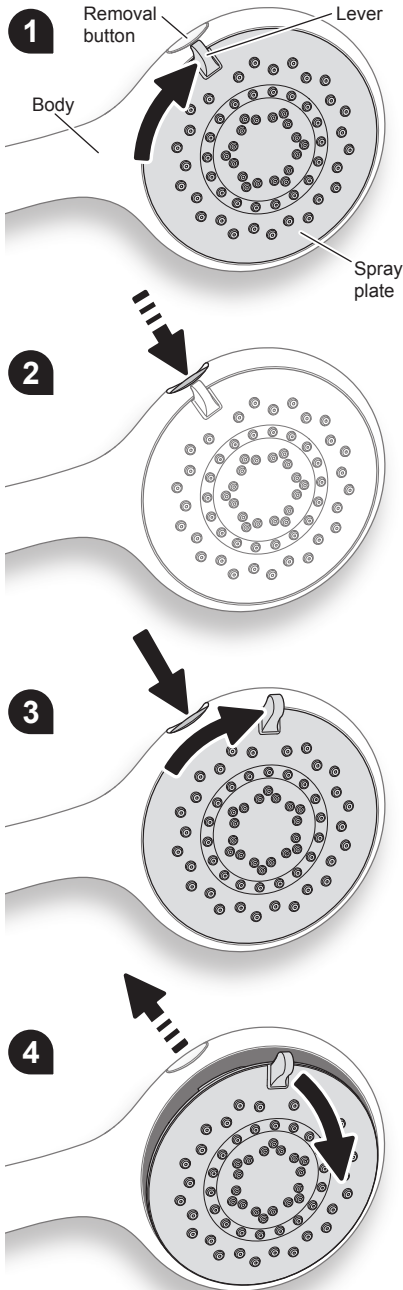

This instruction book covers the operation and cleaning of the showerhead.

### SHOWERHEAD SPRAY POSITIONS

Five showerhead patterns are available.

Adjust the spray pattern by turning the lever on the showerhead in either direction until the desired pattern is obtained. These positions are located at 4, 5, 6, 7 and 8 o'clock, when the showerhead is in the vertical position.

### REMOVING THE SPRAY PLATE

**IMPORTANT:** Before cleaning, turn off the unit at the mains supply to avoid the shower being accidentally switched on.

- 1 Rotate the spray plate clockwise until it reaches its 'stop' position facing the removal button.
- 2 Press and hold the removal button in.
- 3 With the removal button held in, rotate the face plate clockwise past the removal button until it stops.
- 4 Release the removal button and gently pull the face plate away from the body using the adjustment lever.

#### IMPORTANT

Should any difficulty arise when trying to remove the spray plate (image 4) **DO NOT** try to force it out of the body by hand, or by using tools such as a screwdriver. Reset the spray plate to the position shown in image 7 and repeat steps 1-4 as listed above.

**DO NOT** remove the inner plate (image 5). Removing this, **WILL** invalidate any product warranty.

## 8000 SERIES SHOWERHEAD

### CLEANING

Triton recommends that all products are cleaned using warm, soapy water.

**DO NOT** use abrasive or aggressive chemical cleaning products as this may affect the product surface and finish and invalidate your guarantee.

**NOTE:** *The showerhead can be cleaned quickly by simply rubbing your fingers over the spray plate.*

IT IS IMPORTANT TO KEEP THE SHOWERHEAD CLEAN TO MAINTAIN THE PERFORMANCE OF THE SHOWER. The hardness of the water will determine the frequency of cleaning. For example, if the shower is used every day in a very hard water area, it may be necessary to clean the showerhead on a weekly basis.

### REPLACING THE SPRAY PLATE




- 5** The spray plate and face plate **MUST** be aligned correctly for reinstallation. To align them correctly, please do the following:
  - a** Ensure that the inner plate is turned fully clockwise until it stops. The alignment arrow position is approximately 9 o'clock, when the showerhead is in the vertical position.
  - b** The lever **MUST** then be matched up with the arrows position to reinstall the spray plate correctly.

Should any difficulty arise when trying to refit the spray plate **DO NOT** try to force it back into position. Please make sure the arrow and lever positions are correct.

Once in place, the spray plate face should be gently pressed until its edges sit flush with the body.

- 6** Now installed into the body, start to turn the spray plate anti-clockwise.
- 7** To lock the plate back into the mechanism, the spray plate **MUST** be rotated fully anti-clockwise until it stops.

**IMPORTANT:** *The showerhead should be directed towards waste, and the shower switched on to ensure the spray plate is locked into the mechanism before use.*

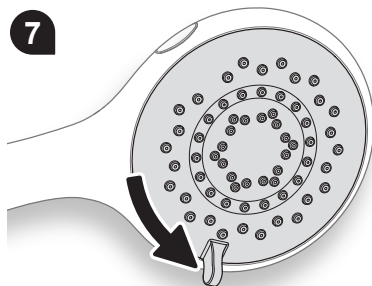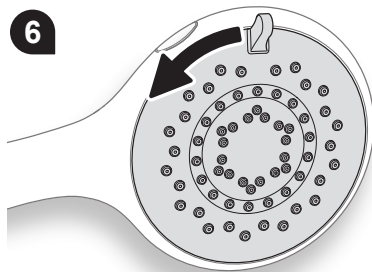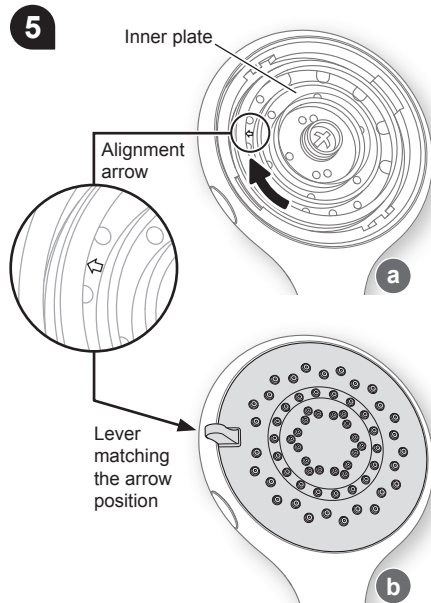

## SPARE PARTS

**Ref. Description** **Part number**

---

### 1. 5 mode rub clean showerheads

## SHOWER HEADS

*(mixer showers only)*

88500060 .....WHITE MIXER  
88500061 .....CHROME MIXER  
88500068 .....SATIN MIXER

*(electric showers only)*

88500062.....INCLUSIVE WHT  
88500069 .....ELEC SATIN  
88500070 .....INCLUSIVE CHROME  
88500074 .....ELEC WHITE  
88500075 .....ELEC CHROME

### 2. Flow Regulator

## FLOW REGULATORS

22011740.....4 L/MIN  
22011750.....5 L/MIN  
22011760.....6 L/MIN  
22011610.....7 L/MIN  
22011280.....8 L/MIN

