
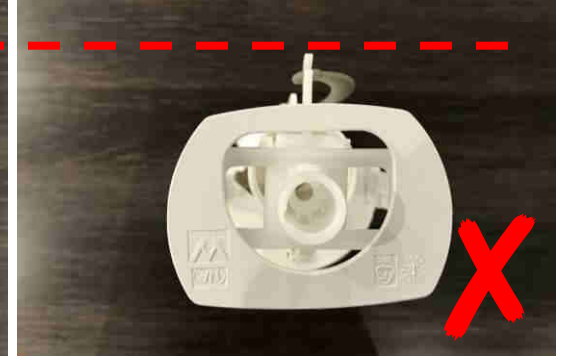


# Vitra S20 Troubleshooting


Sticking or not flushing  
Passing water

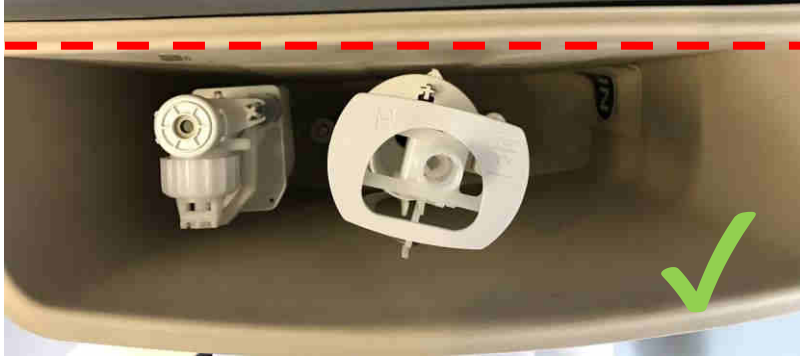

First check that the valve position is as shown above, the valve should be clear of the cistern wall, if not remove the valve and re-position.

If the valve position is correct, check the valve settings are still in the factory set positions detailed in the table (right).

If the problem persists please contact Siamp Aftersales on 0161 681 2120 or [aftersales@siamp.co.uk](mailto:aftersales@siamp.co.uk)

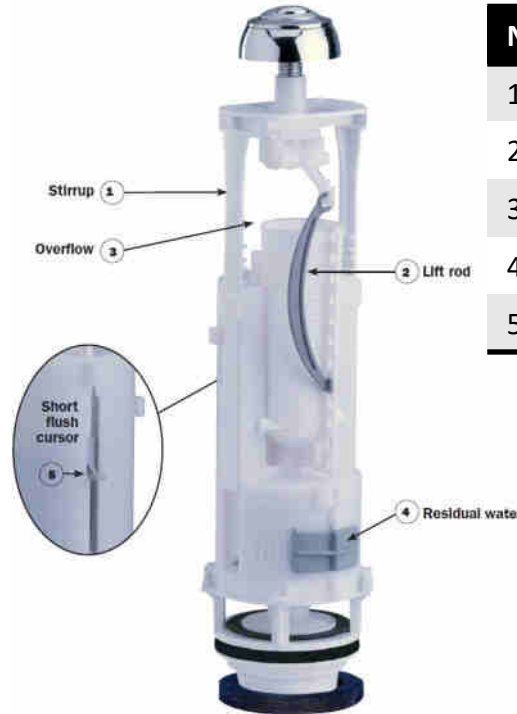

No	Description	Setting	Figure
1	Stirrup	Position 7 (number 6 will be visible)	A
2	Lift Rod	Position 5 (4 holes above will be visible)	B
3	Overflow	Factory set. D will be visible	B
4	Residual Water	0	C
5	Short flush cursor	10	D

# Vitra S20 Troubleshooting

Sticking or not flushing  
Passing water

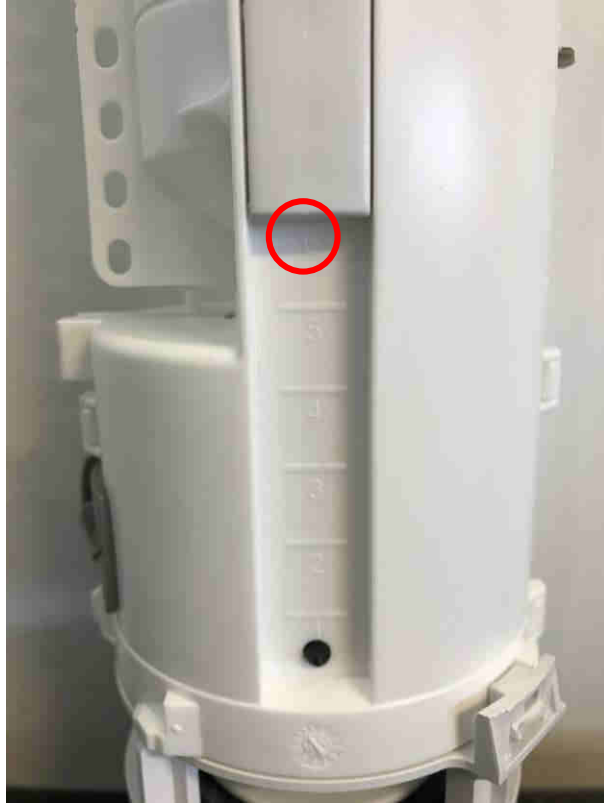


Fig A.  
Stirrup in position 7.  
(number 6 will be visible)



Fig B.  
Lift Rod in position 5  
(4 holes visible above)

Overflow tube pre-cut at D



Fig C.  
Residual Water set at 0



Fig D.  
Short flush cursor set at 10