

What is the diagnostic procedure?

The Mira Advance On/Off light is flashing red (Error Code A)

1. Check isolator valves are fully open.
2. Clean/replace the filter, refer to installation and user guide's 'Maintenance' section.
3. Check Hose/showerhead is not blocked.

The On/Off Light Indication is off (Error Code B)

Check the Bluetooth transformer is switched on, should there be a Flashing Blue Light this indicates loss of connection between the shower and transformer. Turn the shower off and back on, if the problem persists, the transformer may be too far away from the shower or obstacles between may be reducing the signal range. Please contact our [customer service](#) team for further help.

The status light indication is flashing Red/Yellow

On/Off Light Indication Off (Error Code B) - You may need to replace the tank. Please contact customer service to discuss further and potentially order a new part.

Flashing (Error Code D) - Press the blue button on the top of the valve assembly to purge the hot water out of the heater tank.

The status light indication is flashing red/blue

On/Off Light Indication is Off (Error Code E) - You may need to replace the valve assembly.

On/Off Light Indication is Flashing (Error Code F) - You may need to check the installation, specifically the inlet temperature may be too hot.

On/Off Light Indication is On (Error Code G) - You may need to replace the front cover assembly.