


Please use three legs for installation as shown


# CASINA INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

## DESCRIPTION

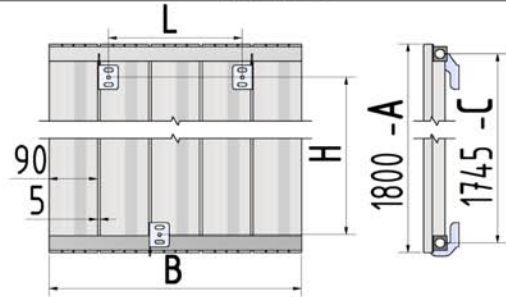

Example images for 5 tubes

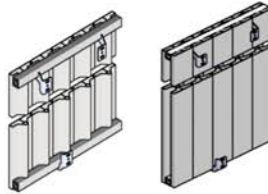

RADIATOR x 1

## DESCRIPTION

Fixing choose the appropriate fixing for the wall material if required

## ILLUSTRATION



PTFE tape



Electric drill



Masonry drill bit appropriate to the fixings



Adjustable spanner



Radiator valve hex key



Flat head and phillips head screw drivers




1 lock shield valve and 1 gate or thermostatic valve



Spirit level





Measuring tape

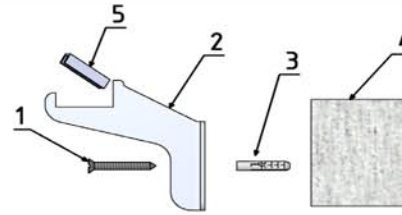


1	SCREWS
2	CLIPS (BRACKETS)
3	WALL ANCHORS
4	WALL
5	GASKET

ATTENTION : Gaskets must be placed as shown

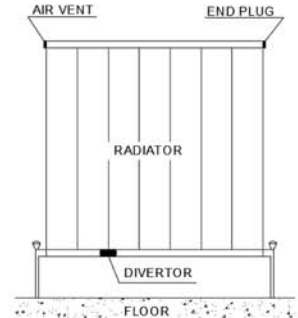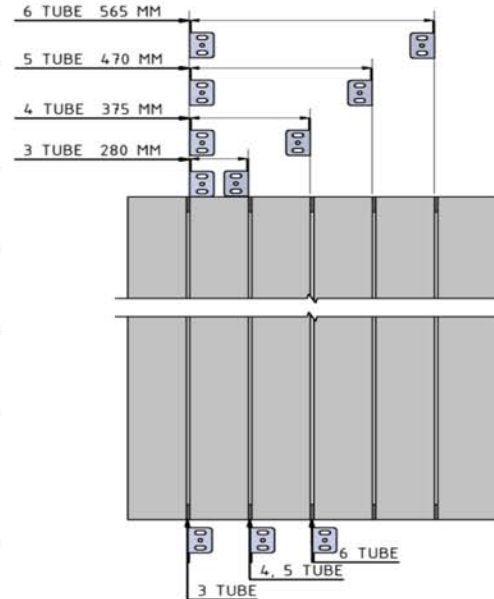

There is a sticker on product .

Which states 'BOTTOM'

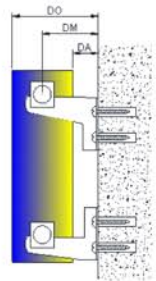

TOP - RIGHT CLIPS x 1



TOP - LEFT CLIPS x 1



BOTTOM x 1

NAMES	A	B	C	TUBE QTY	DA	DM	DO	H	L
CASINA (SINGLE)	1800	280	1745	3	25	34	65	1680	57
CASINA (SINGLE)	1800	375	1745	4	25	34	65	1680	152
CASINA (SINGLE)	1800	470	1745	5	25	34	65	1680	247
CASINA (SINGLE)	1800	565	1745	6	25	34	65	1680	342

END PLUG x 1

FIXING SCREWS x 3

GASKETS x 3

AIR VENT x 1

WALL ANCHORS x 3

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.