
TM02 – Quadrant Monstem

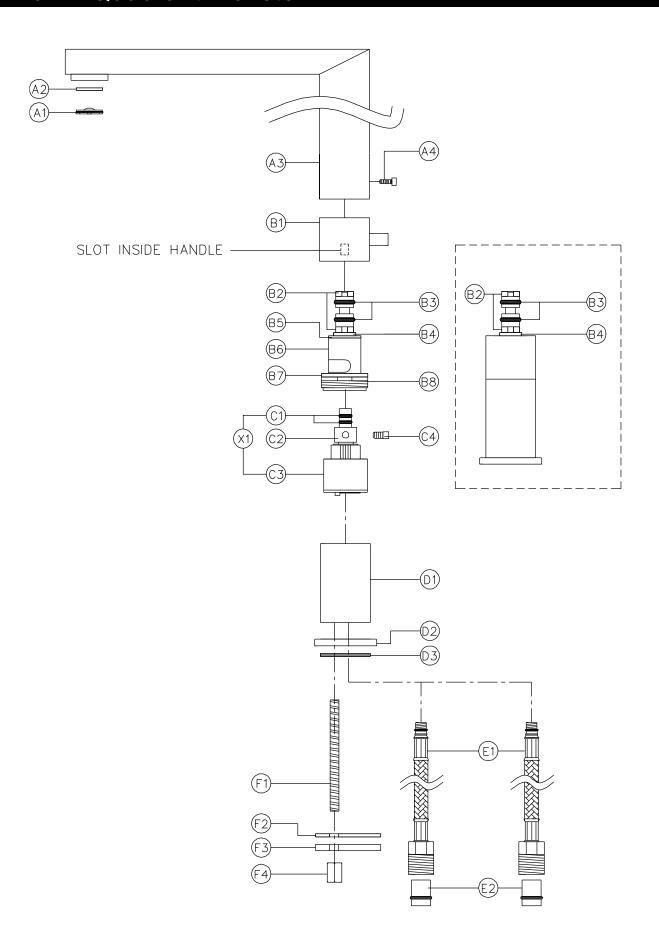

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

- 1. Loosen grub screw (A4) on the rear of the spout (A3) using a 2.5mm A/F allen key.
- 2. Pull the spout (A3) vertically away from the control block (B1).
- 3. Remove PTFE rings (B2) using a pair of flat tip screwdrivers.
- 4. Taking great care, remove o-rings (B3) with a flat tip screwdriver.
- 5. Pull the control block (B1) vertically away from the body (D1).
- 6. Remove control block grub screw (C4).
- 7. Remove PTFE ring (B7).
- 8. Using and adjustable spanner, fully unscrew valve locking nut (B8) and pull away the valve/spout connector (B6) along with the old valve assembly (X1)
- 9. Pull away the old valve assembly (X1) from the valve/spout connector (B6).
- 10. Clean the inside of chamber D1 using warm water and a mild detergent.
- 11. Push the new valve assembly into the valve/spout connector (B6)
- 12. Locate the pegs on the bottom of the new valve assembly (X1) into the corresponding holes in the tap body (D1).
- 13. Reassemble the tap in reverse order (points 8 to 1).

To replace the spout o-rings:

- 1. Loosen grub screw (A4) on the rear of the spout (A3) using a 2.5mm A/F allen key.
- 2. Pull the spout (A3) vertically away from the control block (B1).
- 3. Remove upper PTFE ring (B2) using a pair of flat tip screwdrivers.
- 4. Replace old o-rings (B3) with new one and reassemble the tap in reverse order.

To replace the valve o-rings:

1. Follow the valve replacement guide. Once the valve assembly (X1) has been removed, lever off the old o-rings (C1) and replace with the new ones. Continue to follow the valve replacement guide to reassemble the tap.