



**Digital
Thermostatic
Boiler**

Boiler Dimensions

Width 188 mm
Depth 188 mm
Height 270 mm



We recommend you descale your tank every 12 months. Soft scale can still build up in the tank even though you have a filter installed. Certain areas suffer from harder water than others, if you are in a very hard water area, we suggest doing this every 6-9 months. If you notice a drop in flow rate it is likely you need to descale your tank. To descale the tank, remove the tank as per the following.

- 1 Turn off and allow the tank to cool.
- 2 Unscrew the hot and cold fittings with an adjustable spanner.
- 3 Using descaling fluid, pour the fluid into the tank via Red & Blue inlets. Follow the descaling product instructions for time and double the mixture strength.
- 4 Drain and repeat the process again.
- 5 Reconnect the tank and tighten the hot and cold connection just over hand tightness.
- 6 Run the kettle valve so that around 4 litres of water has passed and then switch the tank on and allow to heat fully. (Note: water will not exit the spout until the system is full of water).

Run an additional 2 litres off once the tank is at temperature.