

LARGA INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

CLIPS
WALL
WALL ANCHOR
SCREW
CLIPS
WALL ANCHOR
SCREW
RADIATOR

CLIPS X 4 PCS
X 2 PCS (FOR 608 MM WIDTH)

WALL ANCHORS X 8 PCS
X 4 PCS (FOR 608 MM WIDTH)

FIXING SCREWS 8 PCS
X 4 PCS (FOR 608 MM WIDTH)

CAP X 2 PCS

END PLUG X 1 PCS

AIR VENT X 1 PCS

A

B

DO
DM
DA
RADIATOR
WALL

AIR VENT
END PLUG
RADIATOR
DIVERTOR
FLOOR

BRACKET
RUBBER

FOR 608 MM WIDTH PRODUCTS

CLIPS
350
WALL
C

FOR 812, 1016, 1220 MM WIDTH PRODUCTS

CLIPS
350
WALL
C D C

NAMES	HEIGHT	A	B	C	D	DA	DM	DO
LARGA	600	608	545	165		21	36	63
LARGA	600	812	545	165	243	21	36	63
LARGA	600	1016	545	165	447	21	36	63
LARGA	600	1220	545	165	651	21	36	63

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5 -5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb onthe radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.