

ALLEGRO DOUBLE INSTALLATION GUIDE


DOCUMENT NO : IGVIC
REVISION NO : 01
REVISION DATE : 28.07.2023

GENERAL INFORMATION


Please pay attention to the following points during radiator installation must carried out by a fully qualified Plumber, Plumbing and heating Engineer or Electrician (as appropriate) who is fully conversant with current installation regulations and codes of good practice.

- Before starting radiator installation, make sure that the heating system is free from scale, residues from previous work, chemical deposits, and similar contaminants.
- The pH level of the heating system water should be within the range of 8.5 to 5.5, and the dissolved substance amount should be below 0.1 mg/liter. Otherwise, acidic water can cause damage to the radiator and silicone and rubber components.
- During radiator assembly, ensure that the assembly equipment and the radiator itself are level. Otherwise, some sections of the radiator may not heat properly.
- To protect the radiator surface from scratches, clean it only with a soft cloth. Do not use any chemical substances (such as bleach or rubbing alcohol) during cleaning, as these chemicals can harm the radiator's paint or anodized coating. Additionally, it is strictly prohibited to step on the radiator.



INSTALLATION BOX CONTENTS

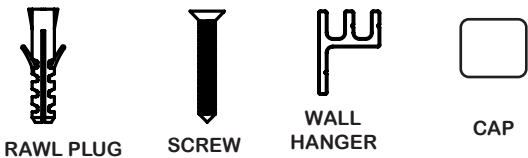


MOUNTING TYPE / QUANTITY	RAWL PLUG	SCREW	WALL HANGER	CAP
A	4	4	2	2
B	6	6	3	2

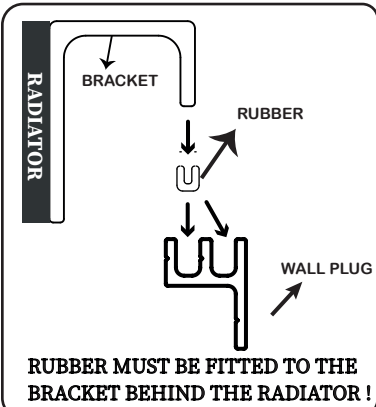

RUBBER MUST BE FITTED TO THE BRACKET BEHIND THE RADIATOR !

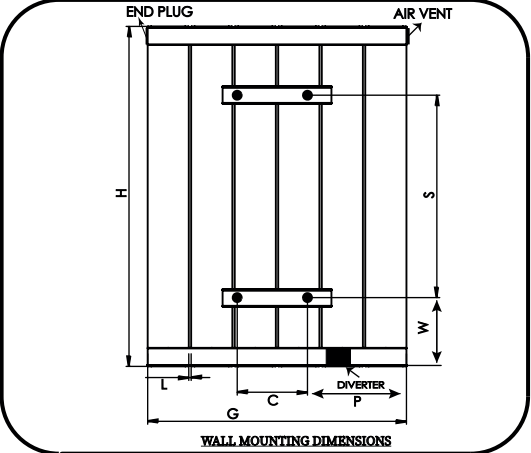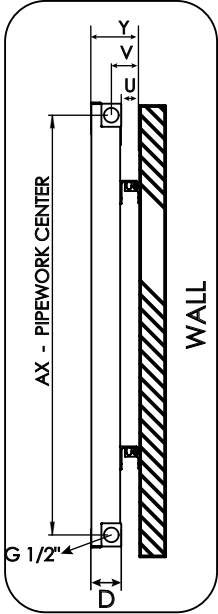


Mounting Type - A

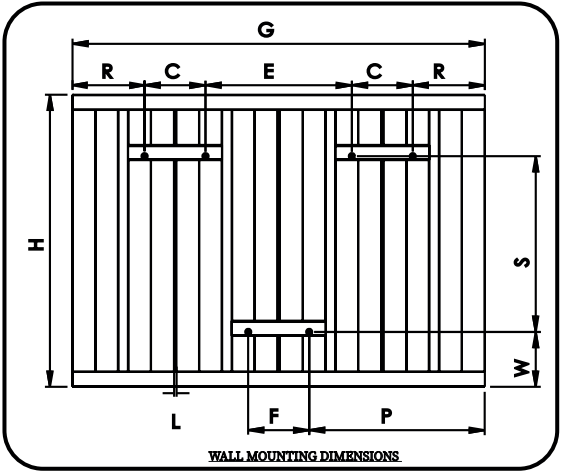

Mounting Type - B

ASSEMBLY EQUIPMENT

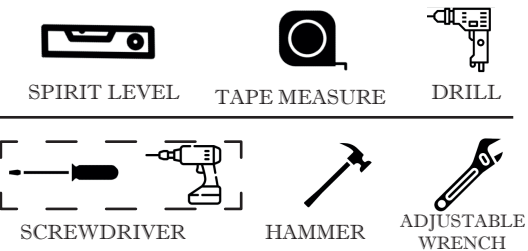

MOUNTING TYPE	TUBE QTY	G WIDTH	C	F	R	E	P	U	V	Y	D	L BETWEEN TUBES	H HEIGHT	AX	S	W
A	3	280	125	N/A	N/A	N/A	77.5	26/35	56/65	86/95	60	5	600	545	350	112.5
A	4	375	125	N/A	N/A	N/A	125	26/35	56/65	86/95	60	5	1800	1745	1550	112.5
A	5	470	125	N/A	N/A	N/A	172.5	26/35	56/65	86/95	60	5				
A	6	565	125	N/A	N/A	N/A	220	26/35	56/65	86/95	60	5				
A	7	660	125	N/A	N/A	N/A	267.5	26/35	56/65	86/95	60	5				
B	9	850	125	125	125	350	362.5	26/35	56/65	86/95	60	5				
B	11	1040	125	125	125	540	457.5	26/35	56/65	86/95	60	5				
B	13	1230	125	125	125	730	552.5	26/35	56/65	86/95	60	5				
B	15	1420	125	125	125	920	647.5	26/35	56/65	86/95	60	5				

ALL DIMENSIONS ARE IN MILLIMETERS !