


Freefuerte Bath Outer Skin Freefortis Bath Inner Skin Freefortis Bath Outer Skin R32 R35 R36 Freestark Bath Inner Skin Freestark Bath Outer Skin Freefuerte Bath Inner Skin R33 R34 R31

Tools required:













Parts supplied:





















- Prior to installation check that all parts have been supplied.
- Assemble bath on a mat to protect against damage to bath surface.
- This product requires a two person lift use proper lifting techniques.
- This installation guide does includes recommendation of waste connection; final decision about installation and waste connection should be taken by a suitably qualified person.
- Follow each step in turn.

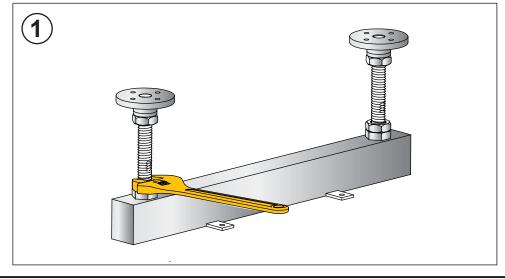

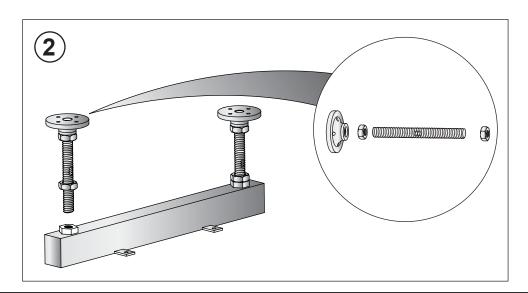

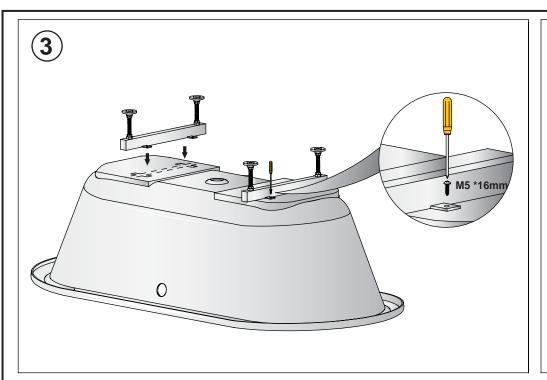

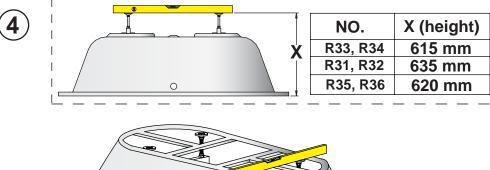

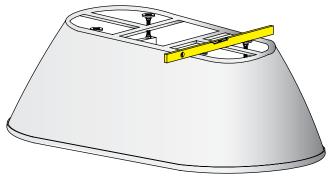

• Set the bath at the height Xmm from floor to the top of the bath rim.

Install the panel on to the bath and adjust if required to ensure that the bath feet are level with the panel in fitted position.

