





**Tools required:**




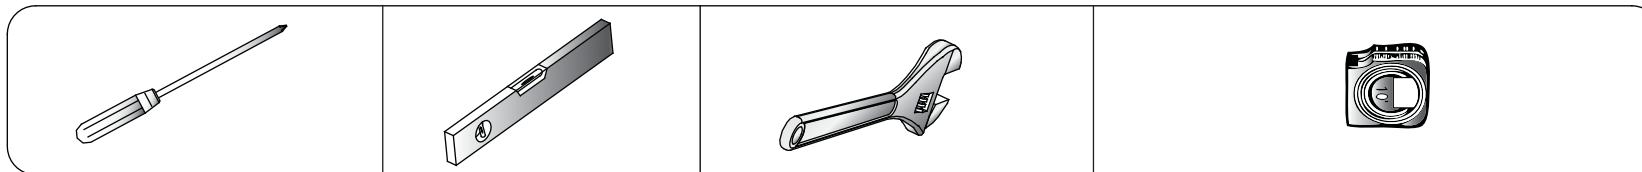


**Parts supplied:**

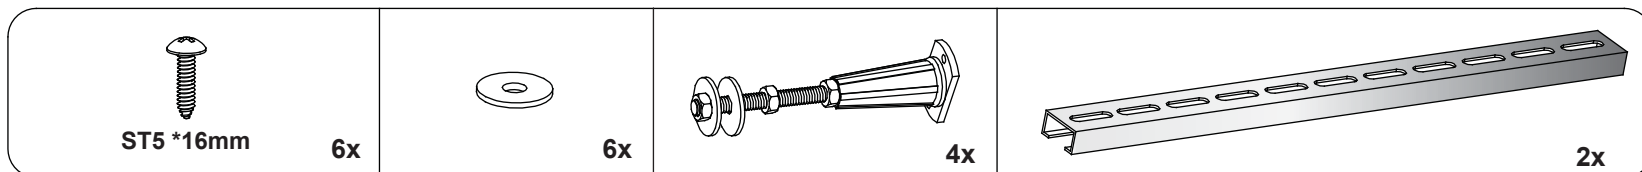


- Prior to installation check that all fittings have been supplied.
- Assembled bath on a mat to protect against damage to bath surface.
- This product requires a two person lift - use proper lifting techniques.
- This installation guide does includes recommendation of waste connection; final decision about installation and waste connection should be taken by a suitably qualified person.
- Follow each step in turn.

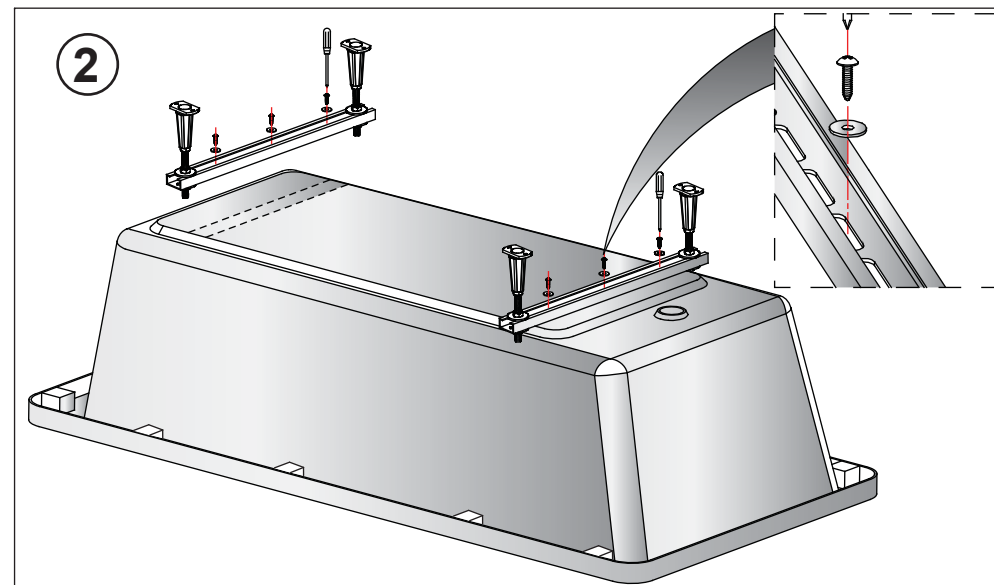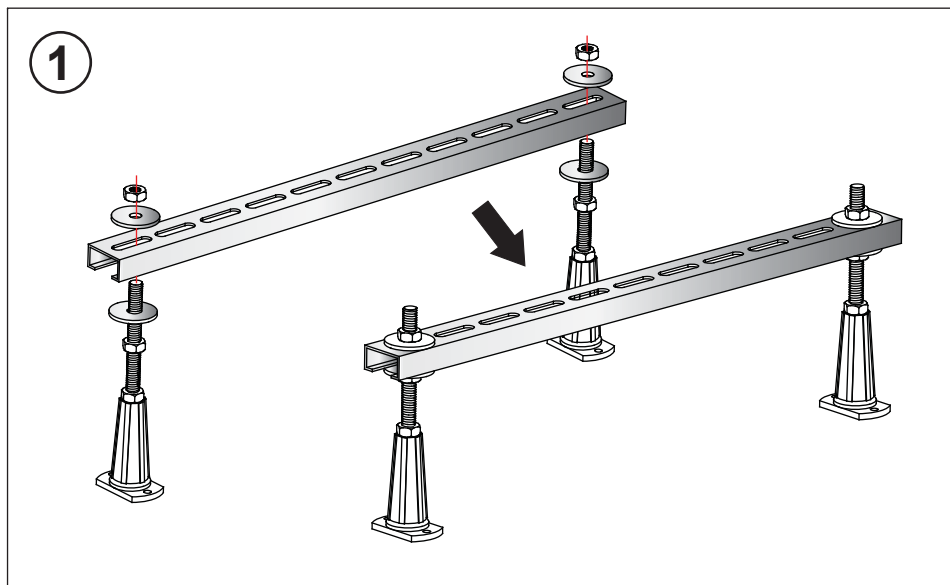


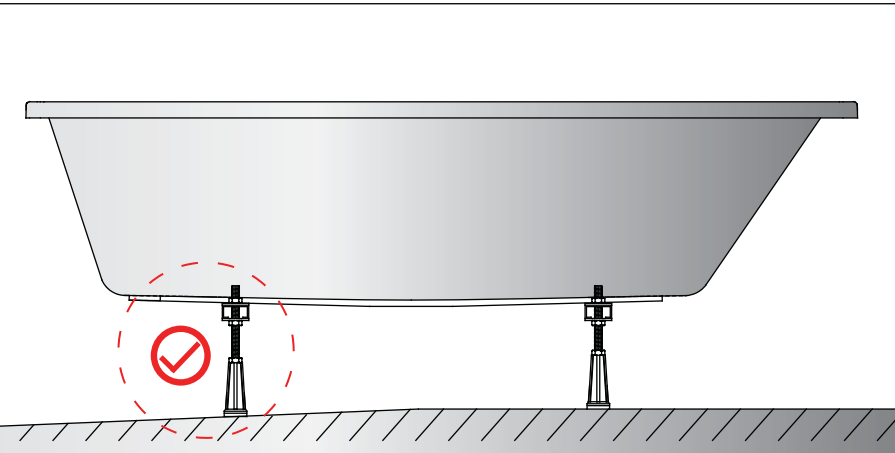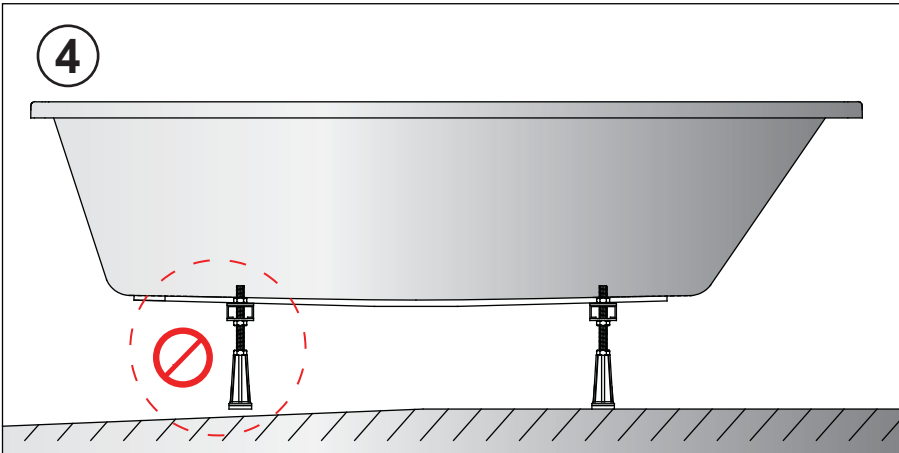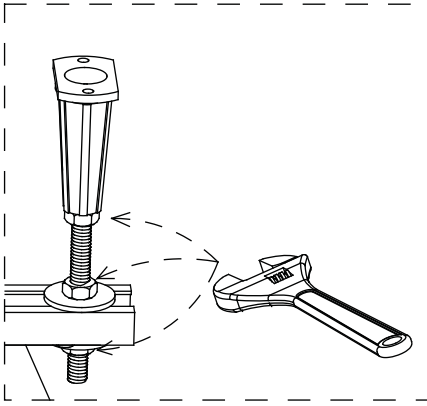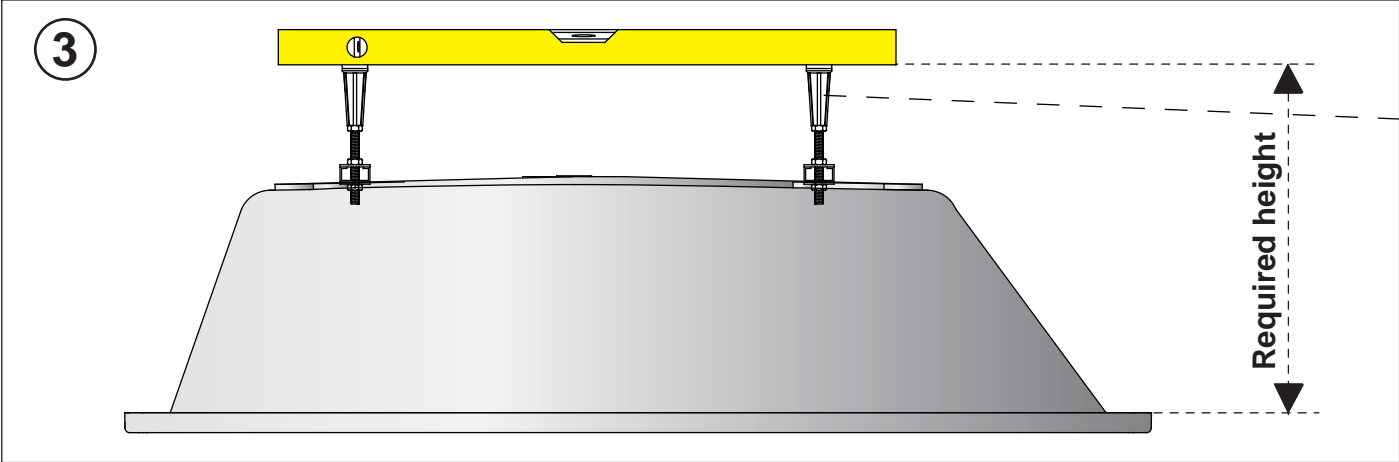


**Enviro, Sustain, Verde, Reuse**

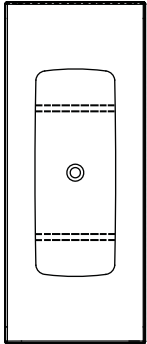


**EcoSquare**

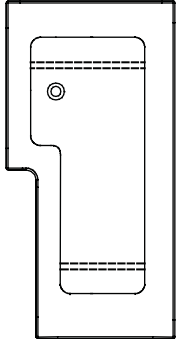

**EcoRound**

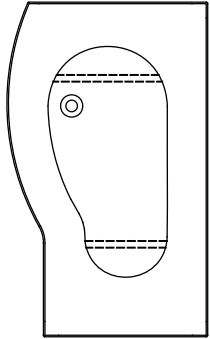

**EcoCurve**

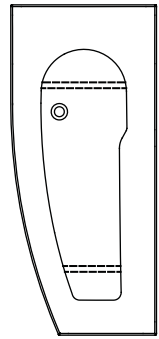

Bottom view of each cleargeen bath showing legset placement position.