


Freestanding Bath Fitting Instructions

- (1) Fit concealed waste and overflow connector to the bath.
- (2) Connect 40mm bath waste trap.
- (3) Connect 40mm flexible waste connector.
- (4) Place bath above desired position on blocks, so that the final waste connection can be made to 40mm waste pipe.
- (5) If you only have access above floor level then drill Ø70mm access hole in outer skin of bath.
- (6) Remove blocks and lower bath into position and adjust the levelling feet for stability.

- (7) Check for any water leaks, then to secure the bath to the floor apply silicone sealant under each levelling foot.

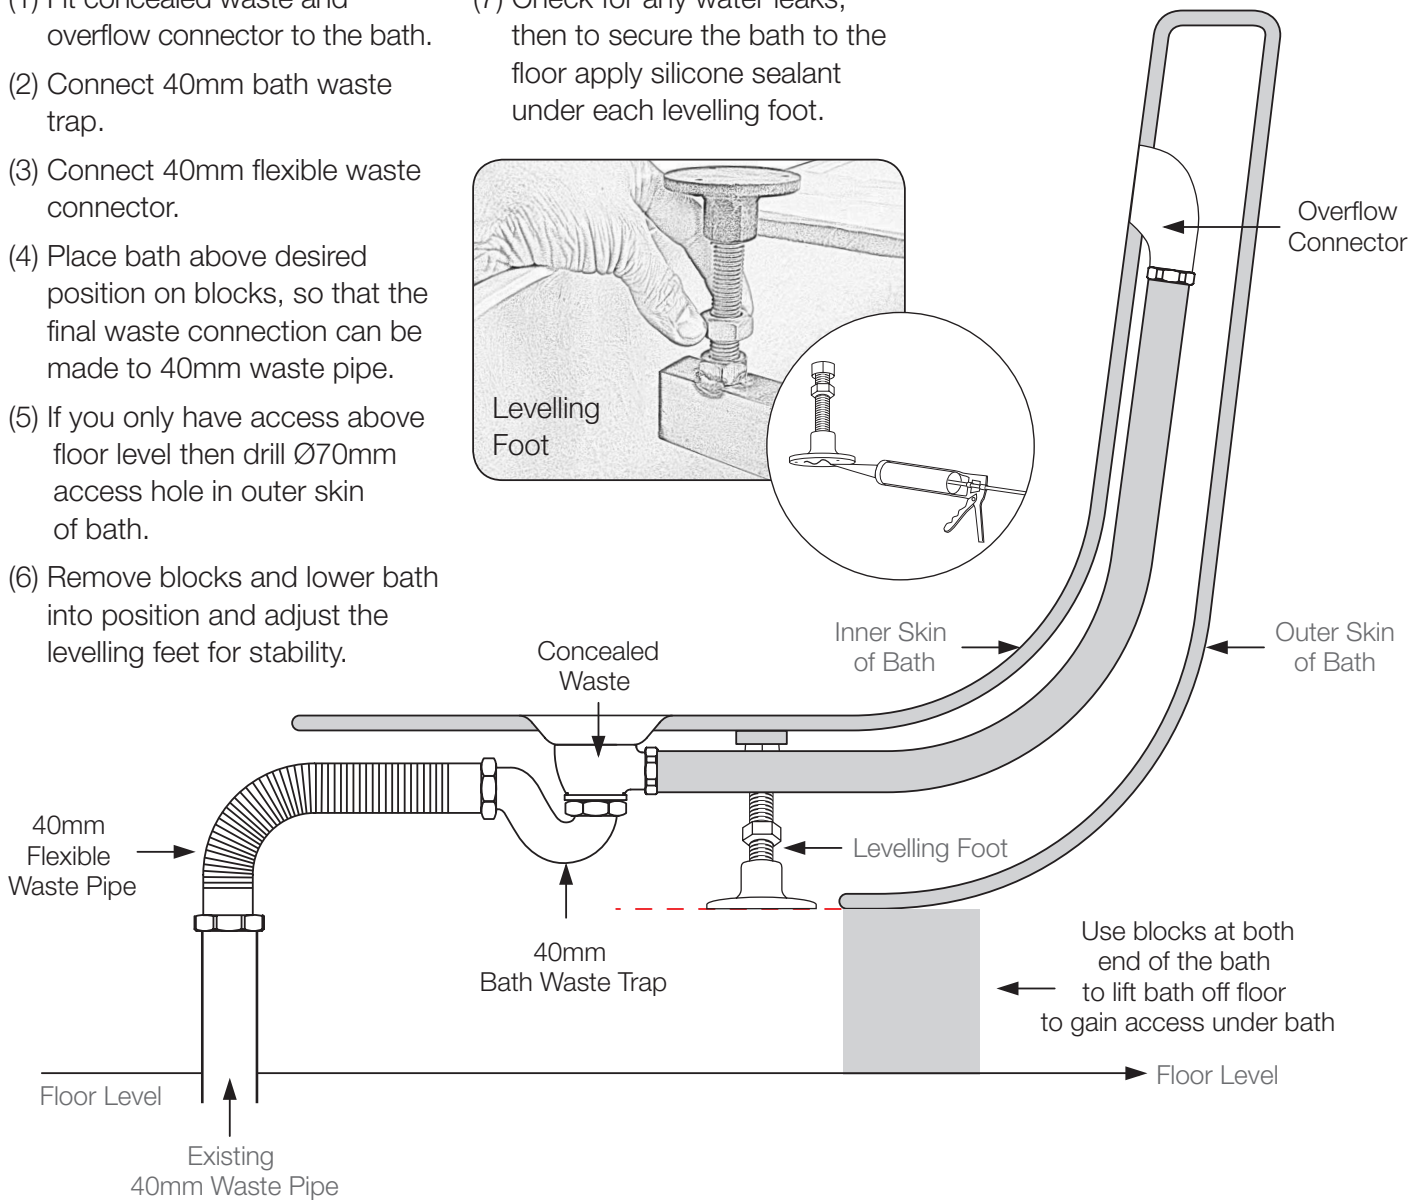

Caring for your bath

- It is recommended each time you use your bath, to cover the base of the bath with cold water before turning on the hot tap.
- For everyday cleaning we recommend using a soft damp cloth or just warm soapy water.
- You should never use abrasive cleaners on your bath, they will scratch the surface of the acrylic, which will affect the appearance of the glossy look.
- If you do scratch your bath, we recommend using an enamel cleaning agent or car polish (T-Cut), this will help to restore your bath back to a lustre finish.
- Replace worn washers on dripping taps to prevent surface marking.
- **Warning** – Solvents such as paint stripper or nail varnish remover will damage the bath.

Important: retain this information for future reference

For further information, please e-mail Customer Services at sales@roycemorgan.co.uk

Please Note: We strongly recommend that you use a suitably qualified installer to comply with your guarantee terms and conditions. We cannot accept responsibility for incorrect installation. Please dispose of all packaging at your local recycling organisation.