## ATTENTION! REMOVE FILM PRIOR TO FITTING


- Before fixing any bath or panel remove ALL protective covering and examine carefully. The polythene film must be removed in full and the bath checked for any visible damage.
- Check the panel fit and match prior to installation

NO CLAIMS FOR THE ABOVE WILL BE ACCEPTED ONCE THE BATH IS FITTED

- 1. Remove all packaging including the polyethylene film which covers the entire bath
- 2. **Check** that colour match is acceptable and that there is no damage on the bath that may have occurred prior to installation
- 3. Fix the two 500mm channels to the base of the bath (see illustration) using the self tapping screws
- 4. Place the All thread bars through the holes in the 500mm channels and fix the 65mm plastic feet using the M12 Nuts (see illustration)
- 5. Secure the adjustable centre support using screws and nuts provided to the centre of the baseboard. Attach the centre foot with nuts provided
- 6. Secure the Wall Brackets to the bath as \*illustrated using screws provided
- 7. With the bath in the upright position set top face level using threaded adjustment of feet and lock-nuts. If a panel is to be fitted set bath height to depth of panel
- 8. Before final fixing of the bath, fit tap and waste fittings using a suitable sealing compound. When complete fit the bath into position and secure the legs to the floor
- 9. Ensure the wall brackets are securely fixed to the wall. Movement may occur if not fitted correctly

## Please note:

- \*It is advised that shower baths and rectangular baths that are **NOT** going wall to wall should be supported on the front rim by the use of a wooden support or similar.
- When relevant the bath should be set to supplied panel height
- The baseboard, if not visible, is encapsulated into the bath (I.e. under the GRP reinforcement)

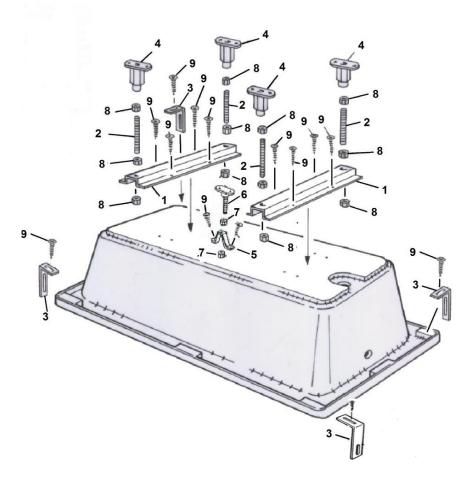

Item No.	Quantity	Description	Checked
1	2	500mm Channels	
2	4	120mm All threads	
3	4	Wall Brackets	
4	4	M12x65mm Plastic Feet	
5	1	Centre Foot Bracket	
6	1	M8 Centre Foot	
7	2	M8 Nuts	
8	12	M12 Nuts	
9	14	16mm Self Tapping Screws	
10	1	Fitting Instruction	YES

Illustrations and specifications are not binding in detail bath model supplied may vary