


# W.C INSTALLATION INSTRUCTIONS


IT IS RECOMMENDED THAT THE INSTALLATION IS CARRIED OUT BY A FULLY QUALIFIED PLUMBER

1

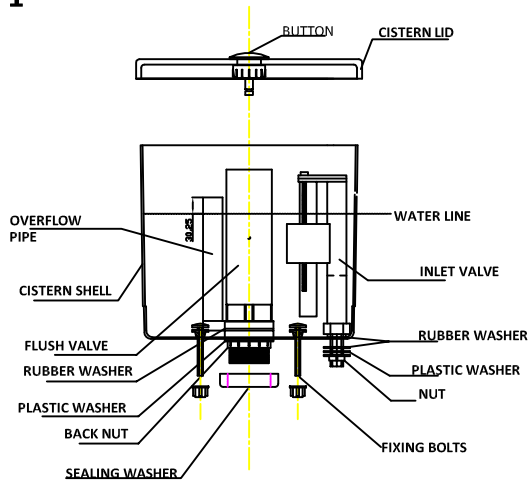


INSTALL THE CISTERN INTERNAL FITTINGS AS PER THE MANUFACTURERS INSTRUCTIONS

2

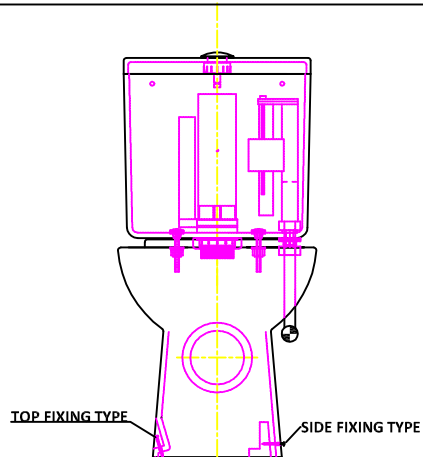

IDENTIFY WHAT TYPE OF FLOOR FIXING YOU NEED BEFORE STARTING THE INSTALLATION. IF NO FIXING KIT HAS BEEN SUPPLIED WITH THE W.C THESE CAN BE OBTAINED FROM SUPPLIERS AND PLUMBERS MERCHANTS SEPARATELY.

3

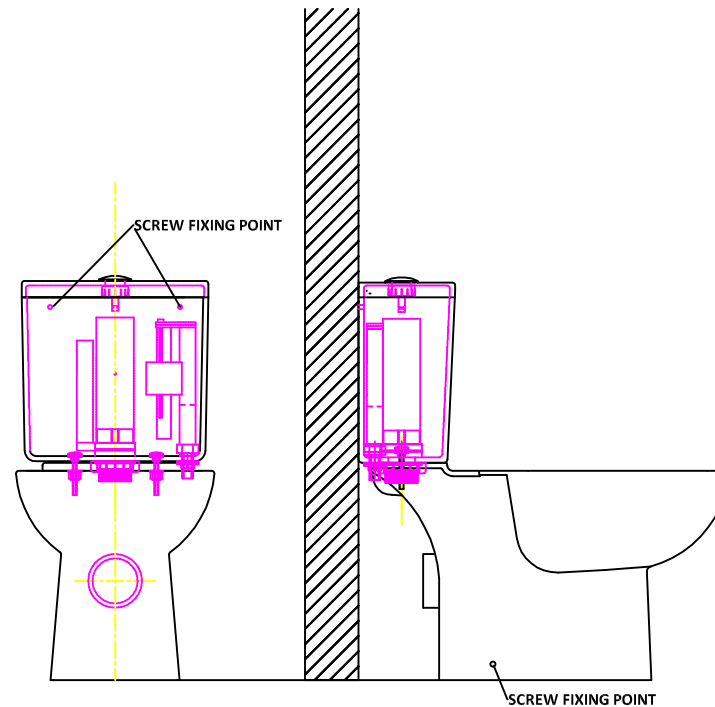


FIT THE CISTERN TO THE PAN AND TIGHTEN DOWN WITH THE FIXING BOLTS ENSURING THE SEALING WASHER IS IN PLACE.

PLACE THE PAN AND CISTERN IN THE DESIRED POSITION AND MARK ALL FIXING POINTS, SOIL OUTLET AND WATER INLET POSITIONS.

REMOVE PAN AND INSTALL NECESSARY SERVICES AND FIXINGS.

PLEASE NOTE THAT THE WATER INLET SHOWN IS FOR RIGHT HAND INSTALLATION, PLEASE CHECK THE PRODUCT BEFORE FIRST FIX.

4

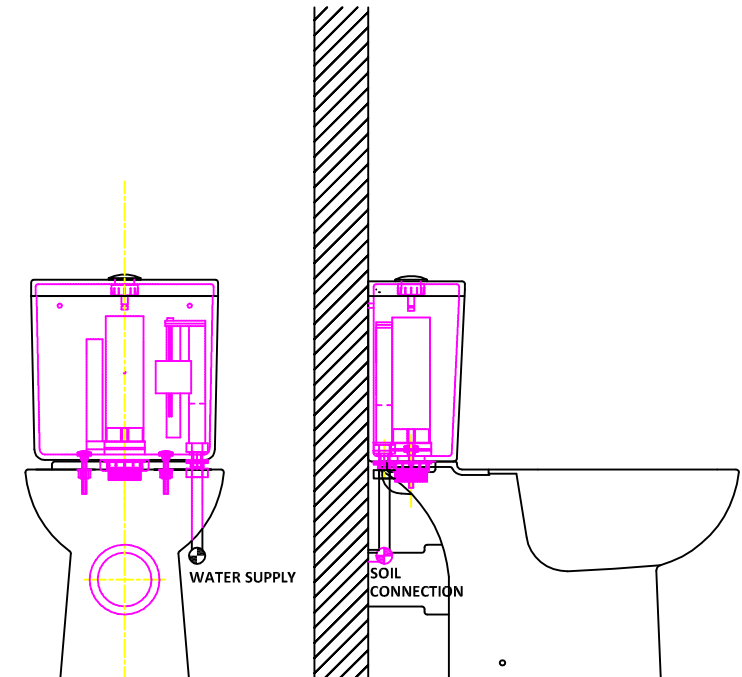

PLACE THE UNIT BACK INTO POSITION, CONNECT WATER INLET AND THE SOIL OUTLET THEN SECURE FIRMLY USING THE FIXING POINTS.

SET THE WATER LEVEL IN THE CISTERN TO THE WATERLINE BY ADJUSTING THE INLET VALVE ACCORDINGLY, FLUSH AND CHECK FOR LEAKS.