


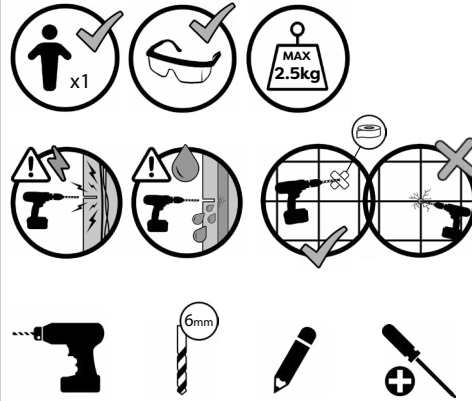

Follow these instructions when drilling new holes.




Safety & Care

1. Always take care when using power tools, especially if there is any water in the working area.
2. When drilling into a tiled surface do not use a hammer drill.
3. Always use a drill bit that is suitable for the surface that is being drilled.
4. The wall plugs supplied are for use on solid walls only. For cavity walls or plasterboard use specialist fixings that are suitable for the type of wall construction.
5. To retain the best quality finish, clean product regularly with a soft damp cloth.
6. Do not use abrasive or chemical cleaners, as these may damage the product.
7. The maximum safe working load is 2.5kg distributed evenly. DO NOT OVERLOAD.


QM265241




- 1 While holding the product in its intended position, use a pencil to mark where the screw holes will be. Ensure the product is level.

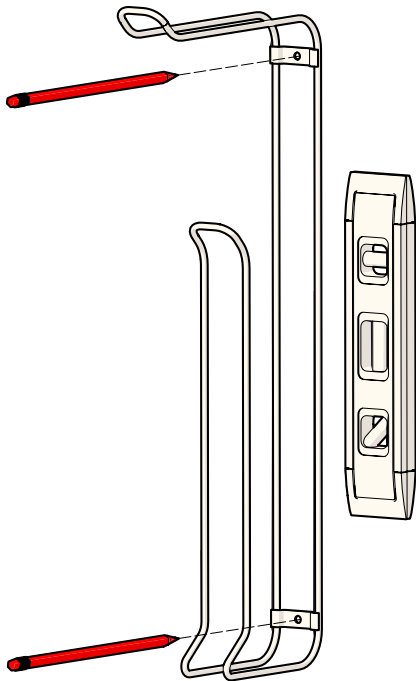

- 2 Using a 6mm drill bit, drill the holes marked and then insert the wall plugs into the holes.

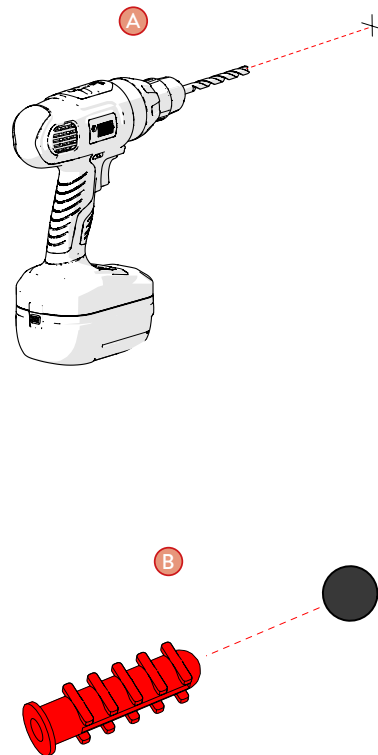

- 3 Firmly screw the the product to the wall.

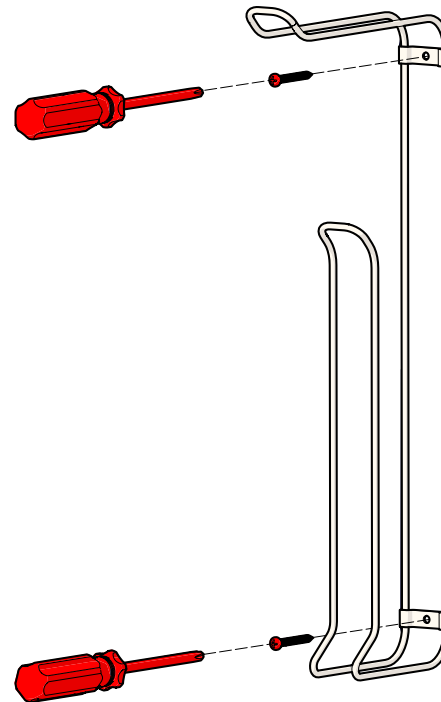

- 4

