

# TRUESTONE<sup>®</sup>

## BESPOKE PROCESS

### Step1)

Use some 2 inch masking tape along the area you wish to measure out. You can then mark the dimensions of your cut clearly using a pencil and ruler. The masking tape will also help a clean cut line. Remember to measure twice and cut once.



### Step2)

Using a heavy duty grinder with a diamond edge disc for ceramics bring the saw to speed and cut to the inside edge of your marked line.




**FOR TRAY FITTING AND BEST PRACTICE GUIDE PLEASE SEE YOUR TRUESTONE FITTING INSTRUCTIONS PROVIDED IN THE GRID PACK.**

## **Best practice**


If you are shortening the tray it is best to cut the material from the opposite side to the waste as to not affect the gradient (Fig.1)

For the best results the side you are cutting should be the side that will be fitted against the wall and tiled onto. This will hide any exposed stone resin (Fig .2)

In case of surface damage you can do some small repairs using our TRUESTONE fixing kit. For details on the fixing kit or to order please contact our customer services department on 08081011429. Simply mix the putty and hardener at a ratio of 50:1 and apply sparingly with a pallet knife. Leave the putty to harden for 3 hours before fitting.

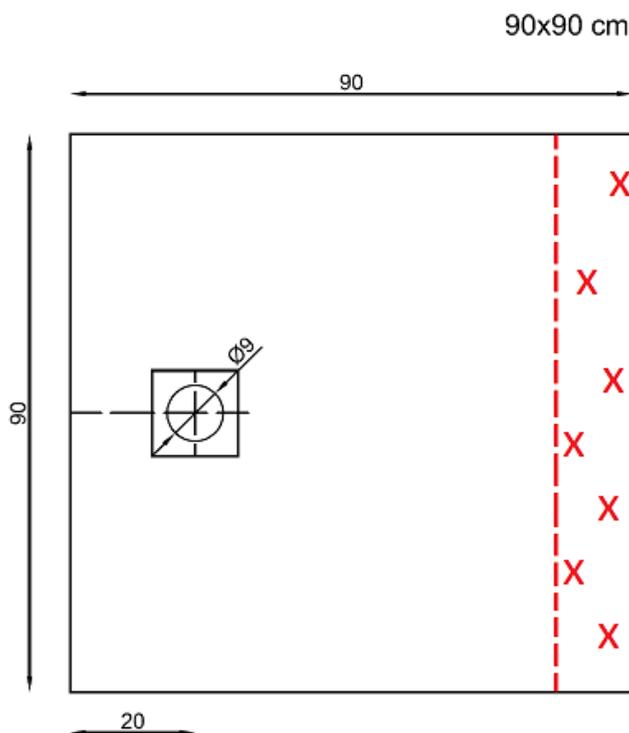

**Fig.1)**

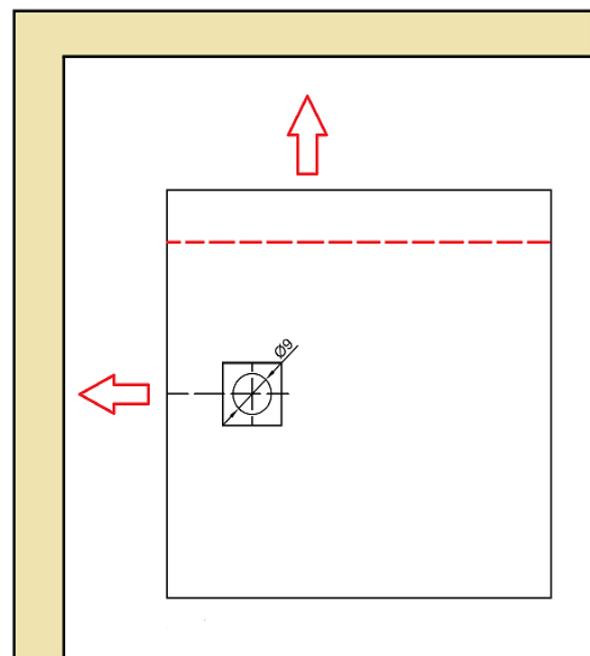

**fig.2)**