


HOUSE


FITTING INSTRUCTIONS



#320	#341	#355
#3231	#3411	#356
#326	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370

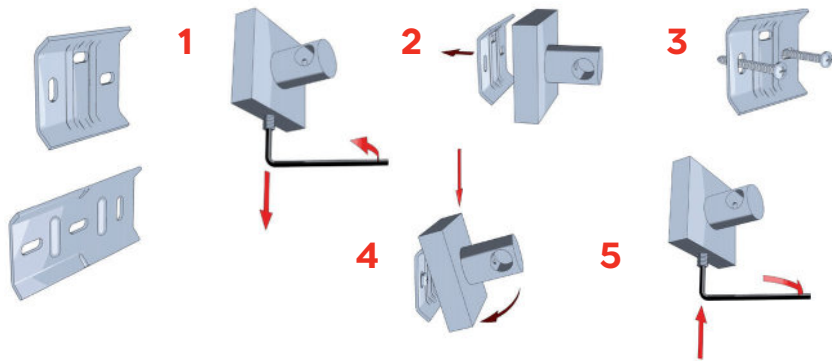


#325

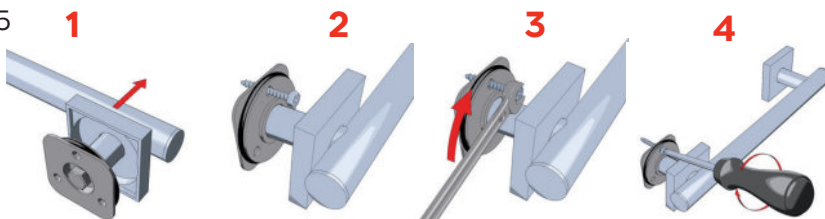

#3455




#3455




Mounting plate for glue is bought separately
Monteringsbeslag för lim köpes separat
Monteringsbeslag til lim købes separat
Monteringsbeslag for lim kjøbes separat
Limattava asennurbanslevy ostetaan erikseen
Montageplatten um kleben separat kaufen

Not to glue: grab bars (#225, #325), towel rails
(#226, #326, #328), hooks (#245, #259, OK327)
and AIR

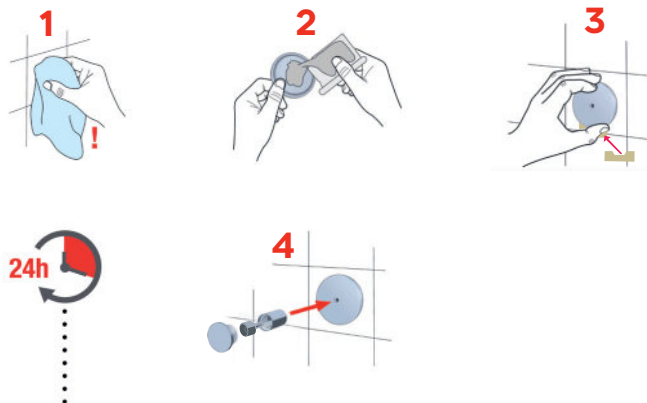

#320	#3411	#356
#3231	#3414	#358
#327	#342	#359
#332	#343	#361
#333	#344	#369
#3364	#3464	#370
#341	#355	

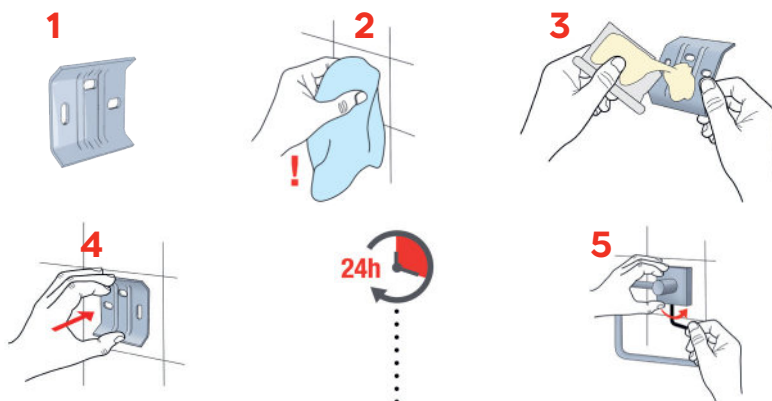

Not recommended for mounting on wet room wallpaper.
Rekommenderas ej för montering på våtrumstapet.
Montering på våtrumstapet anbefales ikke.
Montering på våtrumstapet anbefales ikke.
Ei suositella asennettavaksi märkätilojen tapetille.
Nicht für die Montage auf Tapeten in Feuchträumen geeignet.



www.smedbo.net

 **SMEDBO**