



INSTALLATION MANUAL
LOW HEIGHT WC FRAME CISTERN

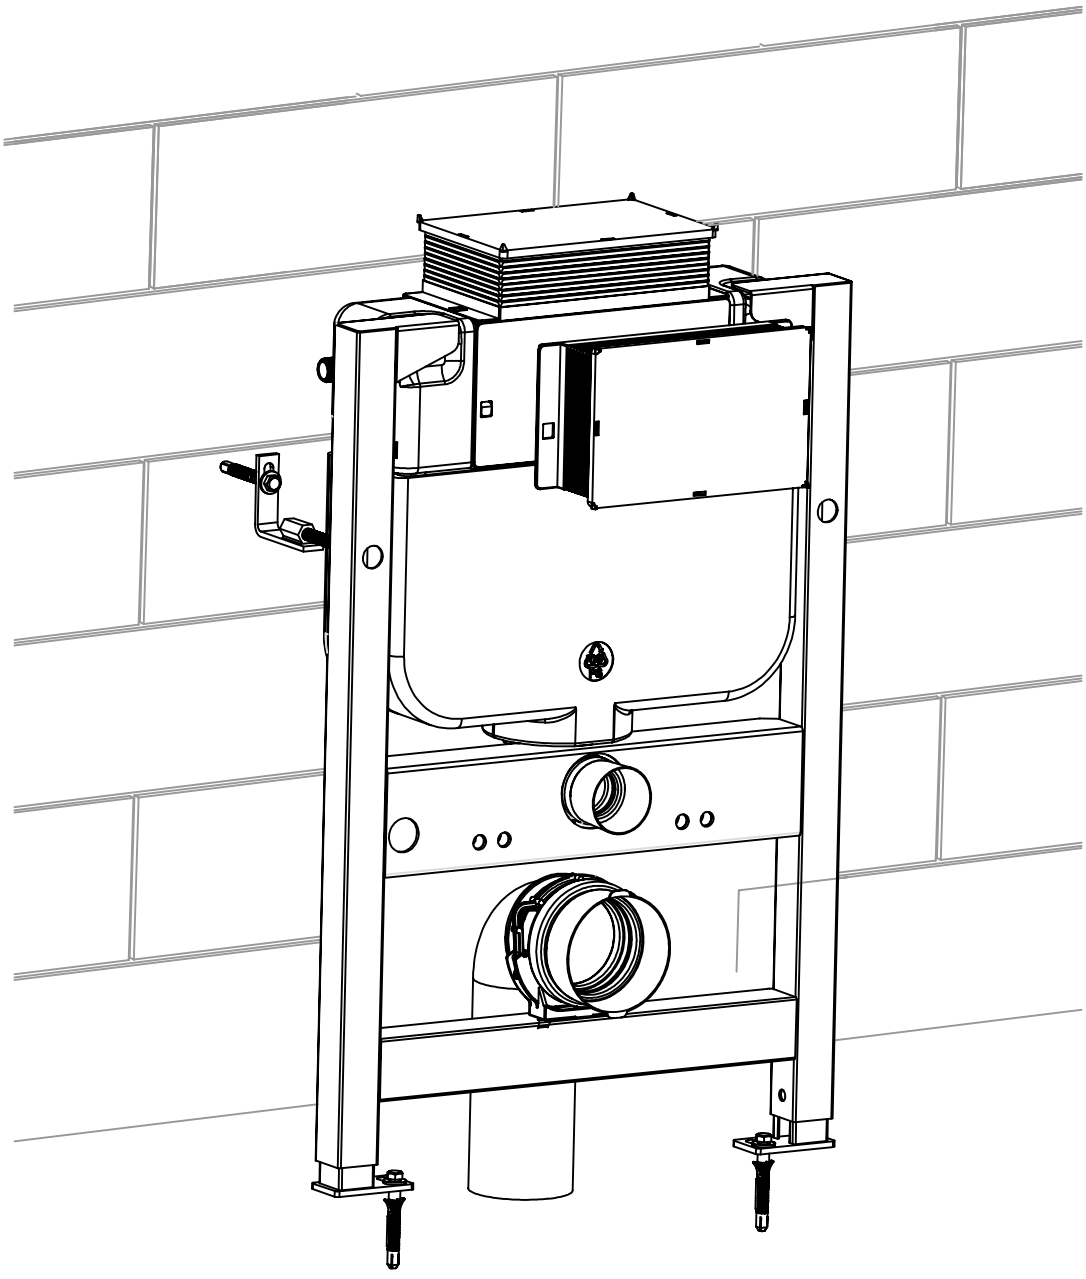

Parts Supplied

Ref	Description	illustration	Qty.
A	Wall Plugs		4
B	Self-tapping Screw		4
C	M8 Washer		4
D	L-shaped Fixing Frame		2
E	M10 Nut		2
F	M10 Screw		2
G	M12 Screw		2
H	M12 Gasket		2
I	M12 Nut		2
J	Small Anti-Plaster Plug		1
K	Flush Straight Pipe		1
L	Large Anti-Plaster Plug		1
M	Waste Pipe Straight		1
N	Waste Pipe Elbow		1
O	Waste Pipe Clip		1
P	Waste Pipe Socket		1
Q	Tunnel		1
R	Blanking Plate		1

Application scope of the product

•Dual Flush
•Operating water pressure： 0.2Bar-10bar

Tools Required (not supplied)

•10 mm Tile Bit
•10 mm Masonry Bit Drill
•13 mm spanner
•19 mm spanner
•Spirit Level
•Tape Measure

Before You Start


• Check the pack and make sure you have all the parts listed above. If not, contact your vendor who will be able to help you.
• When you are ready to start, make sure that you have the right tools to hand, plenty of space and a clean dry area for assembly.


IMPORTATION CARE &SAFETY

• This product is only suitable for installation to solid stone / brick reinforced stud walls. Wall plugs supplied are only suitable for solidstone / brick walls.
• TakeCare using power tools- the use of residual current device(RCD) is recommended. care should be taken when drilling walls toavoid any sunken wires or pipes.
• This product can be dangerous if installed incorrectly




This product will safely support a static load of up to 400kg

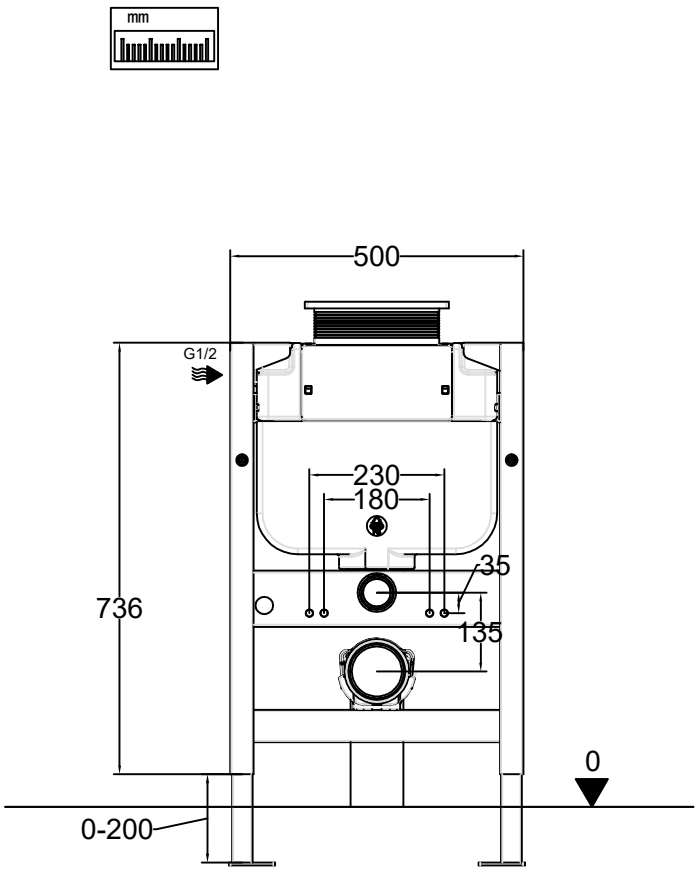

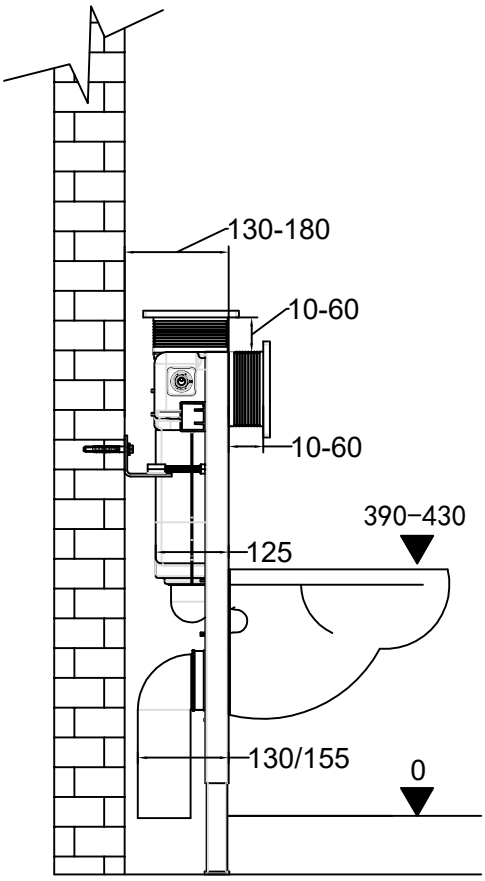



Measurements are for guidance only, Height etc. will be determined by how level the floor/wall are.


1、Test fit the frame to the floor and wall. Adjusting the height so the 1m marks is set to the 1m.
2、Mark the holes on the floor wall for the fixings






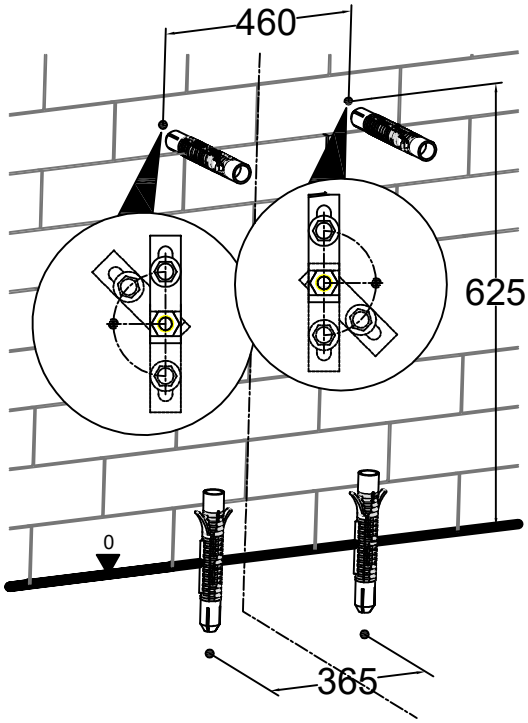

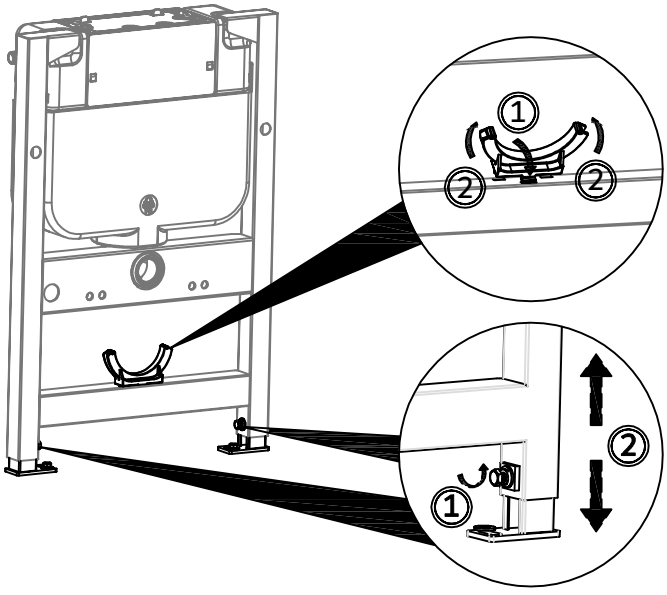


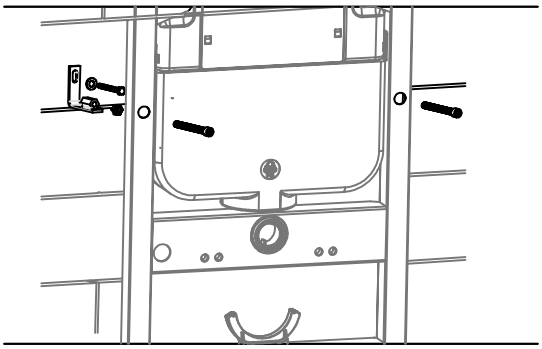


1

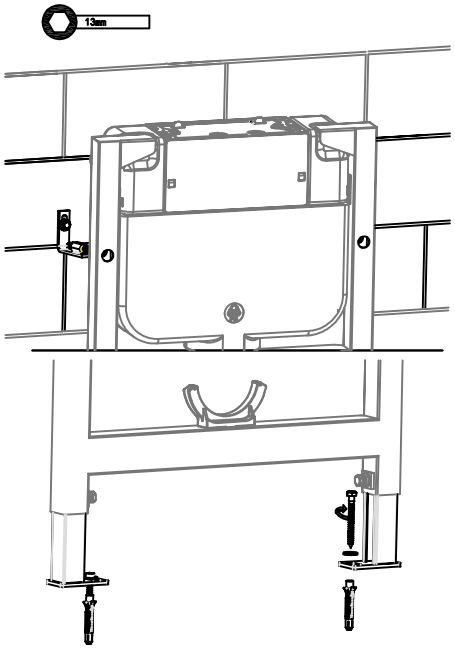


2

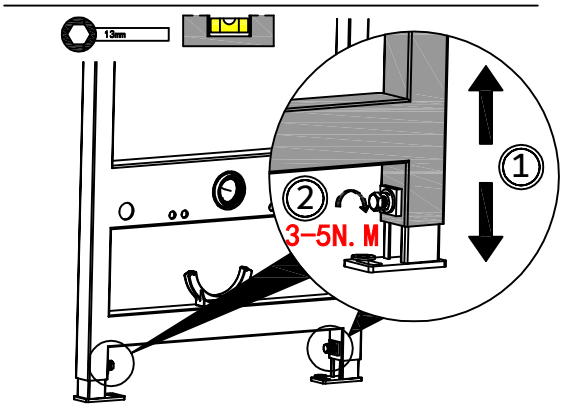


3

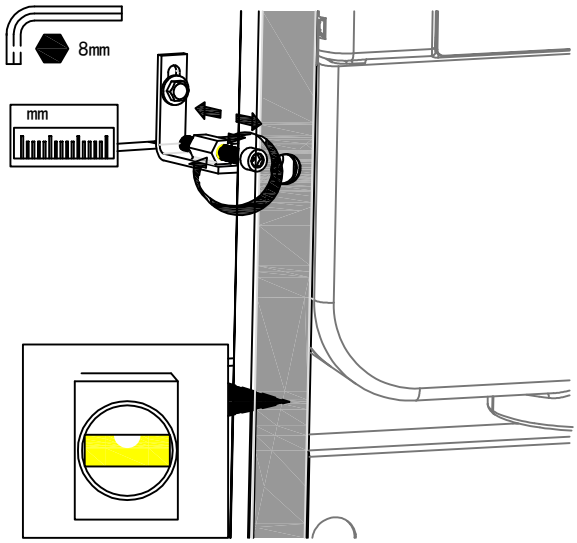


4

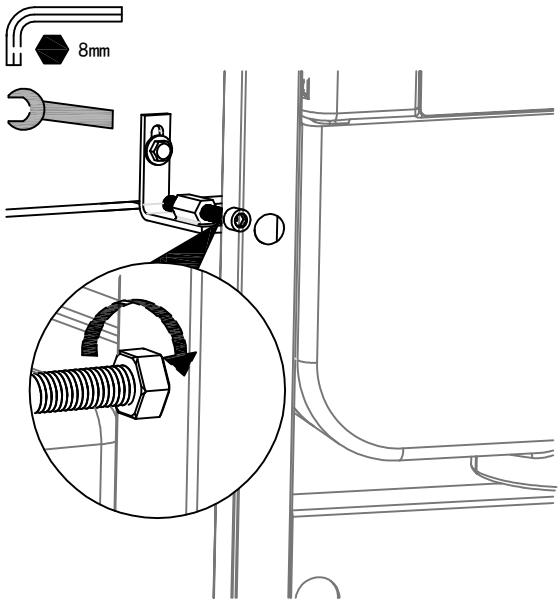


5

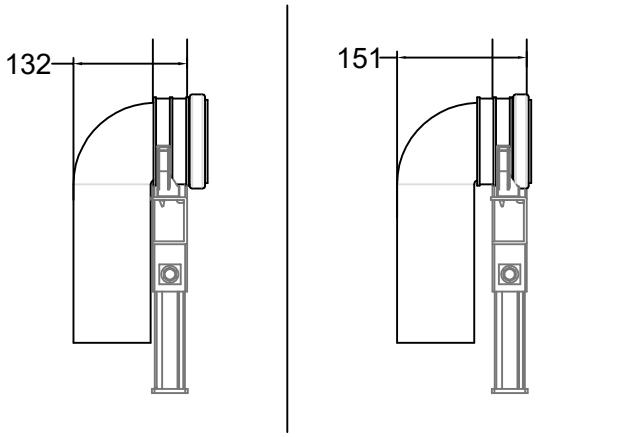


6

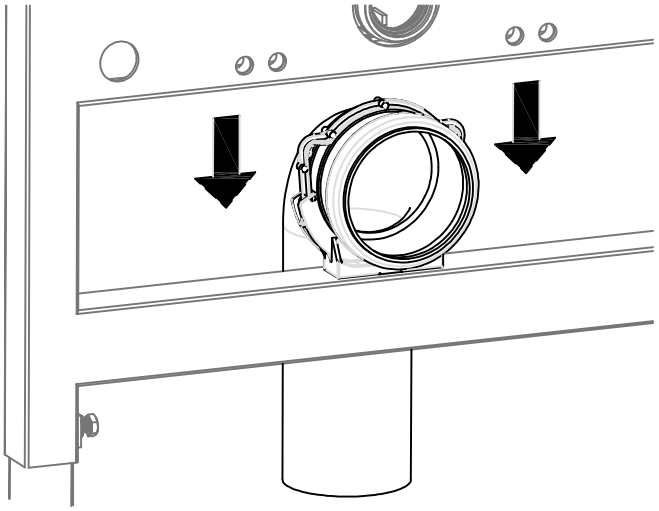

7 Bolts set to 180 0r 230 depending on your pan.

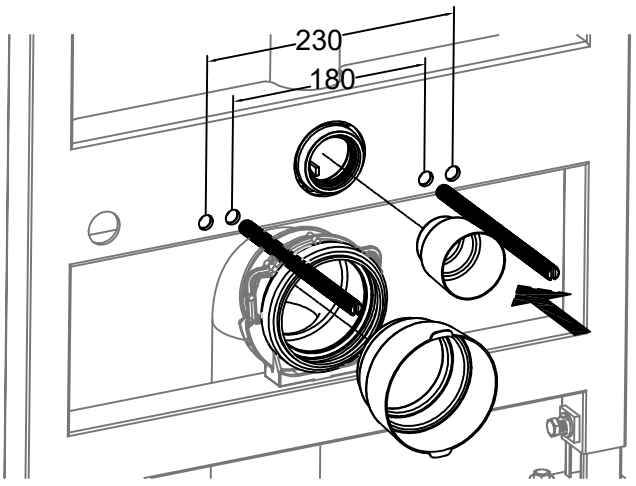


A

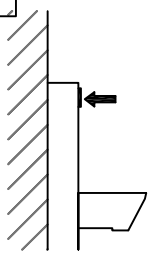


FRONT
FLUSH


1

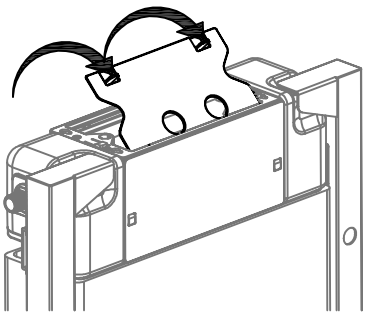


2

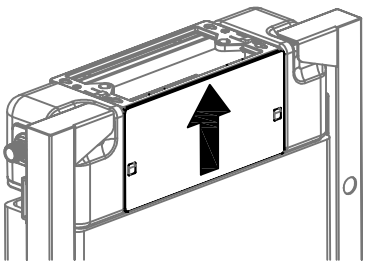


3

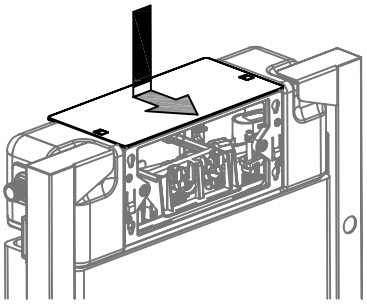


4

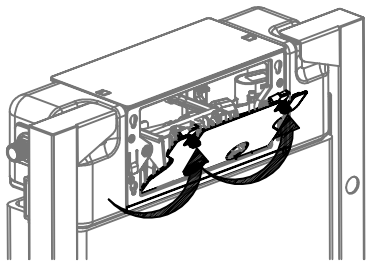


5

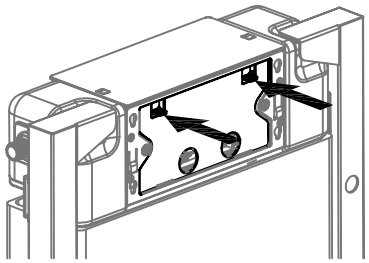


6

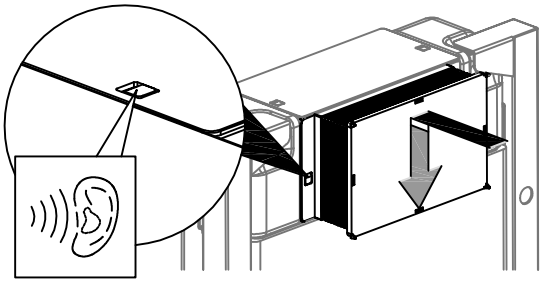

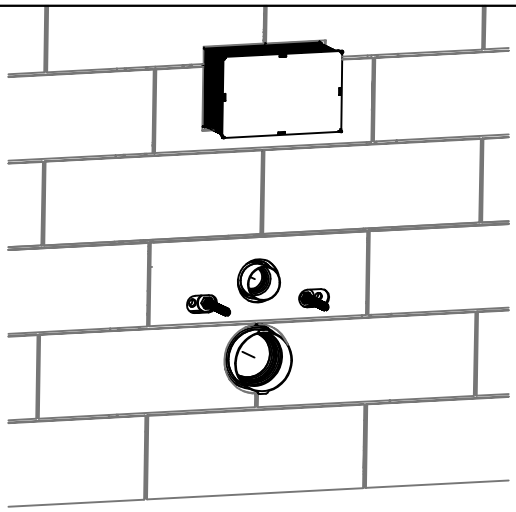


B

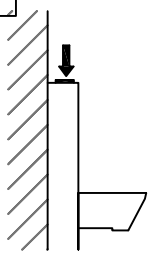



TOP
FLUSH

1

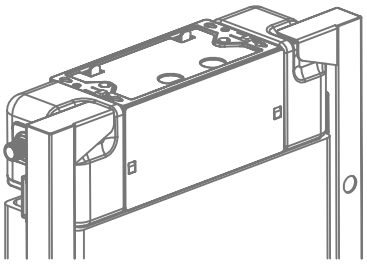


2

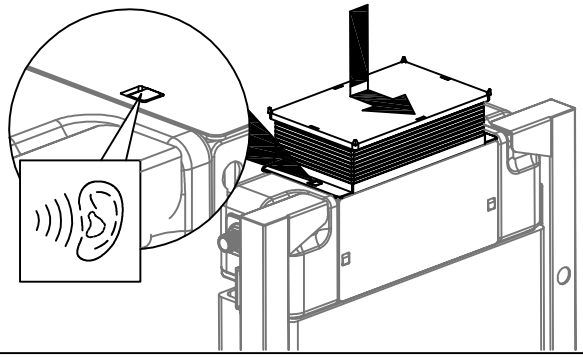


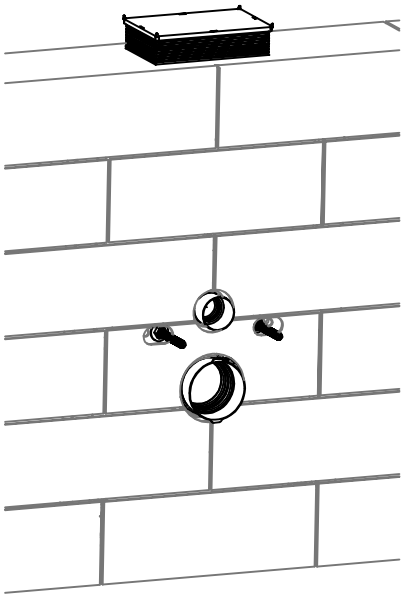


1

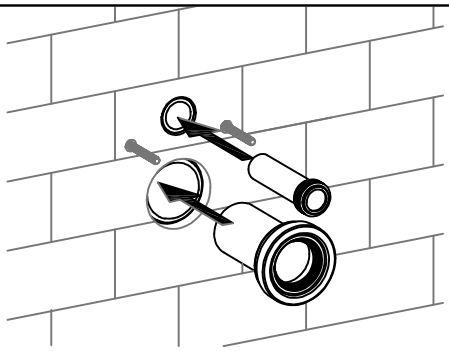


2

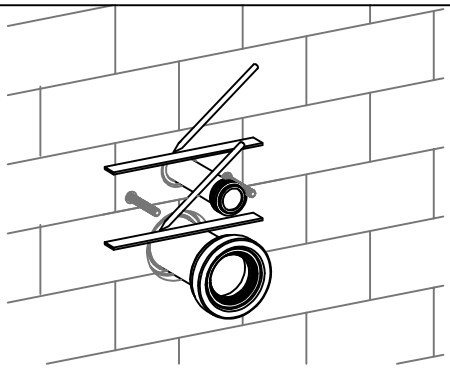


3

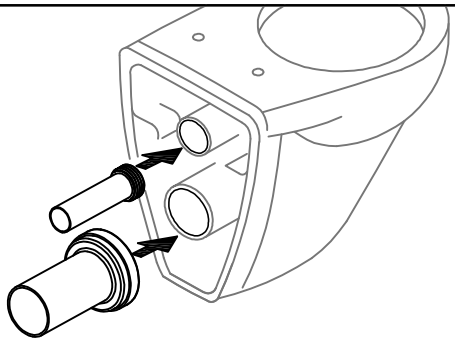


4

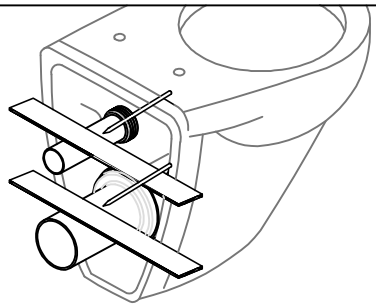


5

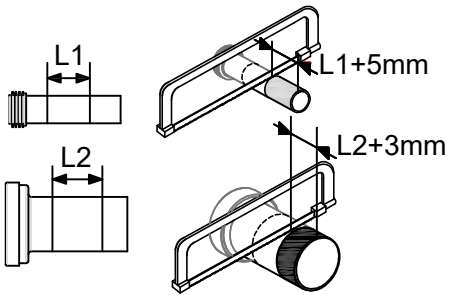


6

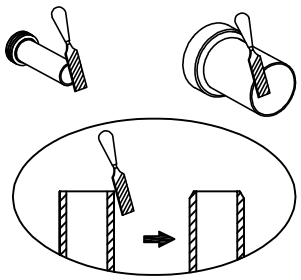


7

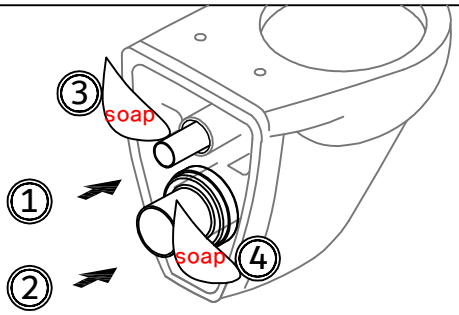


8

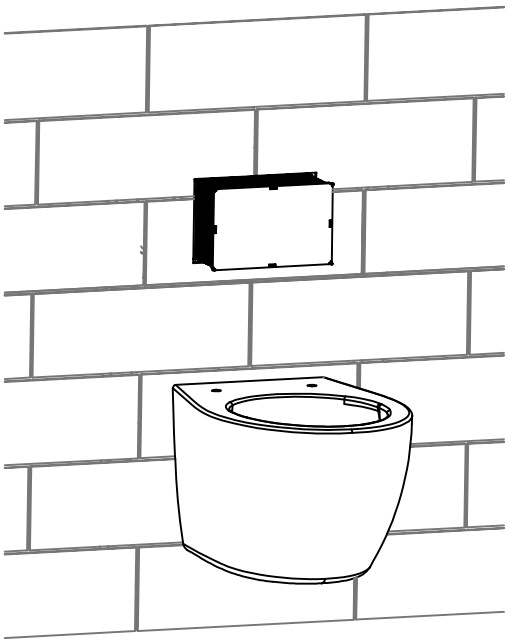


9

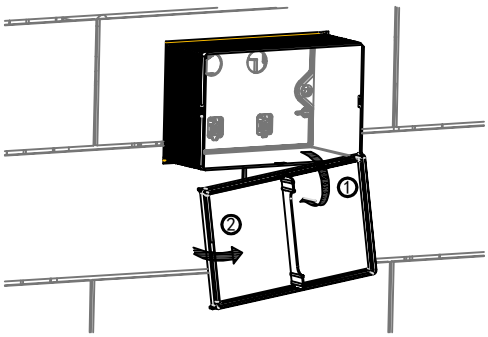


10

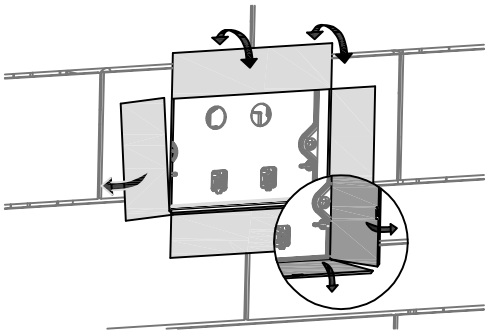


11

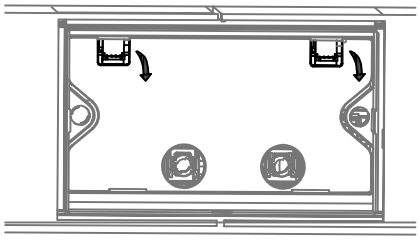


12

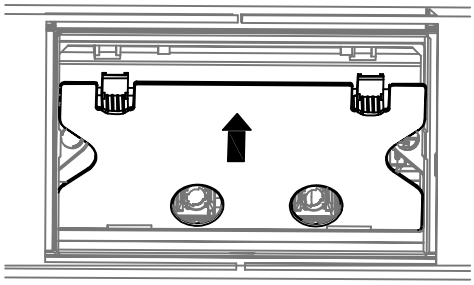


13

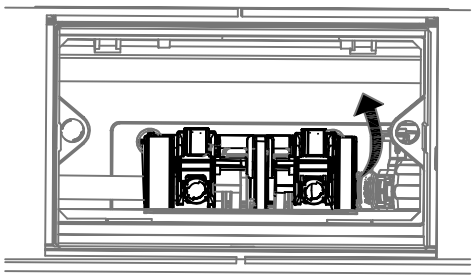


14

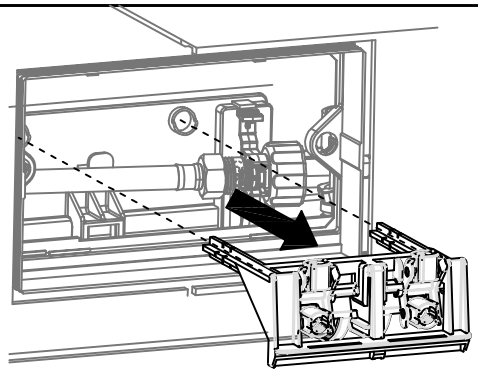


15

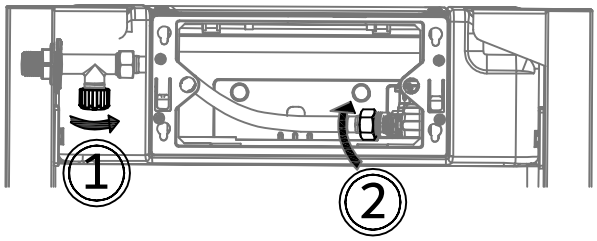


16

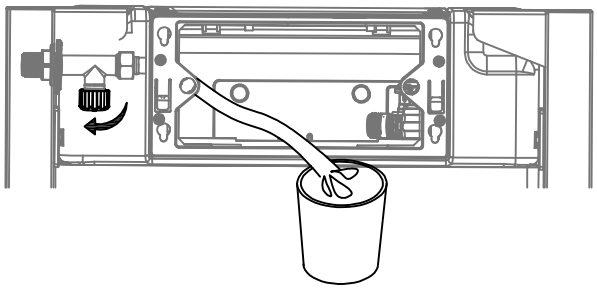


17

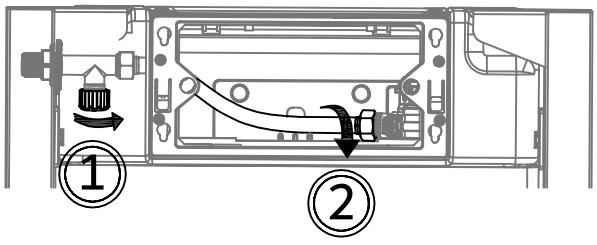


18

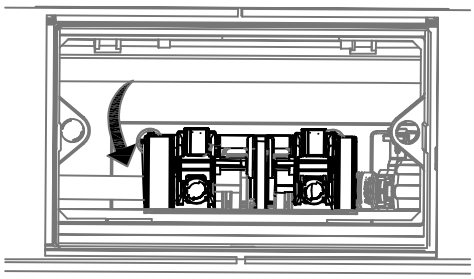

19

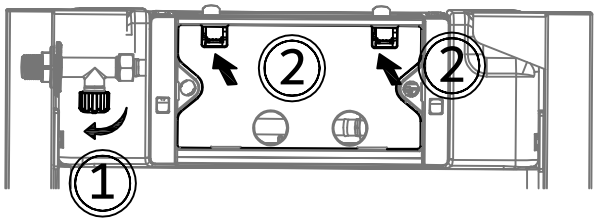


20

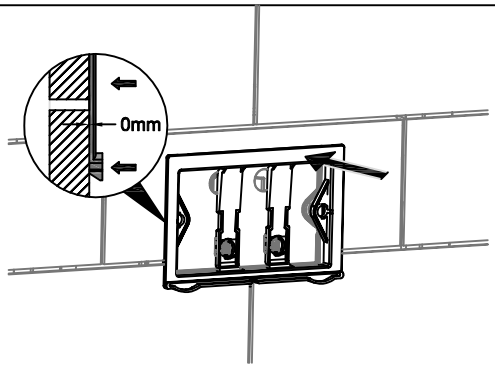


21


①

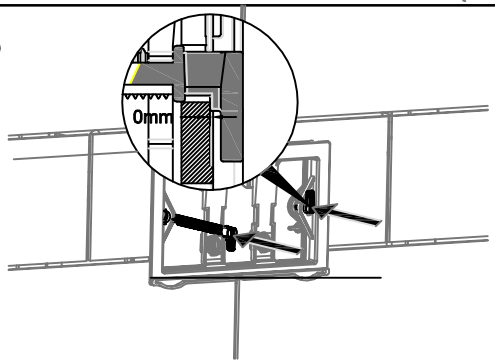

②

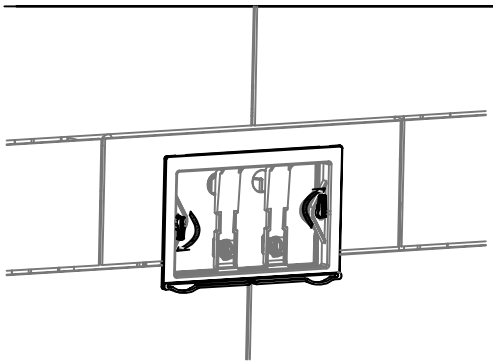


22

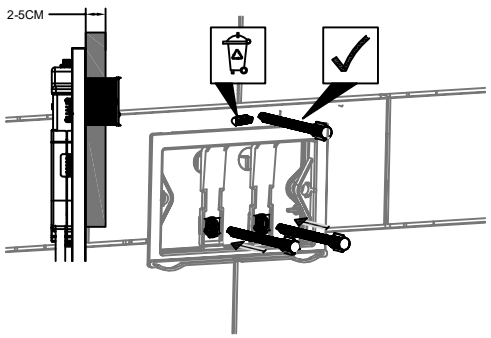


23


①

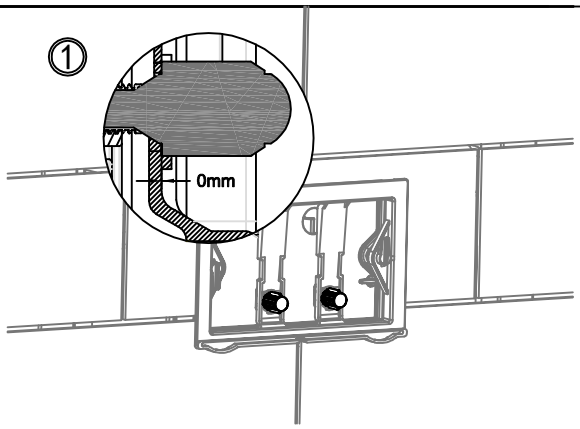


②

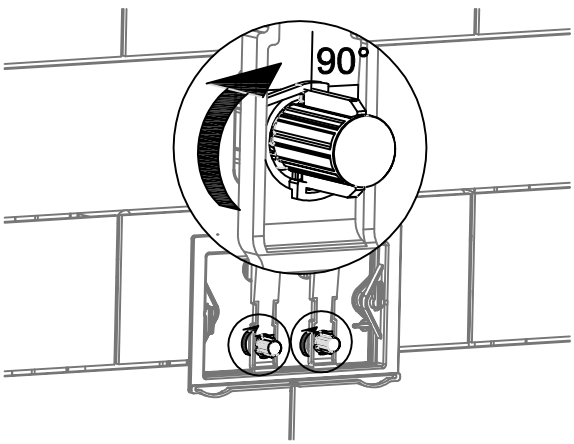


24

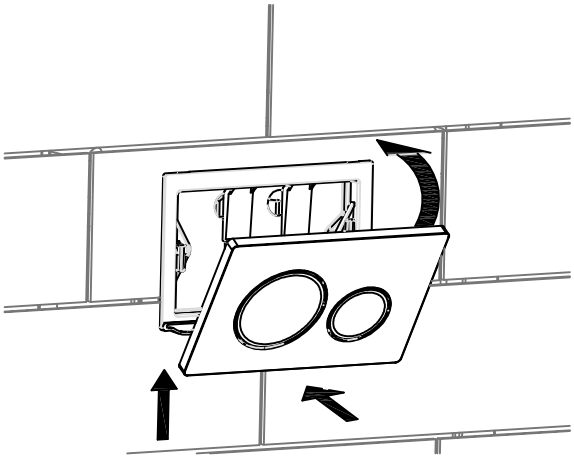



25

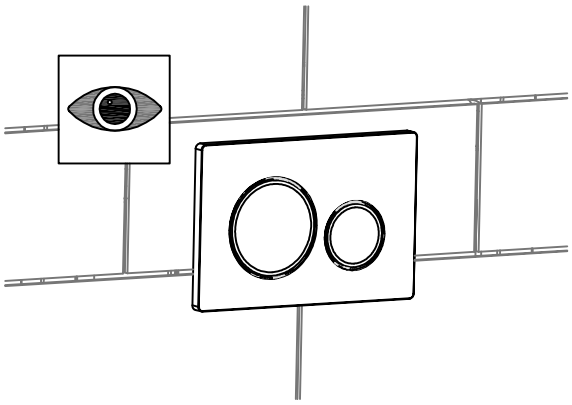


26

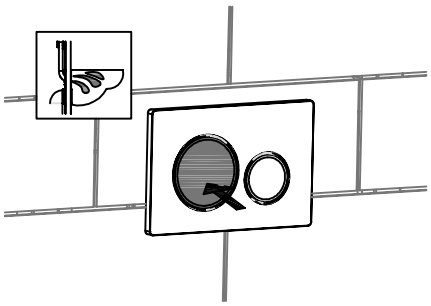


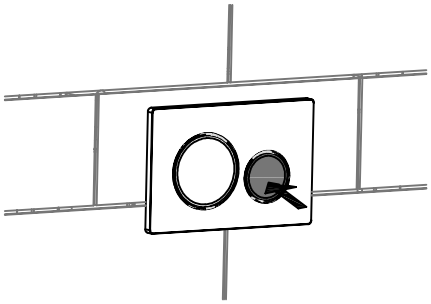



FRONT
FLUSH

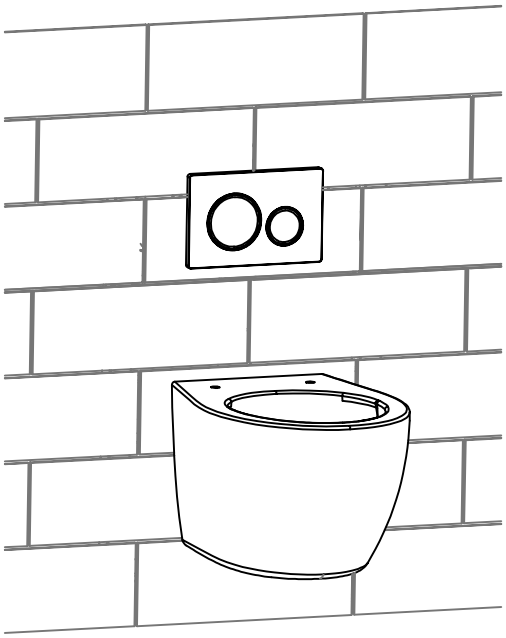



TOP
FLUSH

