

WuduBasin Commercial Installation Guide UK

Contents included with the WuduBasin

- 1 x Dual-Level Porcelain Basin
- 2 x McAlpine Waste Traps
- Carton incl. 1 x Footbath Spout Control, 1 x Footbath Spout, 3 Flexi-pipes
- Carton incl. Wall-fixing Brackets
- 1 x Basin Tap with Fixings
- 1 x Generic Basin Drain with Hoses
- 1 x Generic Footbath Drain with Hoses

1. Carefully remove the contents from its packaging.
2. Locate the wall-fixing brackets and the area behind the basin where the wall fixing sockets are located.
3. Drill and fix supplied fixings into the wall between 790mm – 815mm off the floor and 350mm apart. This height will allow the stool to sit in the correct location relative to the footbath spout once the basin is mounted.
4. Install taps and water supply according to your preference - Refer to diagram 1.1.
5. Install McAlpine waste/traps in the WuduBasin and connect to mains drainage system. Refer to diagram 1.2
6. Carefully lift the WuduBasin, and mount it onto the fixed brackets
7. It is recommended that you do not seal the basin to the wall with silicone, as this will make it difficult to remove the basin from the wall.
8. Once installed, polish with a non-abrasive cloth.

Specialist Washing Company Limited, PO Box 541, Egham, Surrey, TW20 0WN, UK
Trading as WuduMate®


Tel: +44 (0) 1784 748080
info@wudumate.com | www.wudumate.com

Registered in England No 6239360
Registered Office: Suite 3, Dukes House, 4-6 High Street, Windsor, Berkshire SL4 1LD, UK

WuduBasin Commercial Installation Guide UK

Diagram1.1:

Pre-mixed water to basin, footbath manually controlled

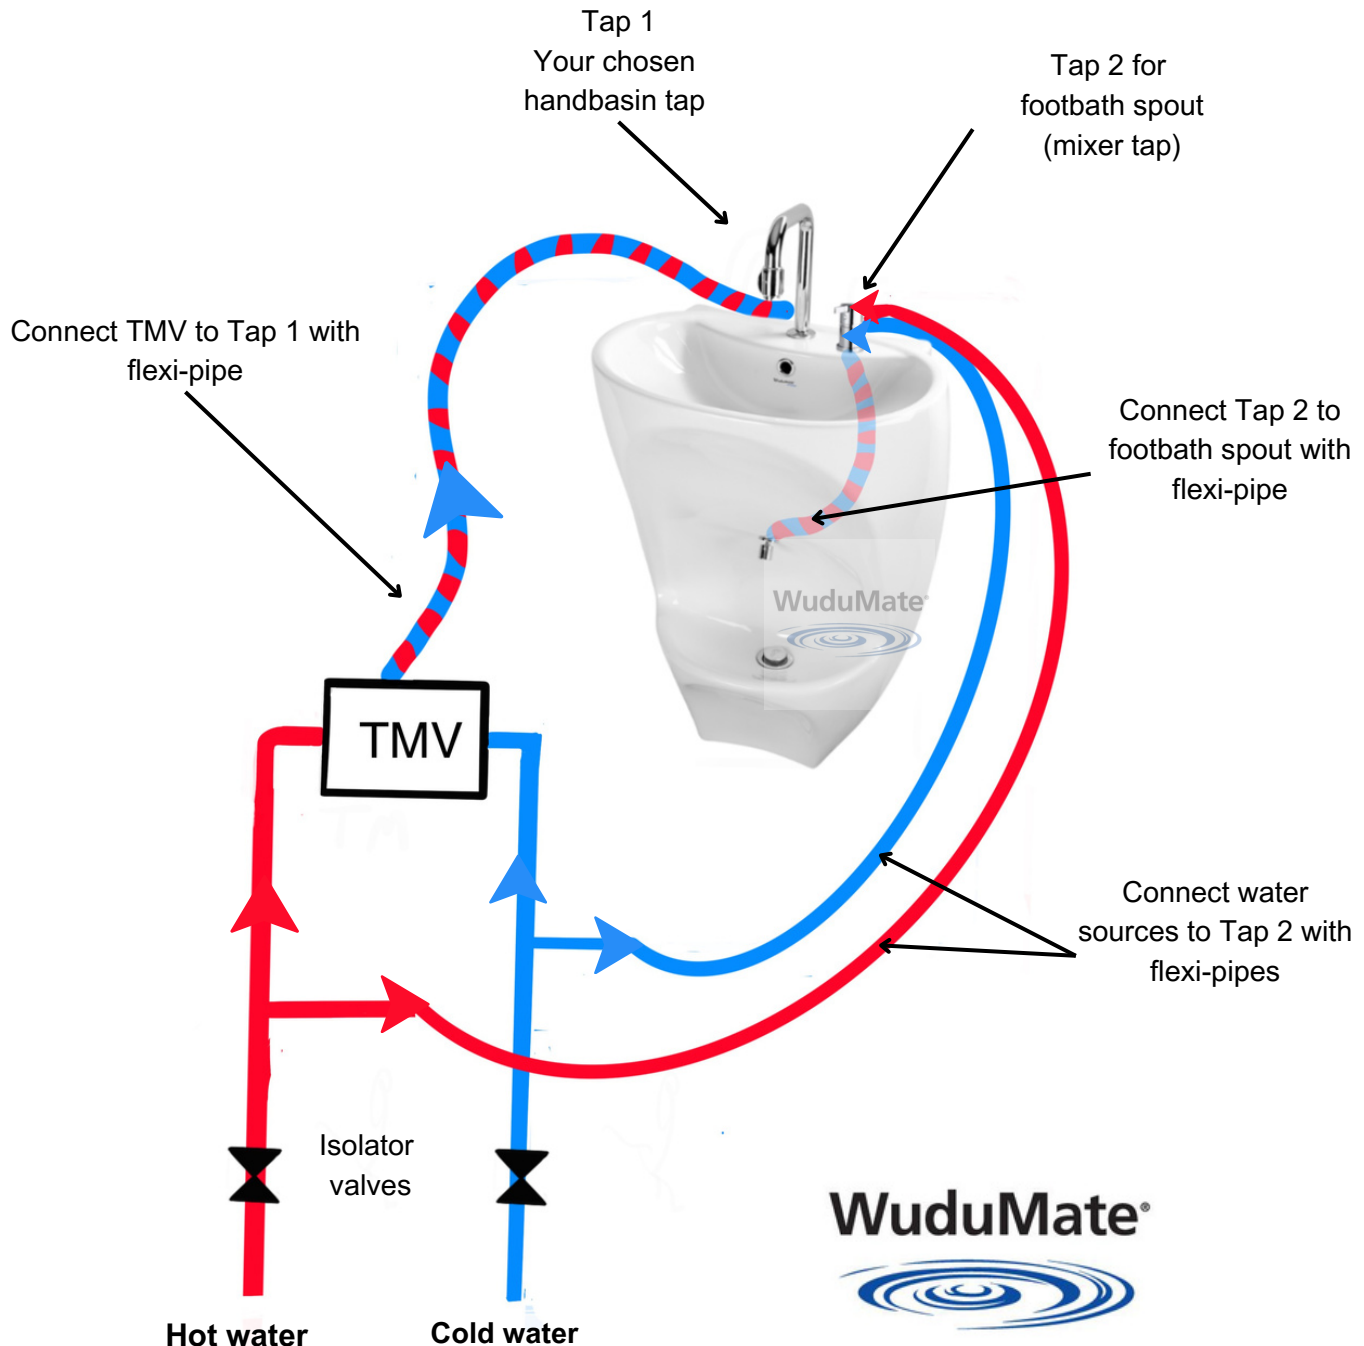

Specialist Washing Company Limited, PO Box 541, Egham, Surrey, TW20 0WN, UK
Trading as WuduMate®

Tel: +44 (0) 1784 748080
info@wudumate.com | www.wudumate.com

Registered in England No 6239360
Registered Office: Suite 3, Dukes House, 4-6 High Street, Windsor, Berkshire SL4 1LD, UK

WuduBasin Commercial Installation Guide UK

Diagram 1.2:
Rear of unit showing McAlpine Wastes

