



Please read carefully before attempting to fit the seat. If you are not the end user, please make sure the aftercare instructions are made available for the end user to read.

TOP FIX INSTALLATION

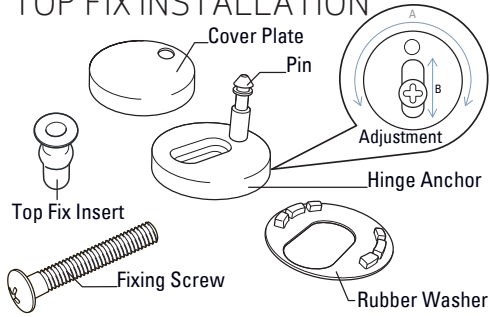


Maximum adjustment of the pin position is achieved by rotating the hinge anchor around the screw (adjustment A in the parts diagram above). Further fine adjustment of the pin position can be achieved by sliding the screw in the adjustment plate (adjustment B).

1. Fixing the hinge anchor

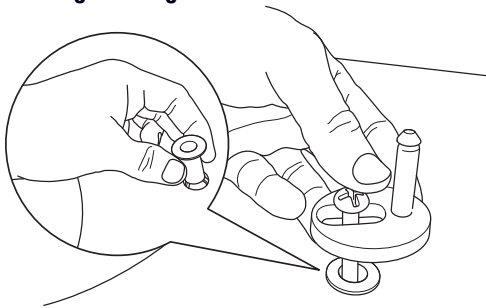


Place the Top Fix Inserts into the fixing holes in the toilet pan. Insert the screws within the Hinge Anchors as shown and begin to tighten the screws until they are loosely secured, to allow for adjustment of the seat on the pan.

2. Fitting the seat

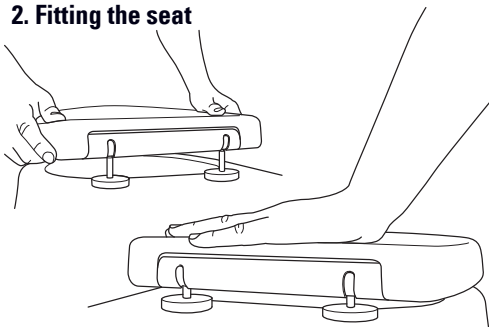


Align and insert the pins into the seat hinge sockets and firmly press down until you hear them 'click' into position. Adjust the hinge anchors to make sure the seat lines up with the edges of the toilet pan. When you are satisfied the seat is in the correct position, remove the seat from the hinge anchors (see step 3) and fully tighten the screw in the Top Fix Insert (shown in step 1). Place the Cover Plates over the Hinge Anchors. Replace the seat and click into position.

3. Quick release mechanism

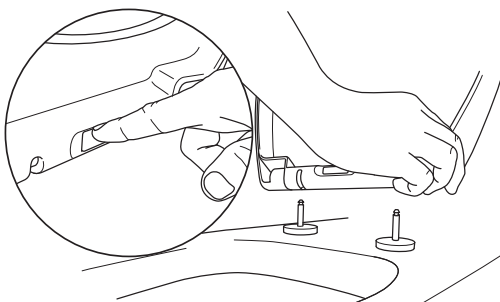


This toilet seat is designed for quick and easy removal when cleaning the toilet pan. To activate the quick release lift up the lid and seat ring, then press the button in the centre of the hinges and lift. To replace the seat align the sockets with the pins and firmly press into position.

BOTTOM FIX INSTALLATION

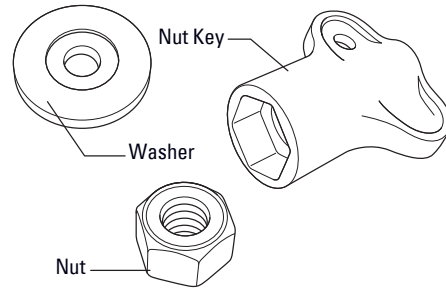

To be used with Fixing Screw, Hinge Anchor, Rubber Washer & Cover Plate if the top fix kit is unsuitable for installation.

Bottom fix fixing diagram

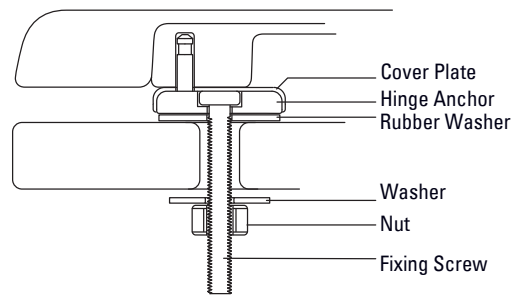

Maximum adjustment of the pin position is achieved by rotating the hinge anchor around the screw (adjustment A in the parts diagram above). Further fine adjustment of the pin position can be achieved by sliding the screw in the adjustment plate (adjustment B).

AFTERCARE INSTRUCTIONS



Clean surfaces with a soft damp cloth and mild soap solution



Do not scrub or scour



Do not use abrasive cleaning agents. When using abrasive, corrosive or chlorine based cleaners for the toilet bowl, ensure these do not come into contact with the seat. Keep the seat and cover in an upright position until all cleaner is flushed away.



Do not stand on the lid or ring of your toilet seat

Roper Rhodes Ltd

Brassmill Lane Trading Estate. Bath BA1 3JF | tel: 01225 303900