


TECHNICAL DETAILS

For full technical details on all our products,
please visit our website www.burlingtonbathrooms.com


Riviera bath/shower mixer Chrome
Riviera bath/shower mixer Gold

RIV4 CHR
RIV4 GOLD

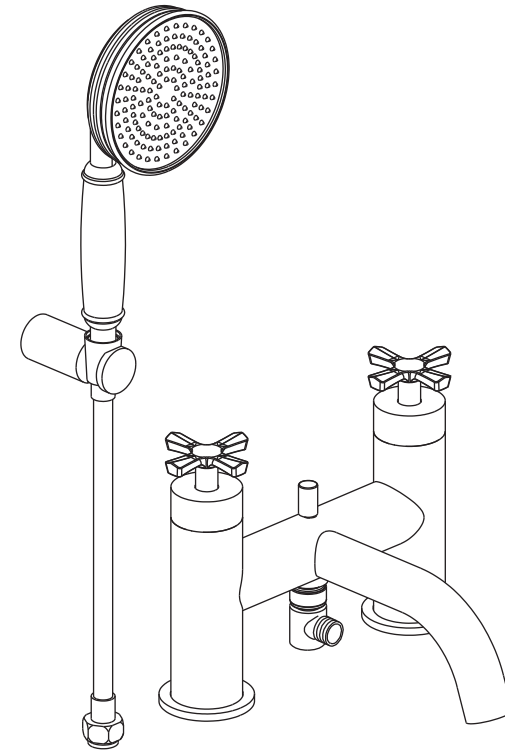


INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS

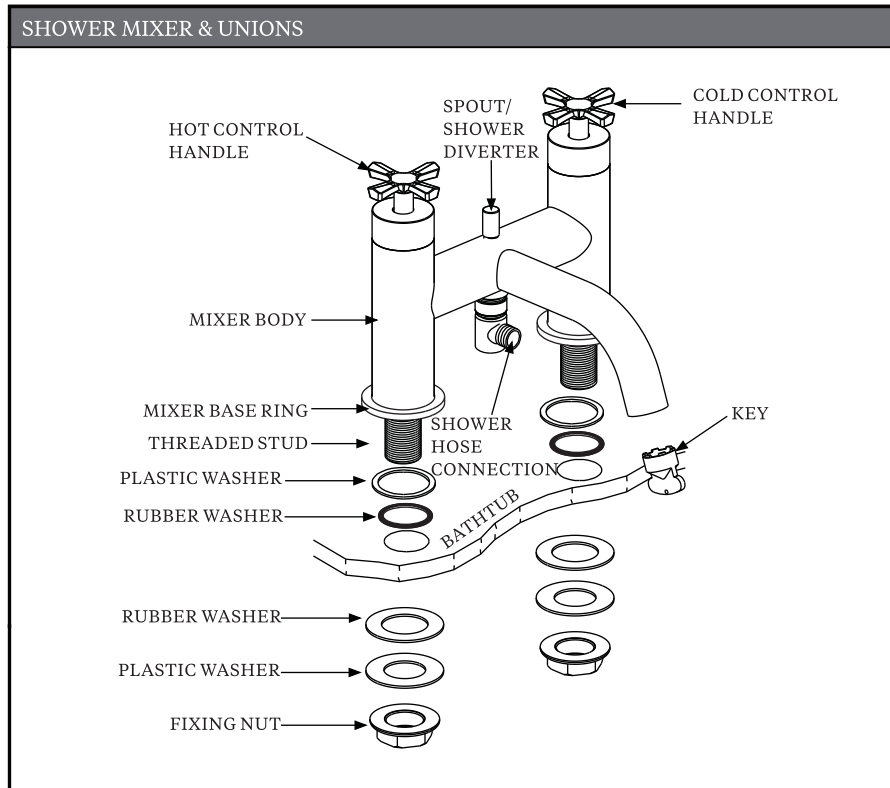

- 1: Remove the washers and fixing nuts from the tails of Deck mounting unions.
- 2: Insert the thread stud into the holes on the bath top making sure that the plastic washer, rubber washer and mixer base ring are correctly positioned.
- 3: Tighten the rubber washer, plastic washers and fixing nuts from the underside of the bath.

INSTALLATION INSTRUCTIONS

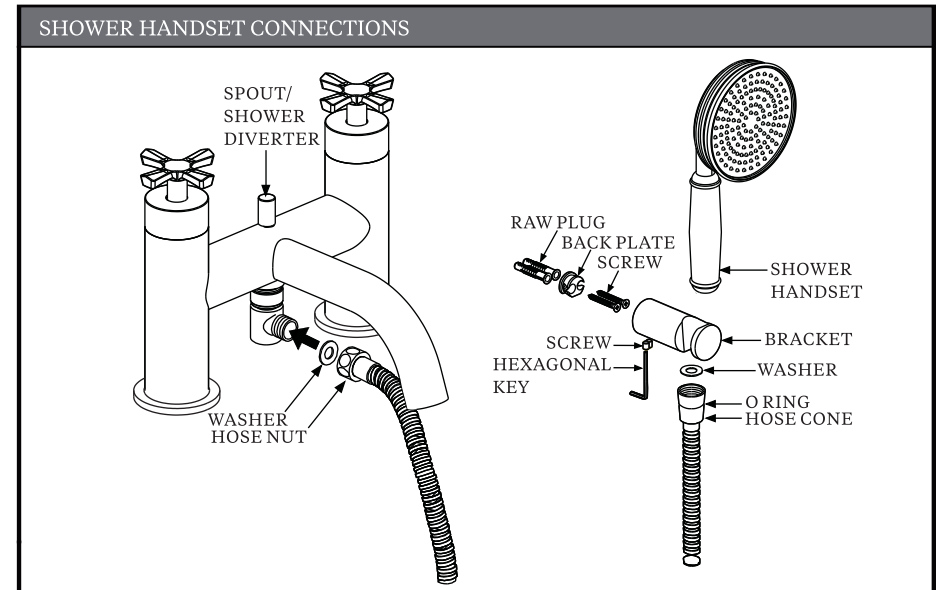

1. Install the handset and hose :
 - a) Insert the washer into the cone-shaped end of the hose, and then connect it with handset.
 - b) Insert the second washer into the nut end of the hose and attach it to the mixer outlet.
2. Install the handset bracket :
 - a) Secure back plate in situation by screwing the fixing base through the central hole.
 - b) Finally push the holder over the fixing base and secure by tightening the grub screw on the underside.

Operation

Pull the diverter up to operate the shower, it can be locked in position by turning 90°

MAINTENANCE


Note : Remember to turn off the water supply before commencing any maintenance.

Cleaning the cartridge

The concealed cartridge should give trouble free service, but in the event of any problem, service is straight forward.

To remove the cartridge

Follow the diagram to remove the cartridge. Wash the cartridge with clean running water and make sure that any trapped debris has been removed. Dry and lightly grease the seal (only use silicone grease) and replace the cartridge followed by the handle body.

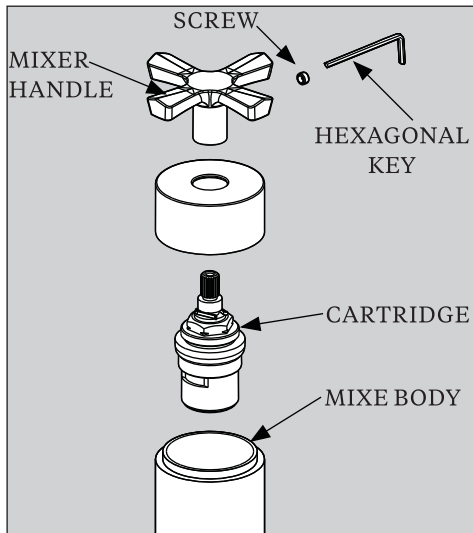

CLEANING


The product should be cleaned only with warm soapy water followed by rinsing with clean water and drying with a soft cloth. All finishes are vulnerable to acid attack and some strong substances such as household cleaners, disinfectants, denture cleaners, hair dyes, wine making and photographic chemicals can cause the surface to go black or peel.

FILTER CLEANING

Taps are supplied with two different filters : low pressure Flow Straighteners (factory fitted) and high pressure Neoperl Aerators (in the box). These fit into the front of the tap nozzle.

Before use : unscrew the filter and allow the water to run freely for 5 minutes. Screw the filter back into the nozzle once all impurities have been flushed from the water supply.

Periodically : Using the key provided in the box unscrew the filter from the nozzle and rinse with clean running water. Once all loose debris and dirt has been cleared replace the filter into the nozzle and tighten with the key provided.

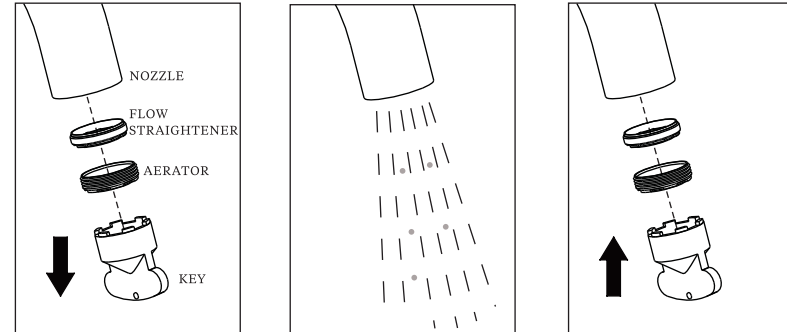


FILTER NOZZLES


Flow Straightener Filter and Neoperl Aerator Filter

The taps are supplied with factory fitted Flow Straightener filters for low pressure water systems. If the water pressure is high (above 1 bar), replace the flow straightener filter with the high pressure Neoperl aerator filter.

Use the Neoperl key supplied in the box to unscrew the Flow Straightener from the nozzle. Replace with the Aerator filter. If you misplace the supplied Neoperl key, use the top of the spare filter to unscrew the filter from the nozzle.

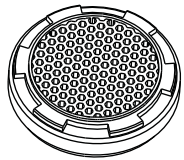

FLOW STRAIGHTENER

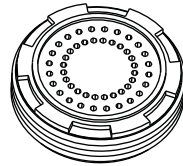

AERATOR

THE QUALIFICATIONS

This product should only be fitted by a qualified plumber to the equivalent of UK NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3. Should the installation be completed by a non-qualified person then the guarantee may be considered invalid.