





BOOTH & Co.

ENGLAND

This instruction booklet covers model:

BC-AXB-133A, BC-AXB-233A
(All finish options)

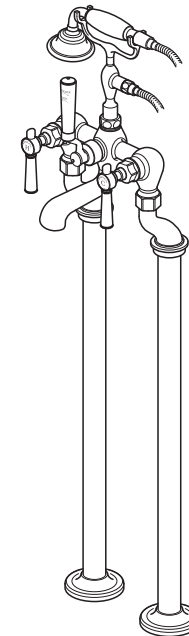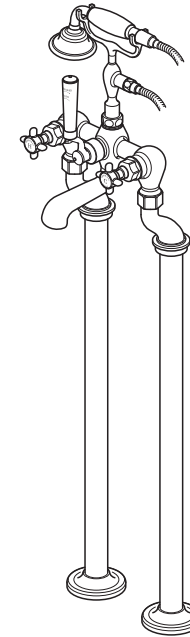

VADO
Wedmore Road, Cheddar,
Somerset, England BS27 3EB
tel 01934 744466
fax 01934 744345
www.vado.com
sales@vado.com

Version 1, 7-25

AXBRIDGE

BC-AXB-133A, BC-AXB-233A
INSTALLATION GUIDE

BOOTH & Co.

ENGLAND

Important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.
To be installed in accordance with BS EN806.

We strongly recommend that you use a qualified and registered plumber.

General installation

This fitting is a mixing device and therefore water supplies should be reasonably balanced.

When installed, the fitting must comply with the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

For further information, contact the Water Regulations department of your local water supplier (see the WRAS website www.wras.co.uk for details) or the Water Regulations Advisory Scheme by email (info@wras.co.uk) or telephone: 01495848454.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

Operating Specifications


Operating Pressure

Minimum operating pressure 1 bar

Maximum operating pressure 5 bar

Installation

Slide both covers down until they contact the floor.

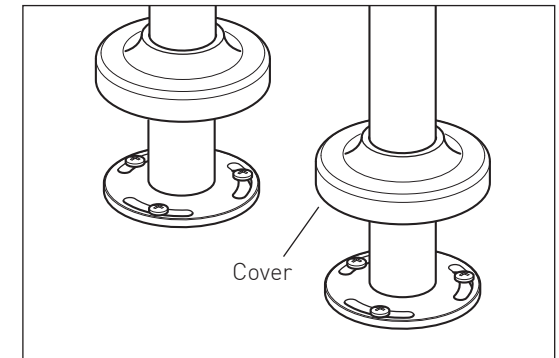


Carefully screw the handset holder onto the valve. Make sure that it is in the correct position before tightening.
Be careful not to damage the surface, do not over tighten.

Handset

Ensure a rubber washer is in the cone end of the hose and screw to the Handset.

Place the handset onto the holder.

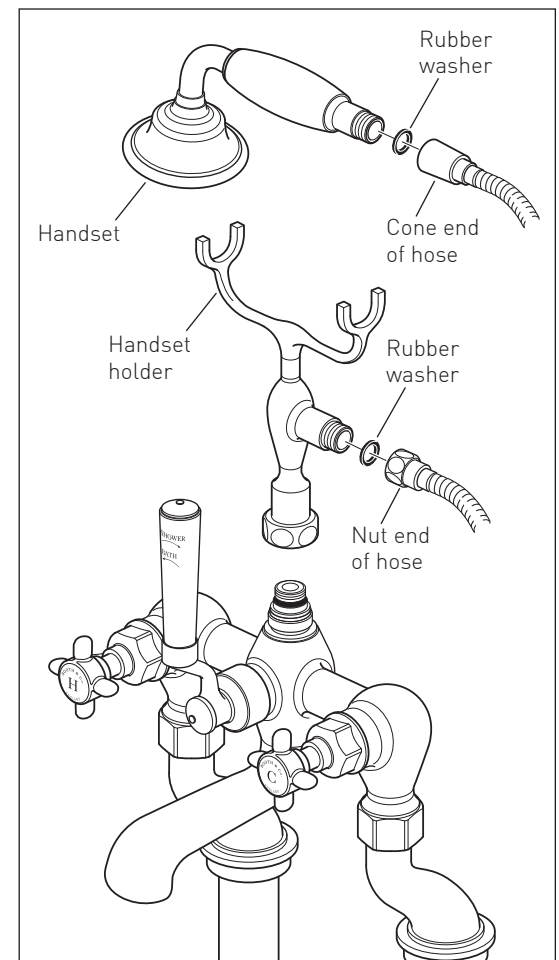


Mixer

Ensure a rubber washer is in the nut end of the hose and attach it to the mixer outlet.

Installation

Mark the position of the 3 fixing holes in each foot plate.


Unscrew and remove the support tubes and foot plates.

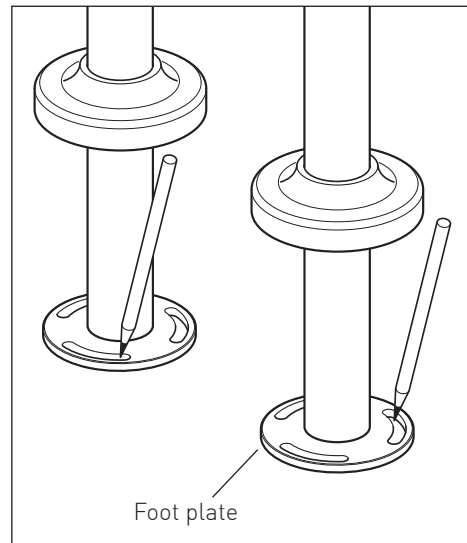

Drill the 6 holes to the required depth and diameter to suit your fixings and floor.

Connect the inlet pipes protruding from the floor to the support tube pipes.

Slide both foot plates down and fix.

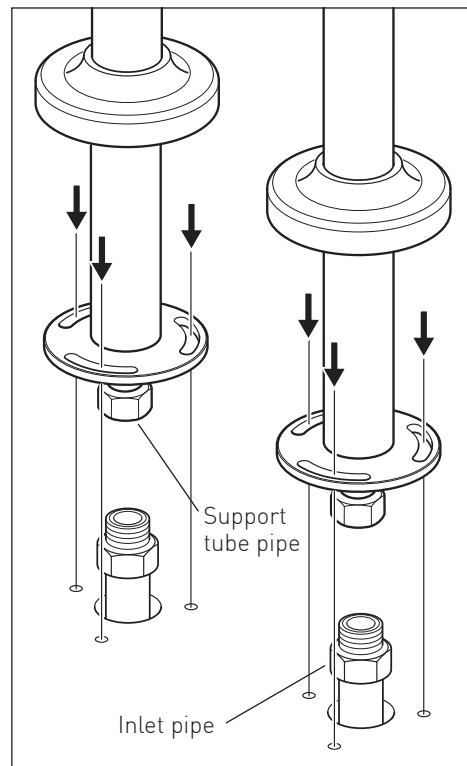


Contents of Packaging




Installation guide & User manual


Cross handle option OR Lever handle option

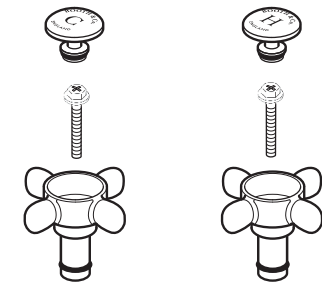


Cross handles with screw and screw cover

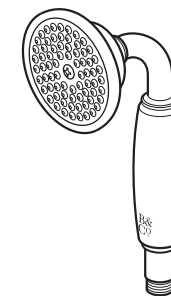


Handset

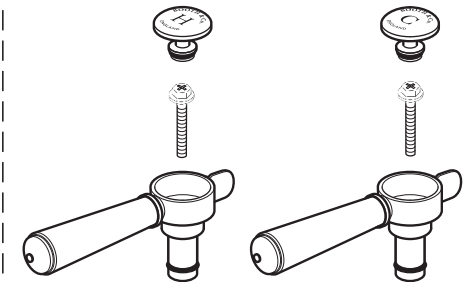

Lever handles with screw and screw cover

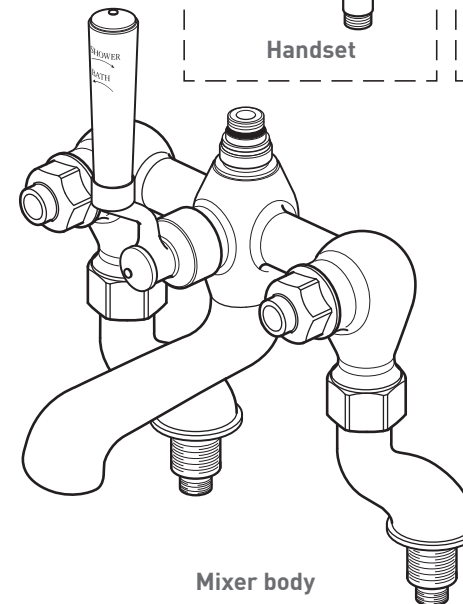


Mixer body

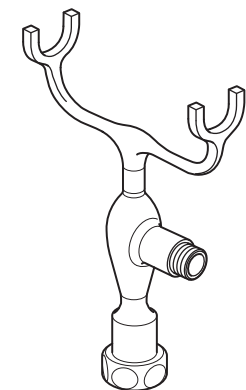

Handset holder

Contents of Packaging


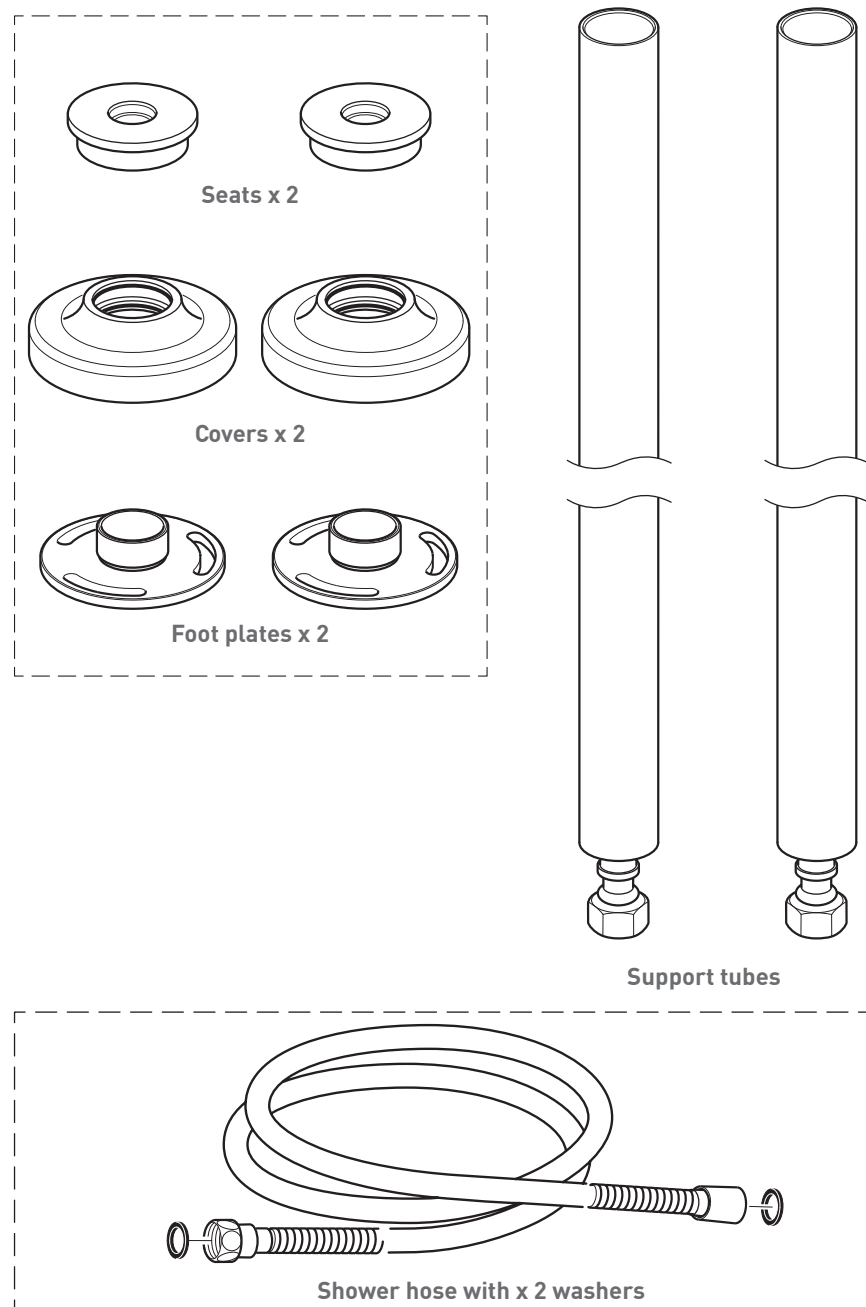


Installation

Prepare the floor with 2 x $\frac{3}{4}$ " male connectors at 180mm centres. Connect the water supply to the connectors. The hot water should be connected to the left and cold to the right.


Note: There should be sufficient vertical movement in the inlet pipes to allow for the connection to the support tubes pipes. Flush through the pipe work to ensure removal of debris. Check for leaks and turn off the water supply.

At the bottom slide a cover onto each support tube.

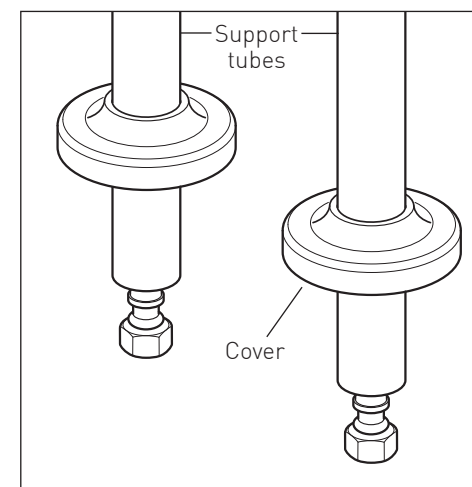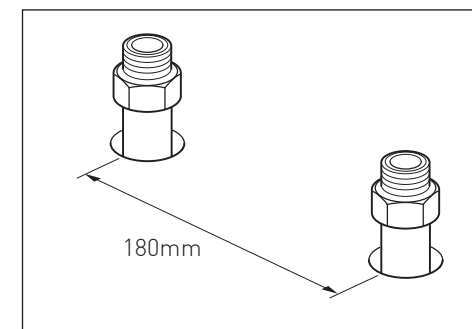


Slide the foot plate over the support tube pipe and into the support tube.

Repeat for the other side.

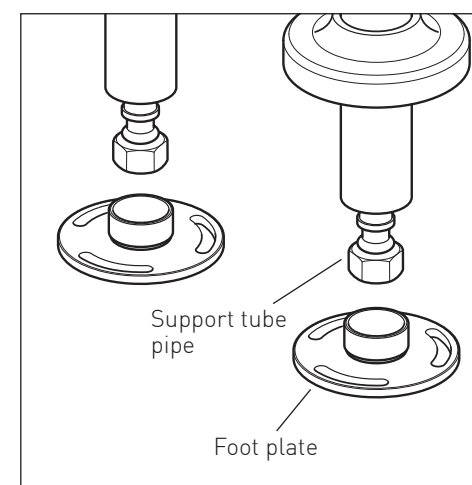


Installation

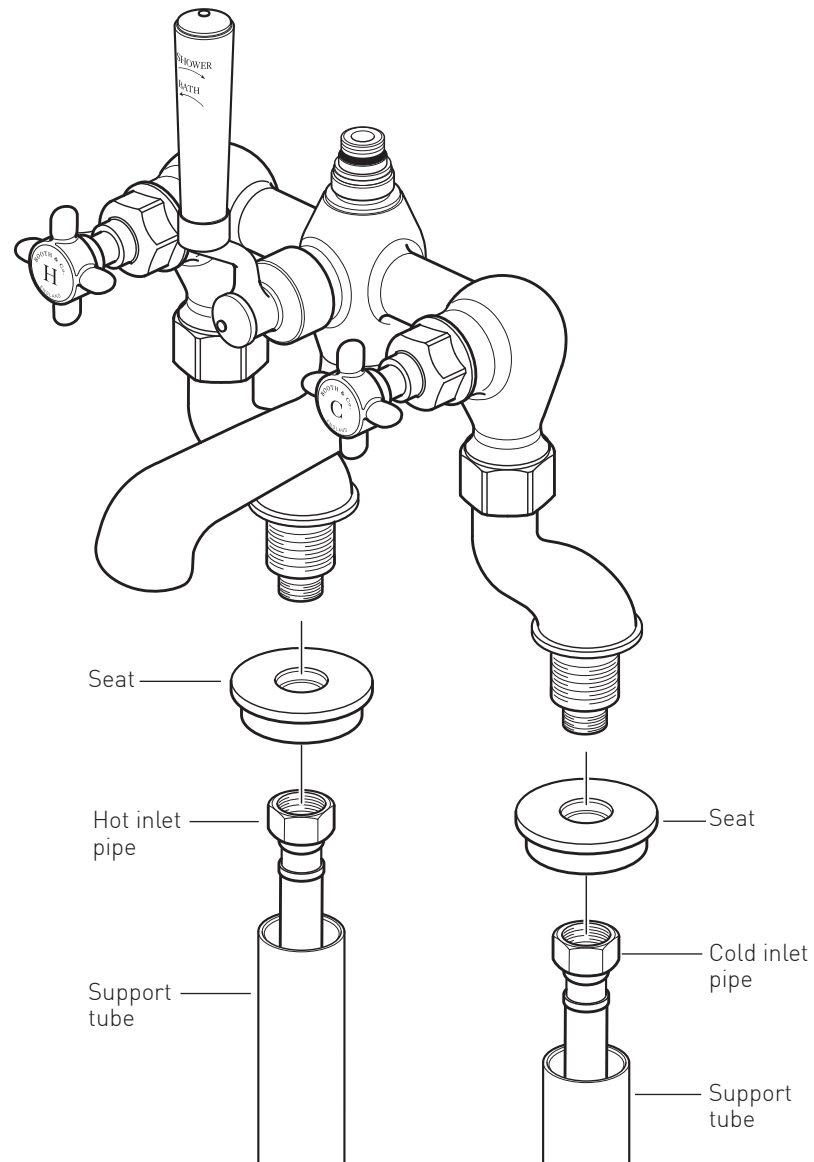


Slide both seats onto the mixer connections.
Screw the inlet pipes to the mixer connections, hot is on the left and cold on the right.
Slide the support tube up and into the base of the seat.

Dimensions - cross handles

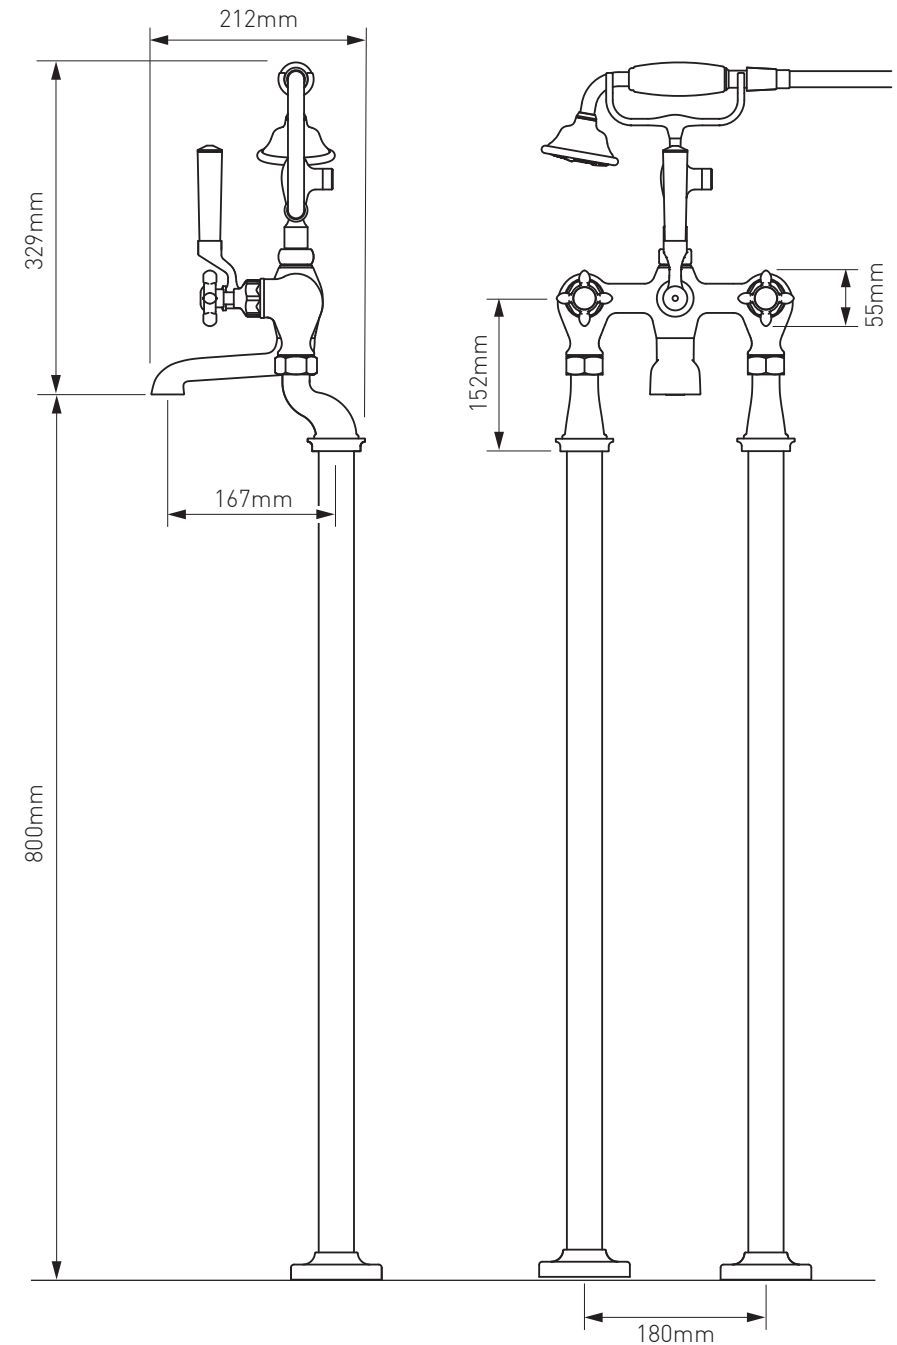

Dimensions - lever handle

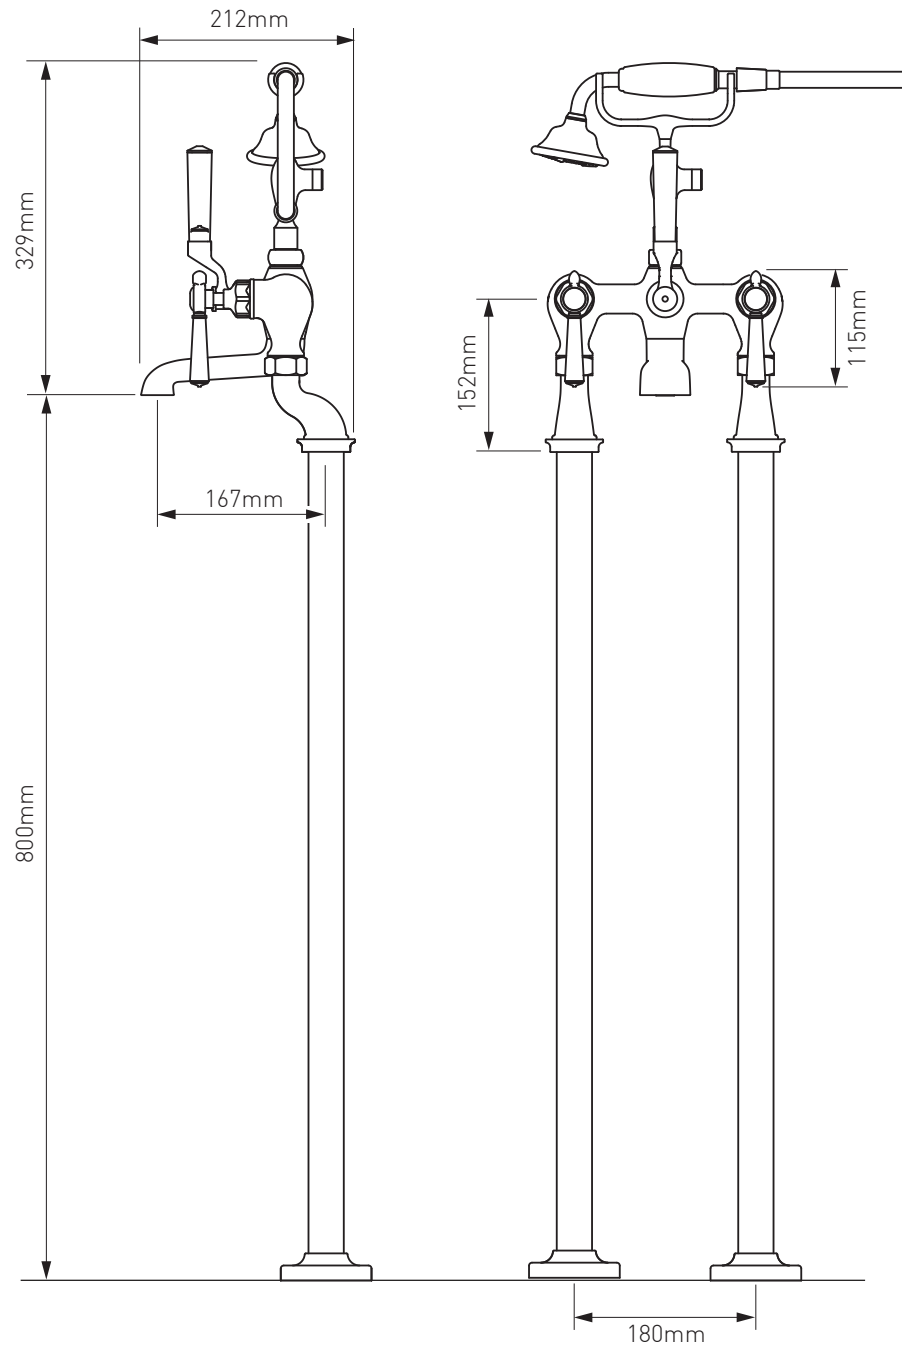

Installation - handle

Place the lock nut over the valve and screw down. Use a torque wrench to tighten the nut down to 20Nm. **See Fig. 3**

Screw the cover nut onto the valve, hand tight only.




Carefully slide the handle onto the splines of the valve with the handle pointing in the correct position.

See Fig. 4


Finally secure the handle in position. Place the screw down through the handle, and tighten.

Push on the handle cover.

See Fig. 5

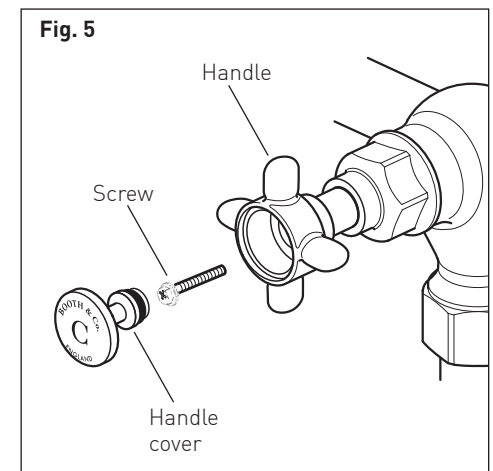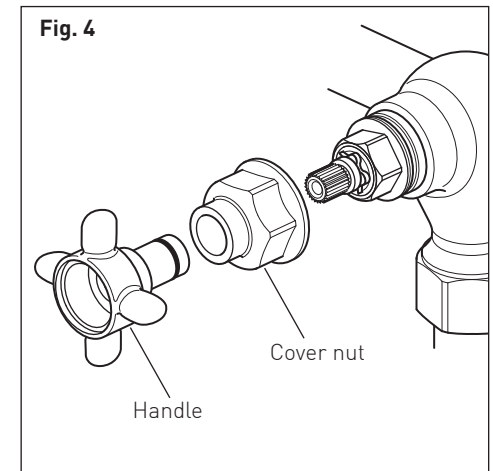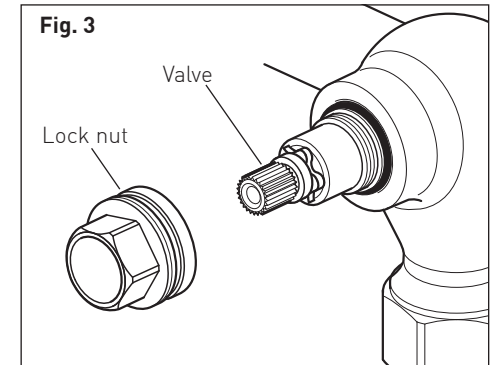

Installation - Quick guide

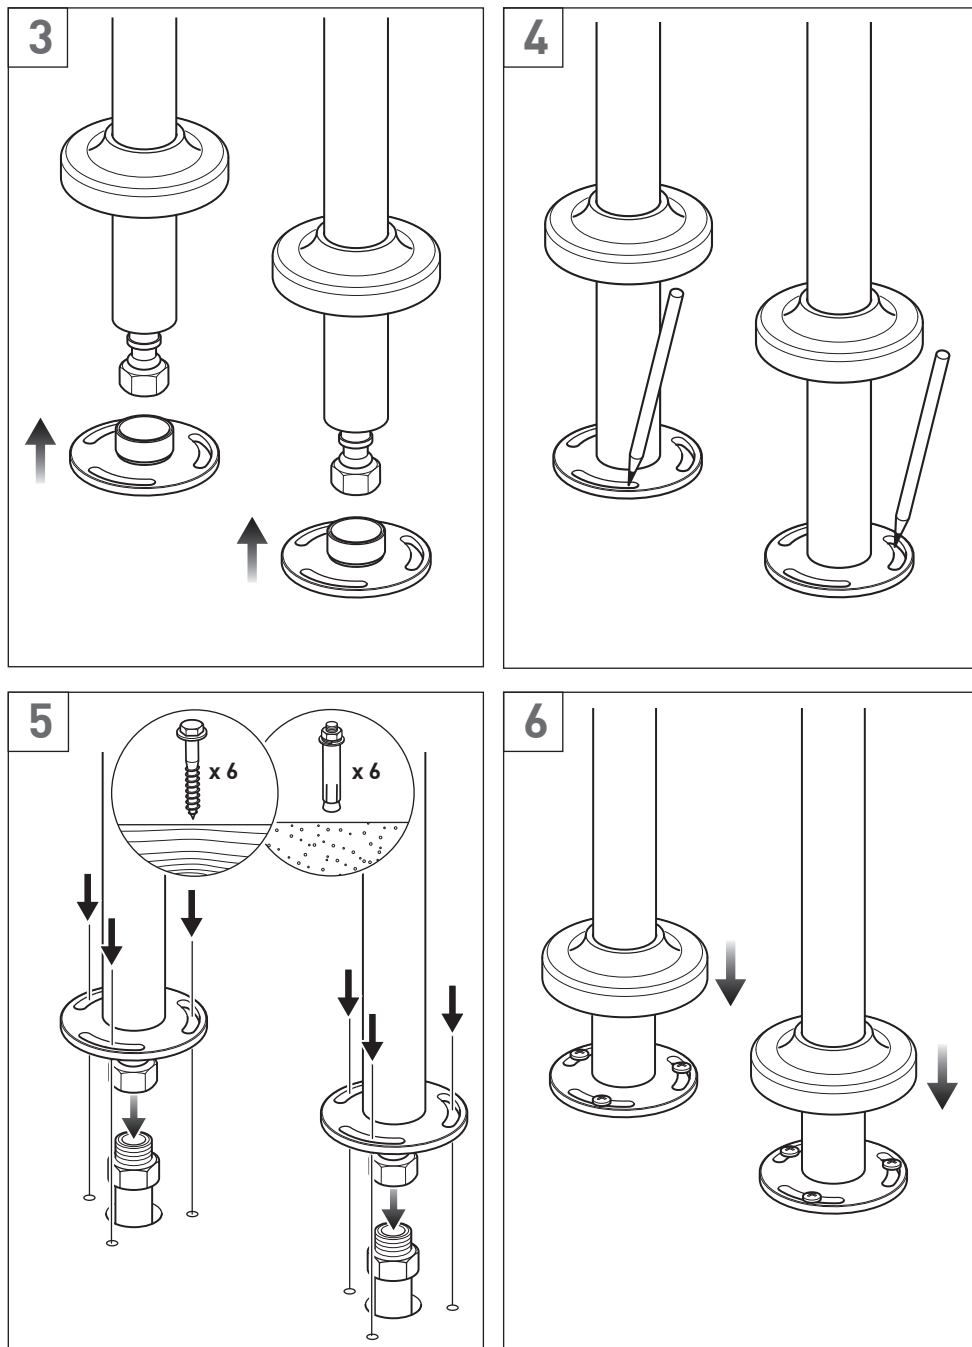

Installation - Quick guide

