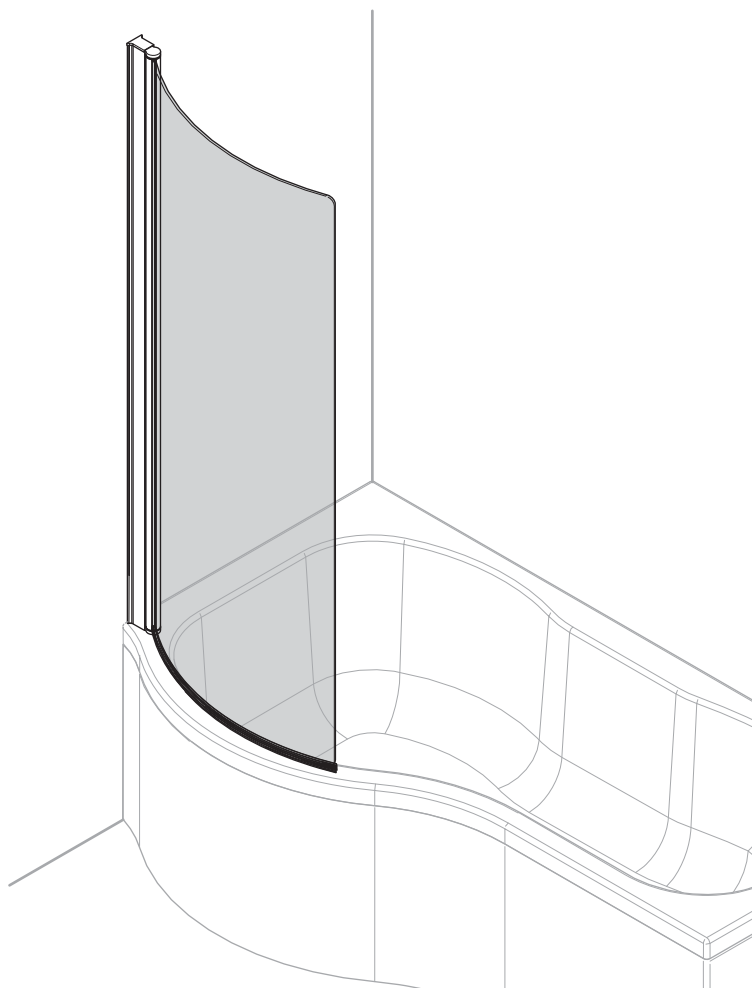# Curved Bath Screen

• Instruction suitable for both Right and Left Hand fixing variations.

Before You Start

- Check that the bath has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. **Please Note:** All product supplied without bath.
- Check that there is sufficient space on the bath for the product and that the screen movement does not foul other items such as sinks and taps.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat.
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type – if in doubt seek professional advice
- Ensure the area is clean, dry and dust free.
- Read the instructions in full.
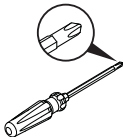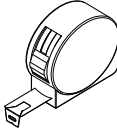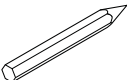- Have the correct tools available, (as shown below, see 'Tools Required').

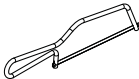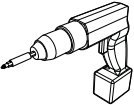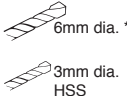**Fig.A.**
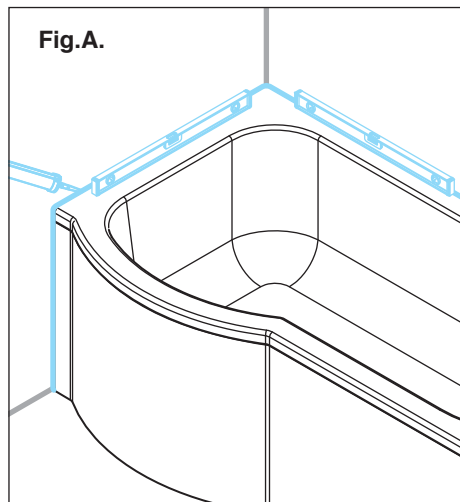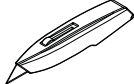
Safety

- Handle all glass with care - support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened – it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
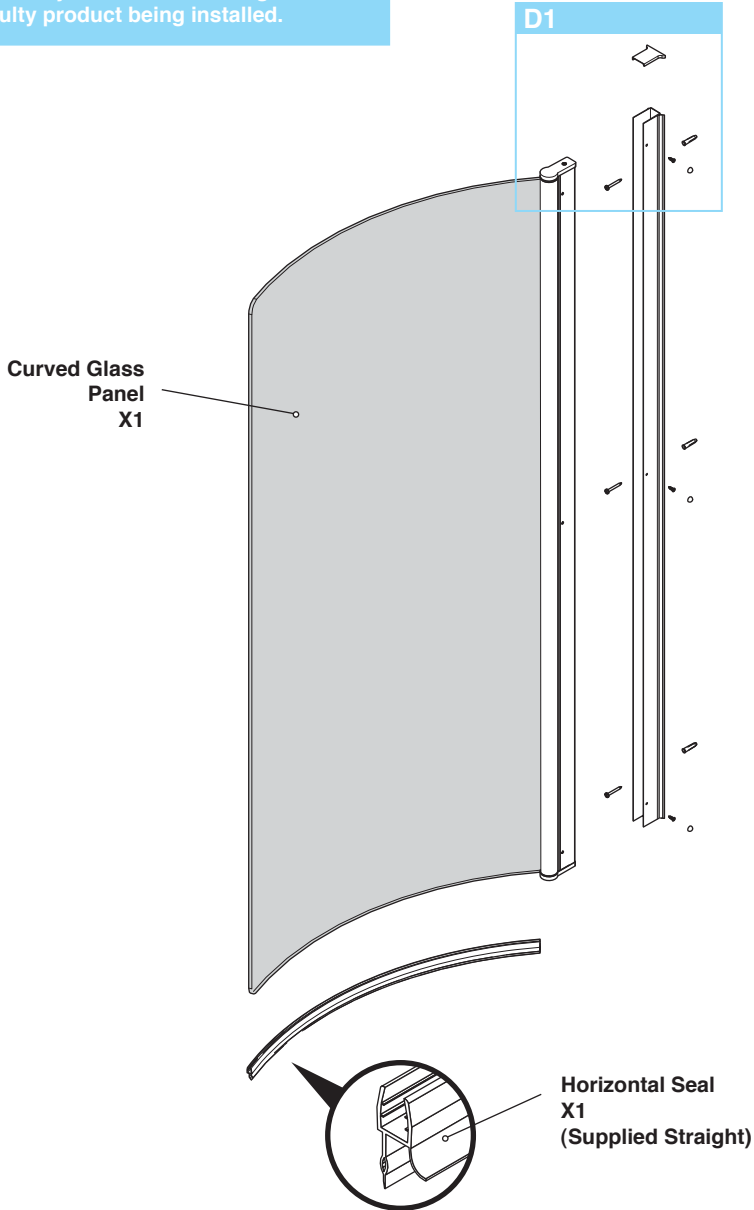- Use safety eyewear when handling glass.
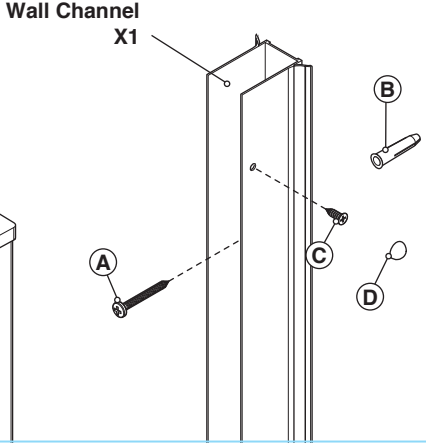- Keep all small parts away from children.

Disclaimer

- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

Tools Required (not supplied)

Spirit Level	Screwdriver	Tape Measure	Pencil	Utility Knife

Junior Hacksaw	Silicone Gun & Sealant	Power Drill	Suitable Drill Bits	

6mm dia. *

3mm dia. HSS

* Ensure drill bit used is suitable for wall surface

Parts & Fittings Supplied

D1

Curved Glass Panel X1

Horizontal Seal X1 (Supplied Straight)

D1

Wall Channel Cap X1

Wall Channel X1

A

B

C

D

Loose Screws & Fittings Supplied

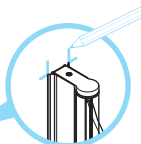|			Qty
A	No.7 x 1½" Pan Head Screws	(actual size)	**x3**
B	Wall Plugs	(actual size)	**x3**
C	No.7 x ½" CSK Screws	(actual size)	**x3**
D	Screw Snap Cap	(actual size)	**x3**
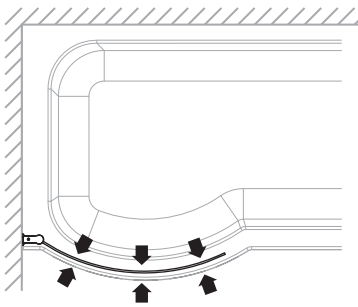
Fig. B   **Plan View**

IMPORTANT NOTE:
Ensure radius of Bath Screen matches Bath, (refer to Fig. B for details).
DO NOT push Bath Screen fully into Wall Channel to ensure adjustment when fixing.

1

! **Ensure Glass Screen is level**

Mark Wall Channel position
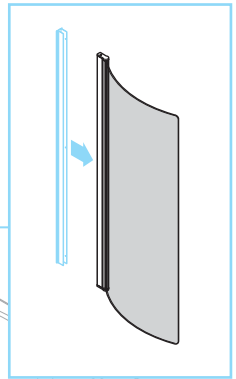
! **Ensure Glass Screen is level**
Handle unframed glass with care - Support on cardboard to avoid risk of breakage.
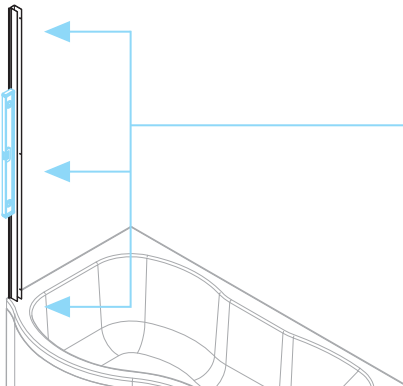
! **Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type is used. If in doubt seek professional advice.**
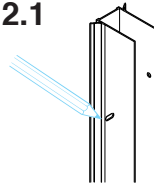
! **Position wall channel on wall. Ensure channel is vertically level and does not overhang the bath.**

2

* **Tip: When drilling tiles apply masking tape to surface to stop drill bit slipping.**
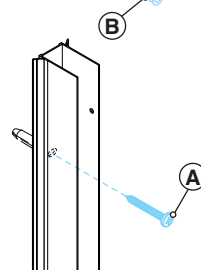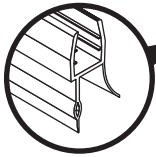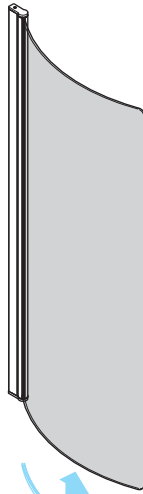
2.1 Mark position of pre-drilled channel holes

2.2 6mm dia. holes with drill bit suitable for wall surface

B

2.3

A

3

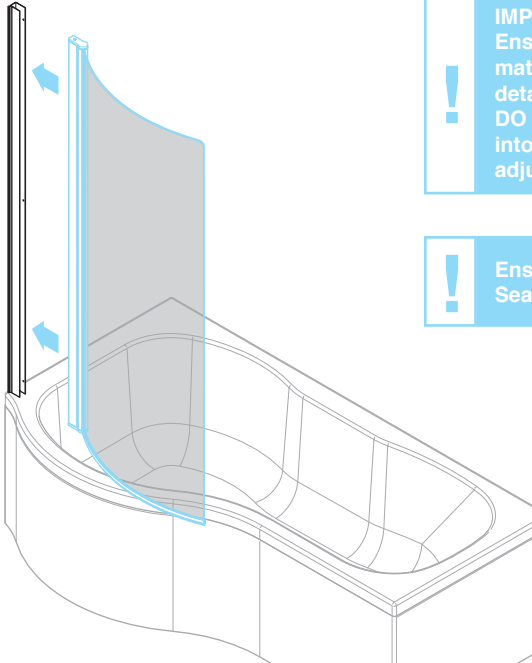*Tip: To push fit Horizontal Seal, start in the corner and work the seal across the Curved Glass Panel.

INSIDE OF BATH

OUTSIDE OF BATH

Please Note:
Ensure Horizontal Seal is positioned with the 'Edge Blade' on the inside face of the bath.
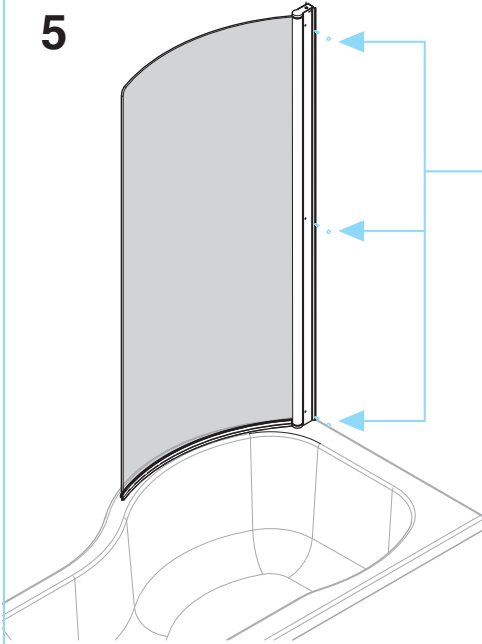

4

! IMPORTANT NOTE:
Ensure radius of Bath Screen matches Bath, (refer to Fig. B for details).
DO NOT push Bath Screen fully into Wall Channel to ensure adjustment when fixing.

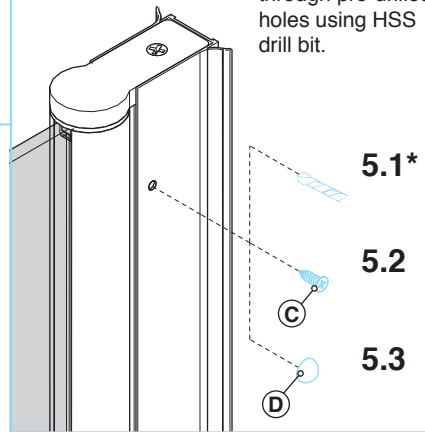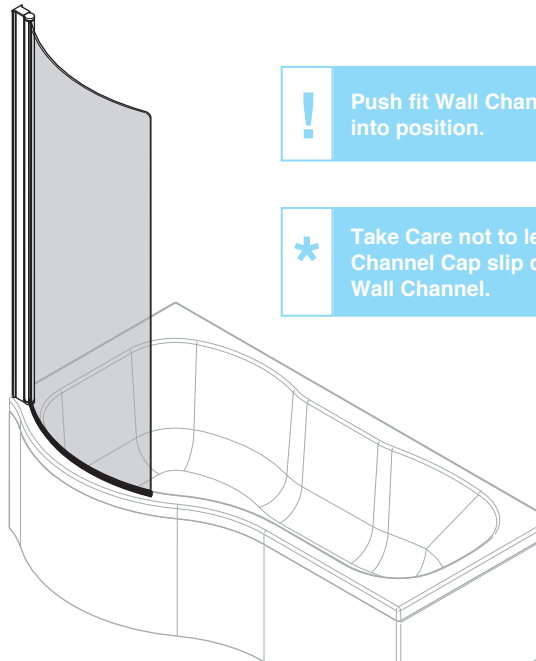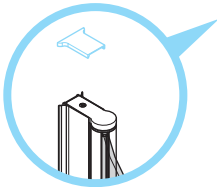**! Ensure compression of Horizontal Seal on the bath.**

5

*3mm dia. holes through pre-drilled holes using HSS drill bit.

5.1*

5.2

C

5.3

D

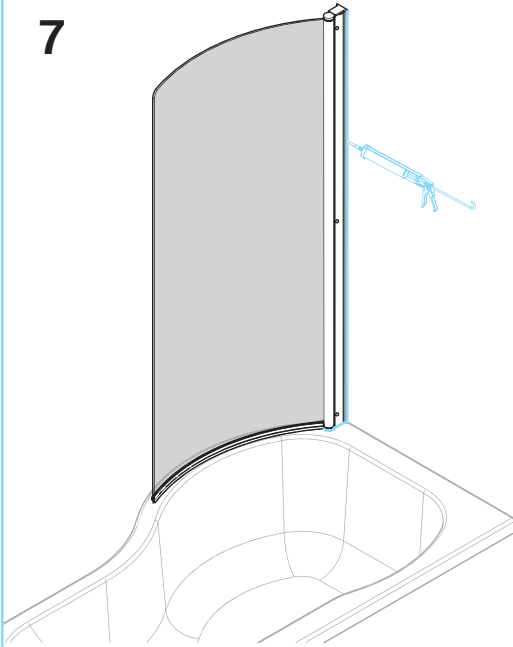**!** Ensure Bath Screen is level prior to fixing, adjust to suit.

6

! Push fit Wall Channel Cap into position.

* Take Care not to let Wall Channel Cap slip down the Wall Channel.

7

! **Apply Silicone Sealant,** (not supplied).

8

24 hour ✗
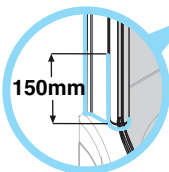
* **Product Care:**
Use a non abrasive cleaner.
Water marks may be removed
with a proprietary limescale
remover or household vinegar.

! **Apply Silicone Sealant,** (not supplied).

150mm