



## SLIDING WETROOM, ENCLOSURE & DOOR

### INSTALLATION INSTRUCTIONS

[www.aquadart.co.uk](http://www.aquadart.co.uk)

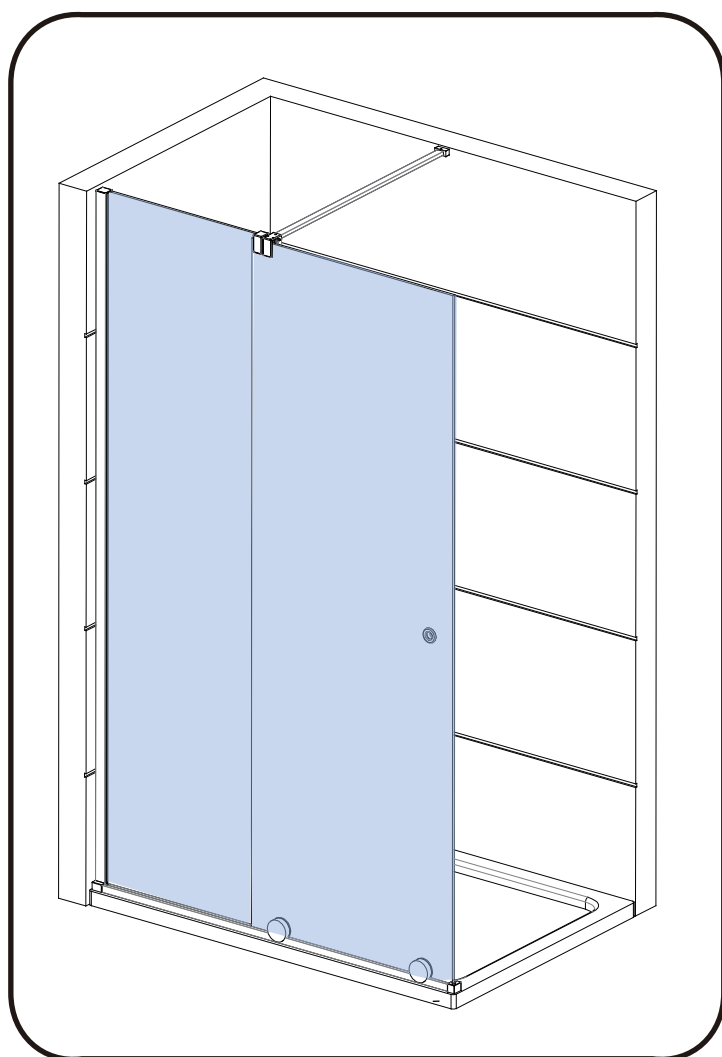


#### Tools Required

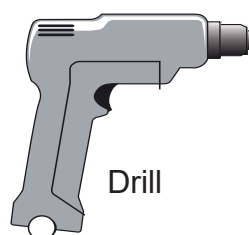


Drill




6mm Masonry Drill  
2.75mm HSS Drill

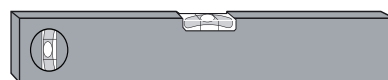

Spirit Level

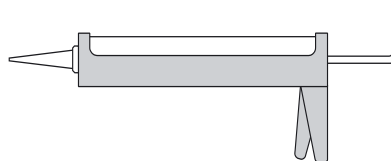

Sealant Gun

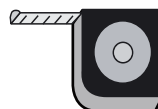

Tape Measure



Pencil



Hex Wrench



PH2 TYPE  
Screwdriver

Please note hand tools NOT supplied

#### IMPORTANT

This product should be installed by a suitably qualified and proficient person. The fitting instructions should be followed carefully to ensure a proper and safe installation. Failure to follow these instructions could result in future injury.


These instructions and list of parts assume that installation is done against solid/tiled walls.

Please check this product for damage prior to starting the installation. No claims can be made after the product has been fitted.

PLEASE NOTE :The minimum and maximum adjustment sizes noted on the product brochures are based on perfectly plumb walls and trays.

# SLIDING WETROOM INSTRUCTION

## COMPONENTS AND BOX CONTENTS


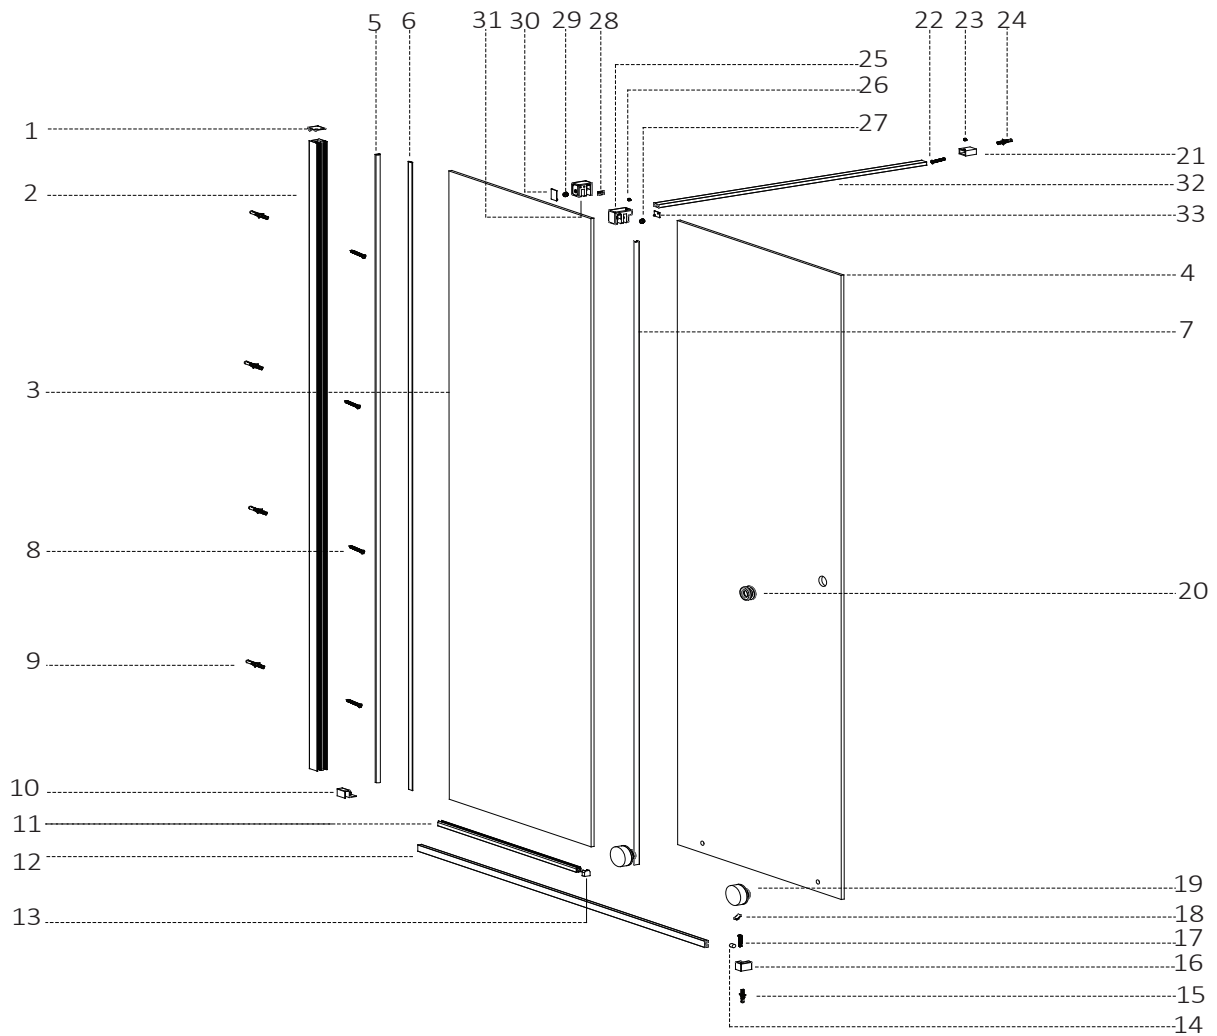


### Box Contents

No.	Description	Qty	No.	Description	Qty
1	Wall Profile Top Cap	2	18	Bottom Rail End Fixing Screw Cap	1
2	Wall Profile	1	19	Roller Set	2
3	Fixed Panel	1	20	Handle	1
4	Door Panel	1	21	Support Arm Wall Fixing	1
5	Closing Bubble Seal	1	22	ST Screw 4x30	1
6	Fixed Panel Fixing Seal	1	23	Allen Grub Screw M5x6	1
7	Vertical Seal(Optional)	1	24	Wall Plug	1
8	Wall Plug	4	25	Glass Clamp	1
9	ST Screw 4x30	4	26	Grub Screw M5x6	1
10	Bottom Rail End Cap (L/R)	2	27	Grub Screw M10 x 6	1
11	Bottom Strip	1	28	Soft Head	1
12	Bottom Rail	1	29	Grub Screw M10 x 6	1
13	Bottom Strip End Cap	1	30	Stopper Screw Cover	1
14	Bottom Rail End Fixing Soft Head	1	31	Roller Stopper(L/R)	2
15	Wall Plug	1	32	Support Arm Tube	1
16	Bottom Rail End Fixing(L/R)	2	33	Glass Clamp Screw Cap	1
17	ST Screw 4x40	1			

## FIXING KIT COMPONENTS, SITE CONDITIONS SLIDING WETROOM

### FIXING KIT

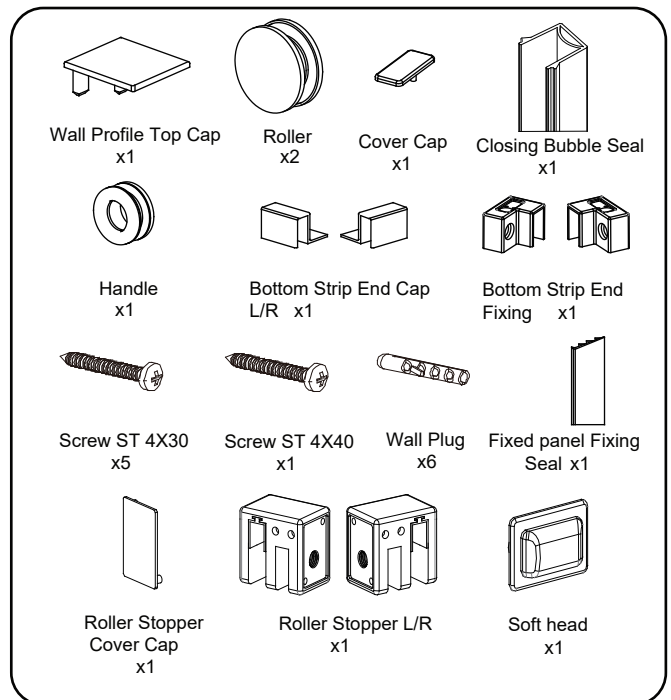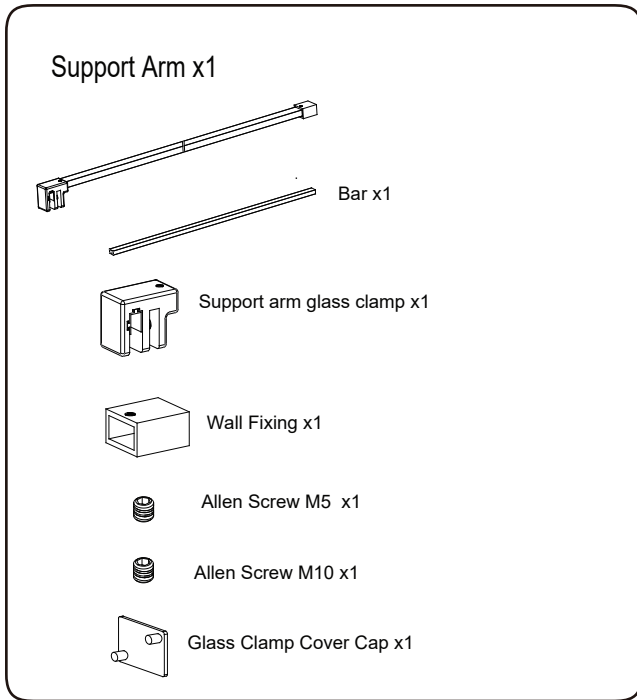

### IMPORTANT - Missing Components


Please check this product for missing components prior to installation.

For spare parts visit [www.aquadart.co.uk](http://www.aquadart.co.uk)

### IMPORTANT - Installation site

1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
2. The tiles or other wall finishing should be effectively sealed at tray edges.
3. Tiles should extend at least to the corner of the tray and a minimum of 2.0 meters from the top of the tray.



### PROCEDURE

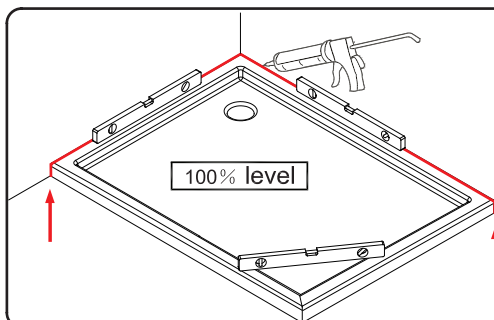




#### TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

**TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.**

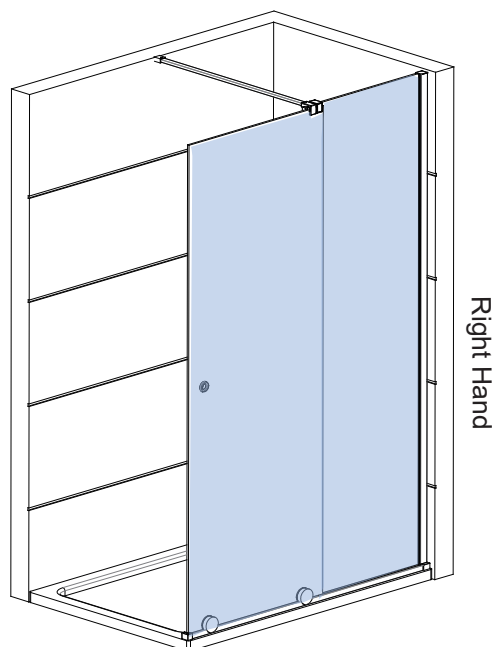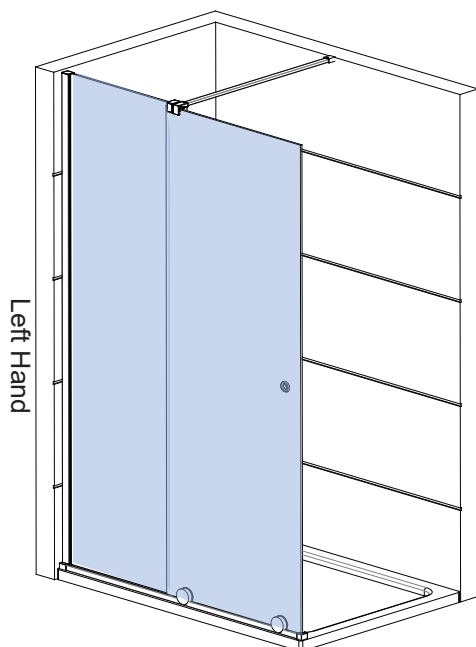

Note: The product can be constructed either way up, for left or right hand opening. This instruction is showing a Left hand opening

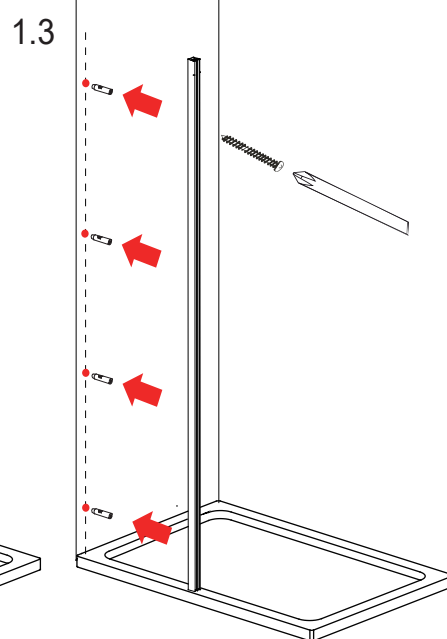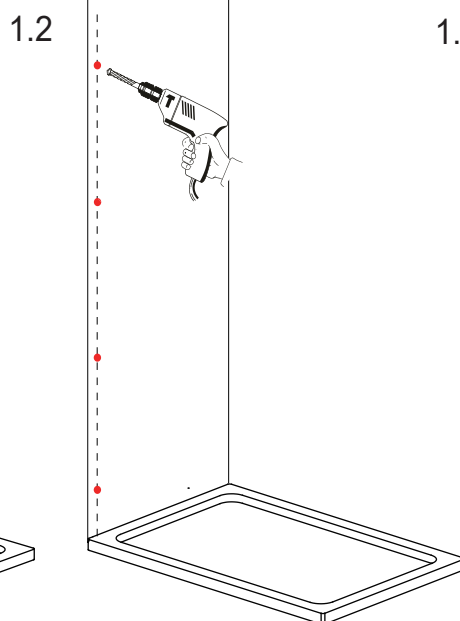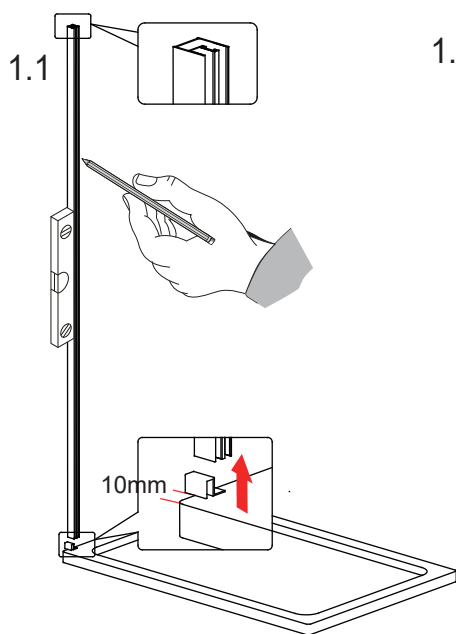


**Step 1.1** Fit the Bottom Rail End Cap L/R (Part 10) on the wall profile (Part 2) from the bottom. Place the Wall Profile onto the tray, roughly 10mm away from the front edge of the end cap. Level the Wall Profile using a spirit level then mark the profile through the pre-drill holes on the Wall Profile. (Diagram 1.1).


**Note:** Ensure the channel with the pre-drill holes is facing outwards when placing the Wall Profile onto the tray.

**Step 1.2** Remove the wall profile and drill the marked points using a 6mm masonry drill bit. (Diagram 1.2)

**Step 1.3** Insert wall plugs (Part 8) then secure the wall profile onto the wall using ST4X30 screws x4 (Part 9) (Diagram 1.3)

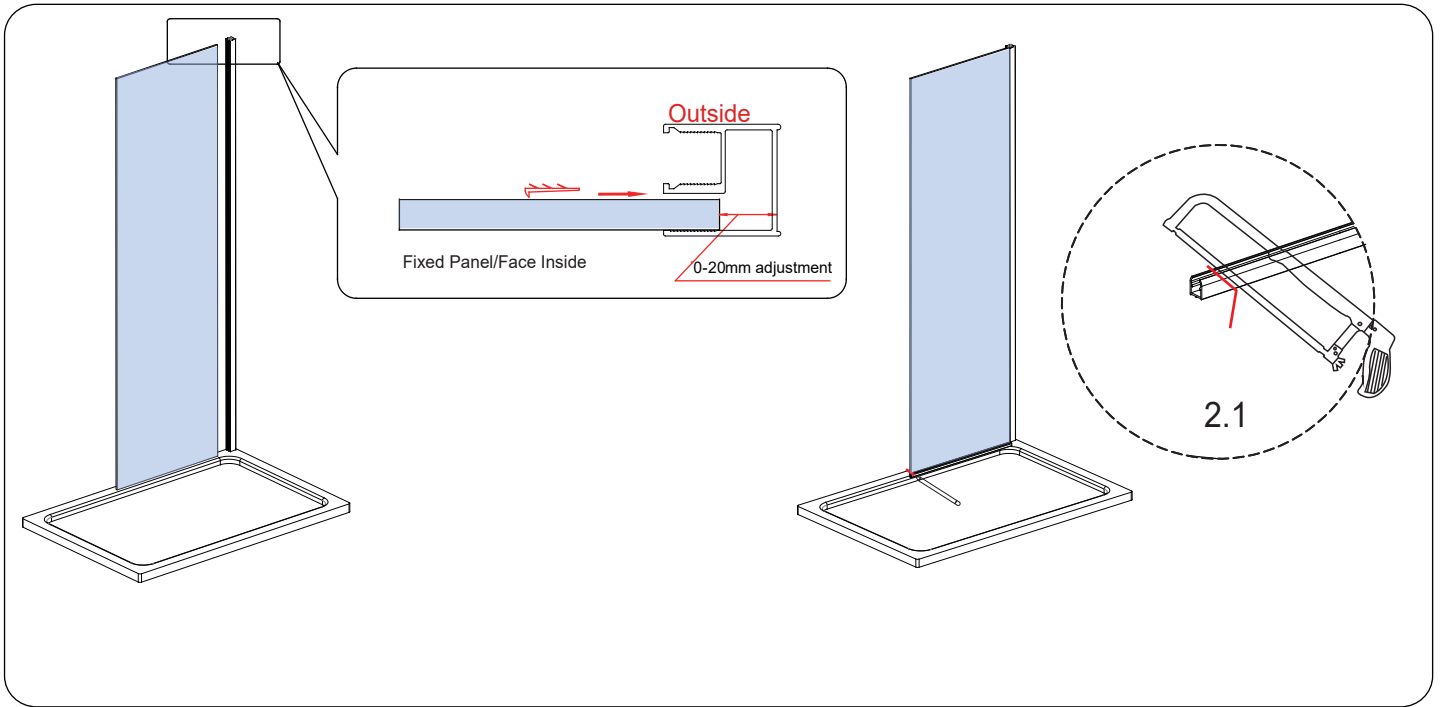


**Step 2.1** Carefully lift the fixed panel (Part 3) and insert into the wall Profile groove, it allows 0-20mm for the adjustment. Once the fixed panel is in required adjustment, place the bottom strip (Part 11) onto the tray and mark a line onto the profile. Cut the profile through the marked line to get required length. (Diagram 2.1)

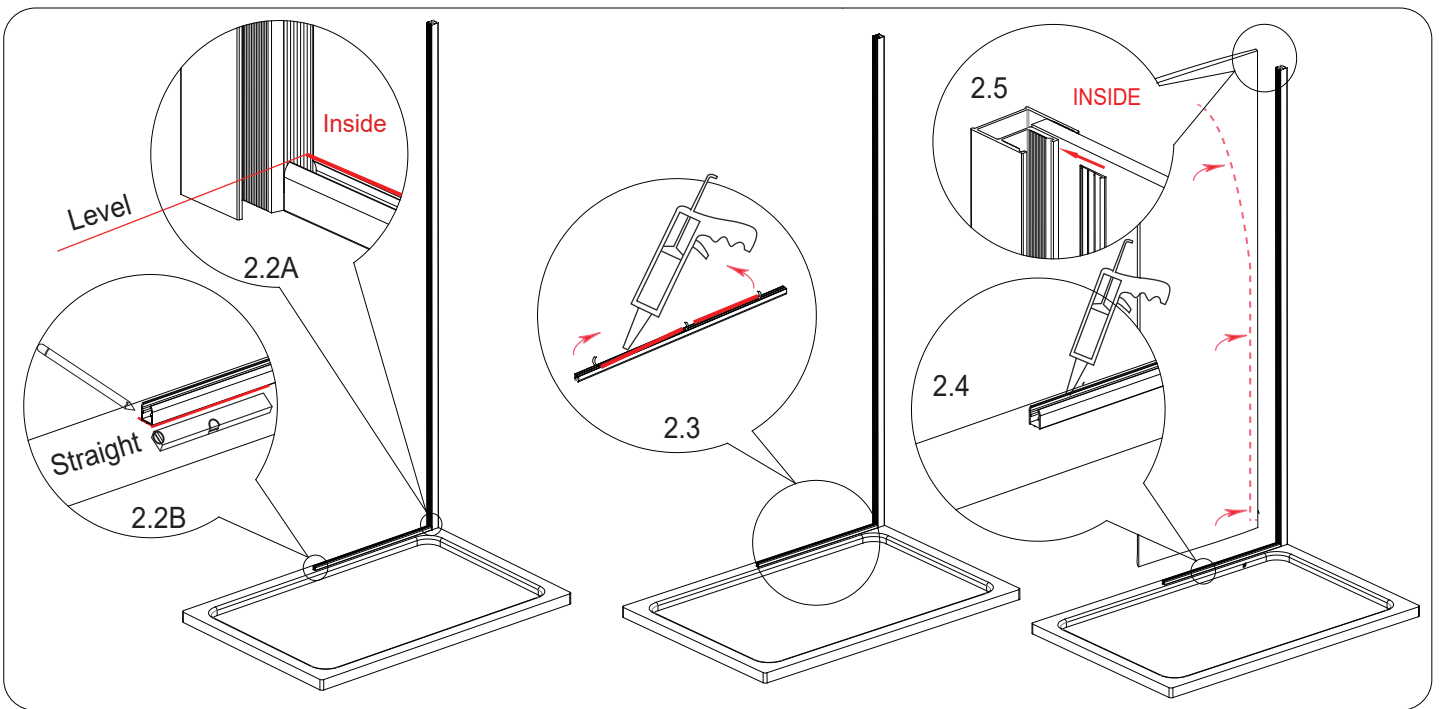

**Step 2.2** Remove the fixed panel then replace the bottom strip (Part 11) onto the tray, ensure the bottom strip groove is level to the wall profile groove on the inside face (Diagram 2.2A). Mark the line on the tray for the bottom strip position once you have ensured it is straight. (Diagram 2.2B)


**Step 2.3** Drop the silicone sealant onto the bottom side of the bottom strip, take the 3M adhesive tape back away then carefully place it onto the tray against the marked line. (Diagram 2.3)

**Step 2.4** Drop the silicone sealant into the groove of the bottom strip (Diagram 2.4) then carefully lift the fixed panel and insert it into the bottom strip then push it onto the wall profile. After the fixed panel has been placed at the required position insert the fixing seal from top to bottom to secure the fixed panel onto the wall profile. (Diagram 2.5)

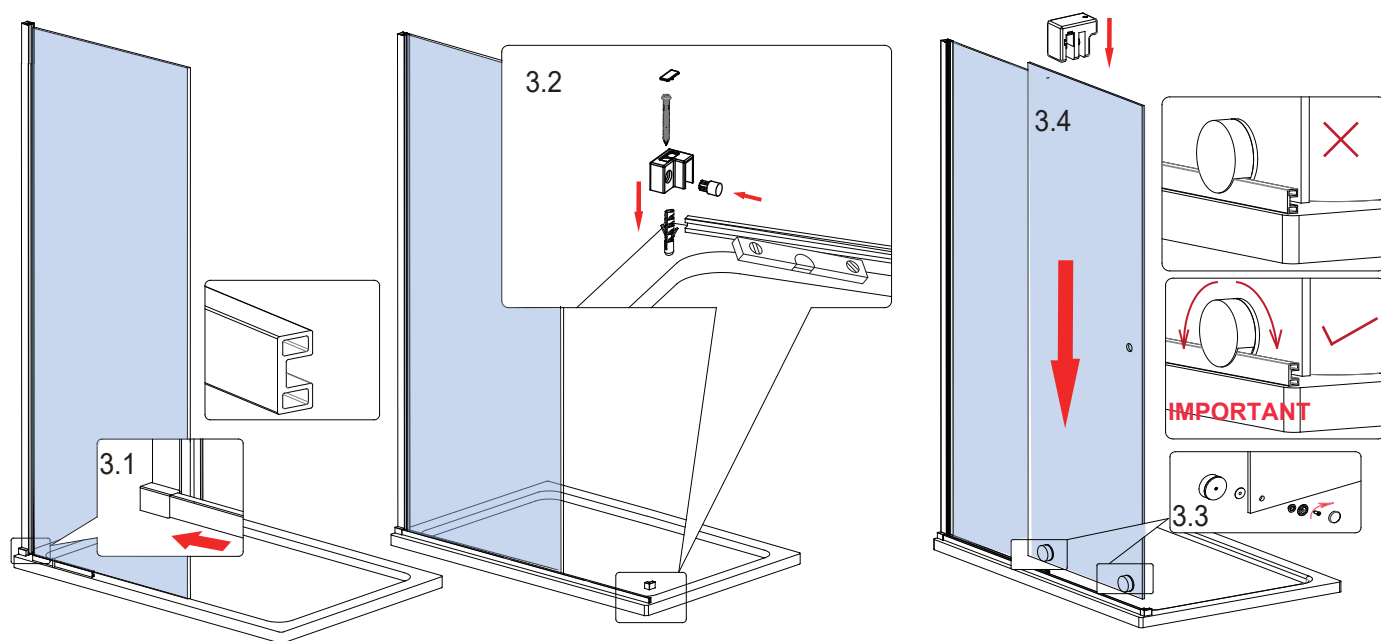


- Step 3.1** Insert the bottom rail (Part 12) into the end cap (Part 10) (Diagram 3.1) .
- Step 3.2** Ensure the bottom rail is level and straight then secure it onto the tray using the bottom rail end fixing(Part 16) and screw ST4x40(part 17).Then insert the black soft head into the hole on the bottom rail end fixing(Diagram 3.2)
- Step 3.3** Assemble the bottom rollers onto the door panel.Ensure the gasket has been used on both faces of the glass.
- Step 3.4** Carefully lift the door panel and assemble onto the bottom rail, fit the glass clamp(Part 25) to hold the fixed panel and door panel in place.

**IMPORTANT:TURN THE ROLLER BODY TO ENSURE THE EDGE OF THE CUT ON THE ROLLER BOTTOM DOES NOT TOUCH BOTTOM RAIL TOP SURFACE BEFORE SLIDING THE DOOR PANEL**

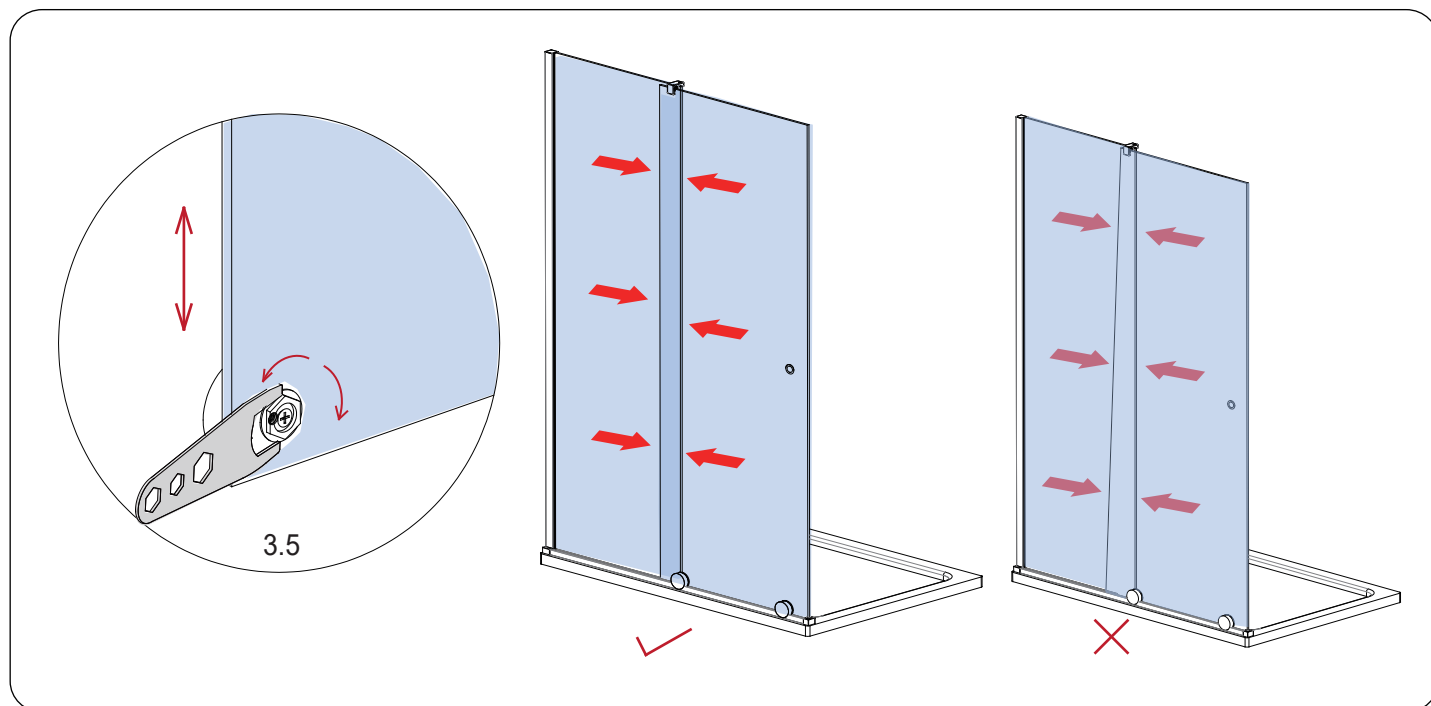

- Step 3.5** Adjust the roller to raise or lower the door panel to ensure it does not touch the ground or tray(Diagram 3.5), also ensure that the overlap of the fixed panel and door panel is equal at the top and the bottom.Slide the door panel to ensure it's running smoothly.

**Tips:**If the door panel does not run smoothly please check that the bottom rail is 100% straight,and check that the wall profile is 100% level.

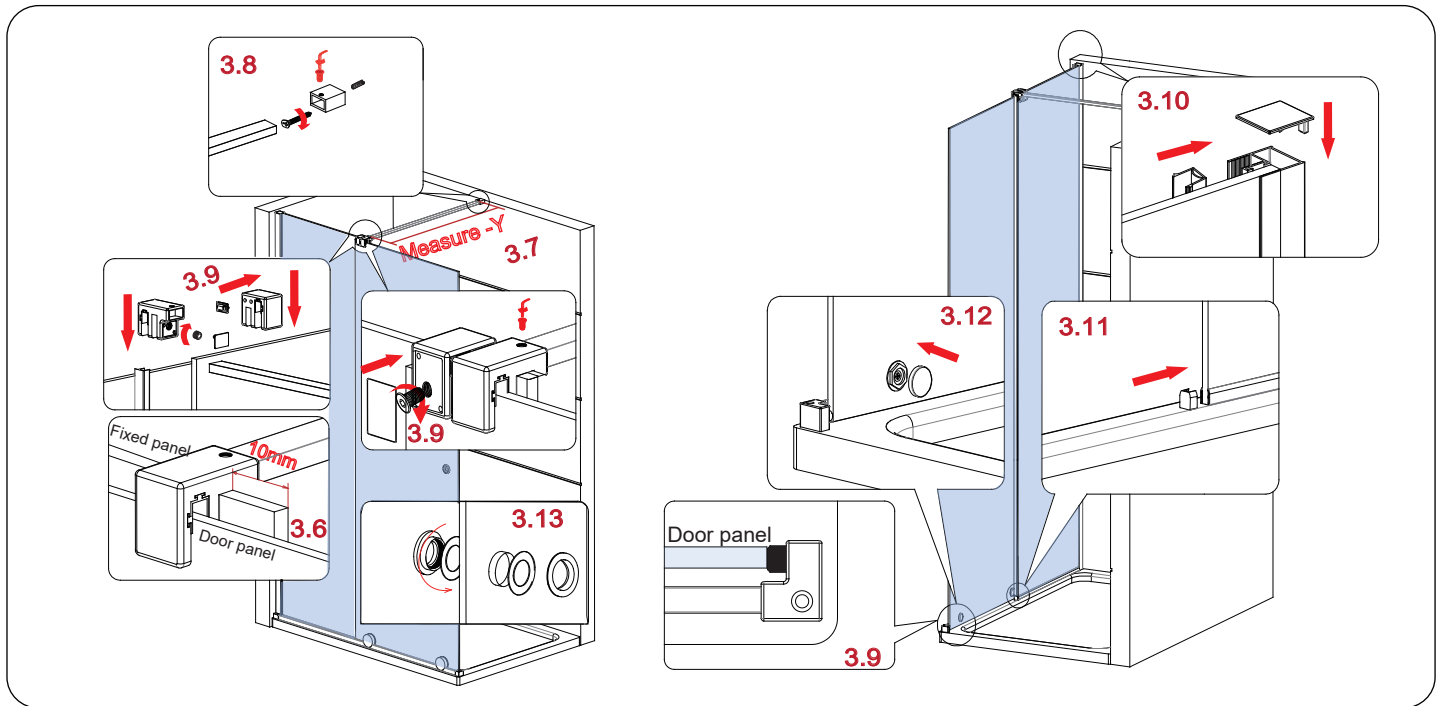

**Step 3.6** Ensure the glass clamp is in about 10mm away from the fixed panel edge(Diagram 3.6) then attach it onto the fixed panel using M10 x6 grub screw(Part 27)

**Step 3.7** Fit the support arm wall fixing onto the support arm bar and place it onto the wall in required position.Measure the dimension from the glass clamp to the wall fixing to get dimension Y.Cut the support arm to the required length X according to the formula  $X=(L-Y)+25\text{mm}$ (L is the original length of the support arm bar,1057mm)

**Step 3.8** Fit the support arm wall fixing onto the support arm bar before inserting the support arm bar onto the glass clamp, move the wall fixing to the wall and level the support arm bar, mark the position of the wall fixing onto the wall.Drill through the marked position on the wall using a 6mm masonry drill bit and insert the wall plug(part 24).Fix the wall fixing onto the wall using screw ST 4X30(Diagram 3.8).

Insert the support arm bar to the wall fixing,pull the bar out from the wall fixing to insert into the glass clamp, then secure the support arm bar together with the glass clamp and wall fixing using M5 x6 grub screws.

**Step 3.9** Fit a soft head (part 28) onto the roller stopper (part 31),then slide the door panel to ensure it touches the soft head on the bottom rail end fixing (Diagram 3.9), fit the roller stopper onto the door panel, ensure the soft head on the roller stopper touches the glass clamp then secure the roller stopper onto the door panel using M10x6 grub screw (Diagram 3.9).



**Step 3.10** Press the closing bubble seal (Part 5) into the wall profile channel, then fit the wall profile top cap(part 1) onto the wall profile(part 2)

**Step 3.11** Fit the bottom strip end cap(part 13) onto the bottom strip.(Diagram 3.11)

**Step 3.12** Press the roller screw cap to cover the screws (Diagram 3.12).


**Step 3.13** Fit the ring handle(part 20) onto the door panel. (Diagram 3.13).

**Step 3.14** Fit the cover cap onto the roller stopper and glass clamp.

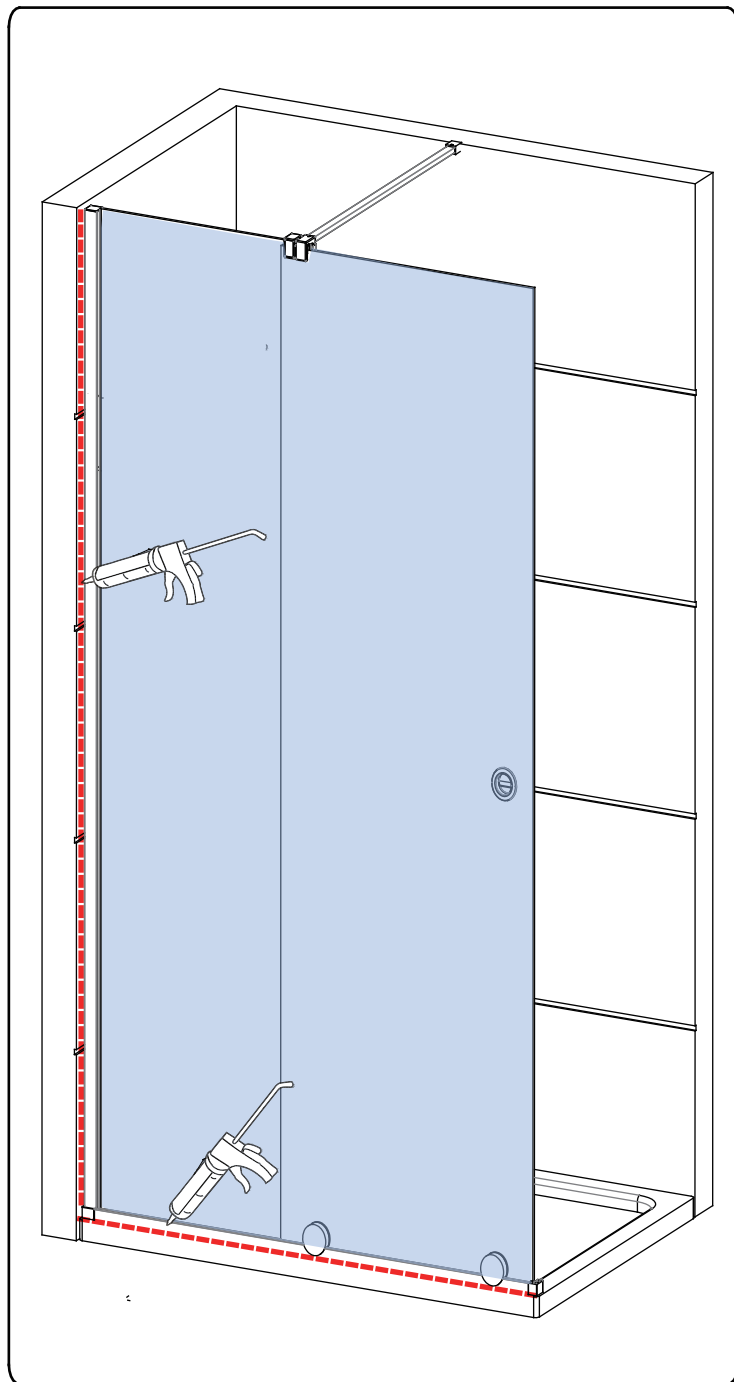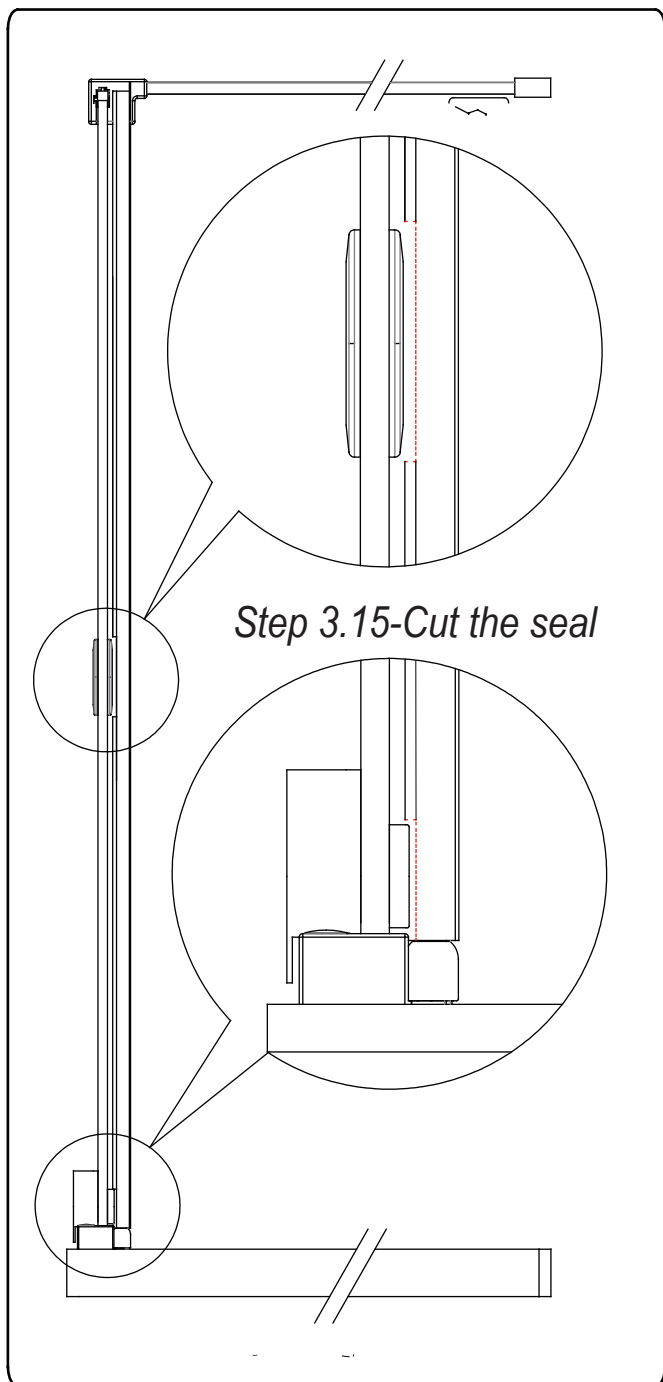

**Step 3.15** We do not recommend fitting the vertical seal (Part 7 ) onto the fixed panel as the overlap between the fixed panel and door panel will be sufficient to avoid any leaks.If you do decide to fit vertical seal please ensure you cut it as detailed in diagram 3.15. to avoid any obstruction to the handle or rollers.

**Step 3.16** Fit the wall profile top cap( Part 1) onto the wall profile.

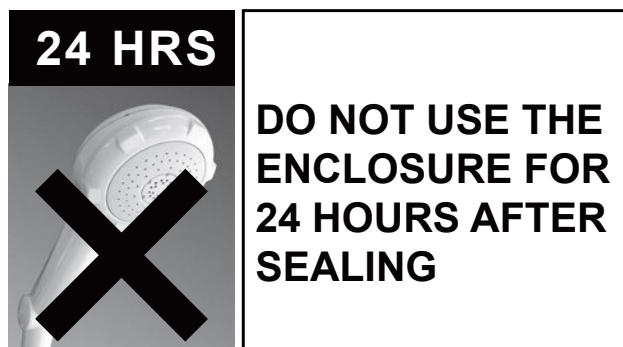

#### Applying Silicone Sealant

##### Sealing Inside

Seal from the top of the wall profile to the bottom on the **INSIDE** between the wall profile and the wall.


**IMPORTANT:** Do not apply sealant on inside of the tray.

##### Sealing Outside

Seal from the top of the wall profile to the bottom between the wall profile and tiles on both sides. Also seal along the bottom where the frame meets the tray. Seal the joints between the bottom profile and any upright profiles.

# SLIDING DOOR INSTRUCTION

## COMPONENTS AND BOX CONTENTS


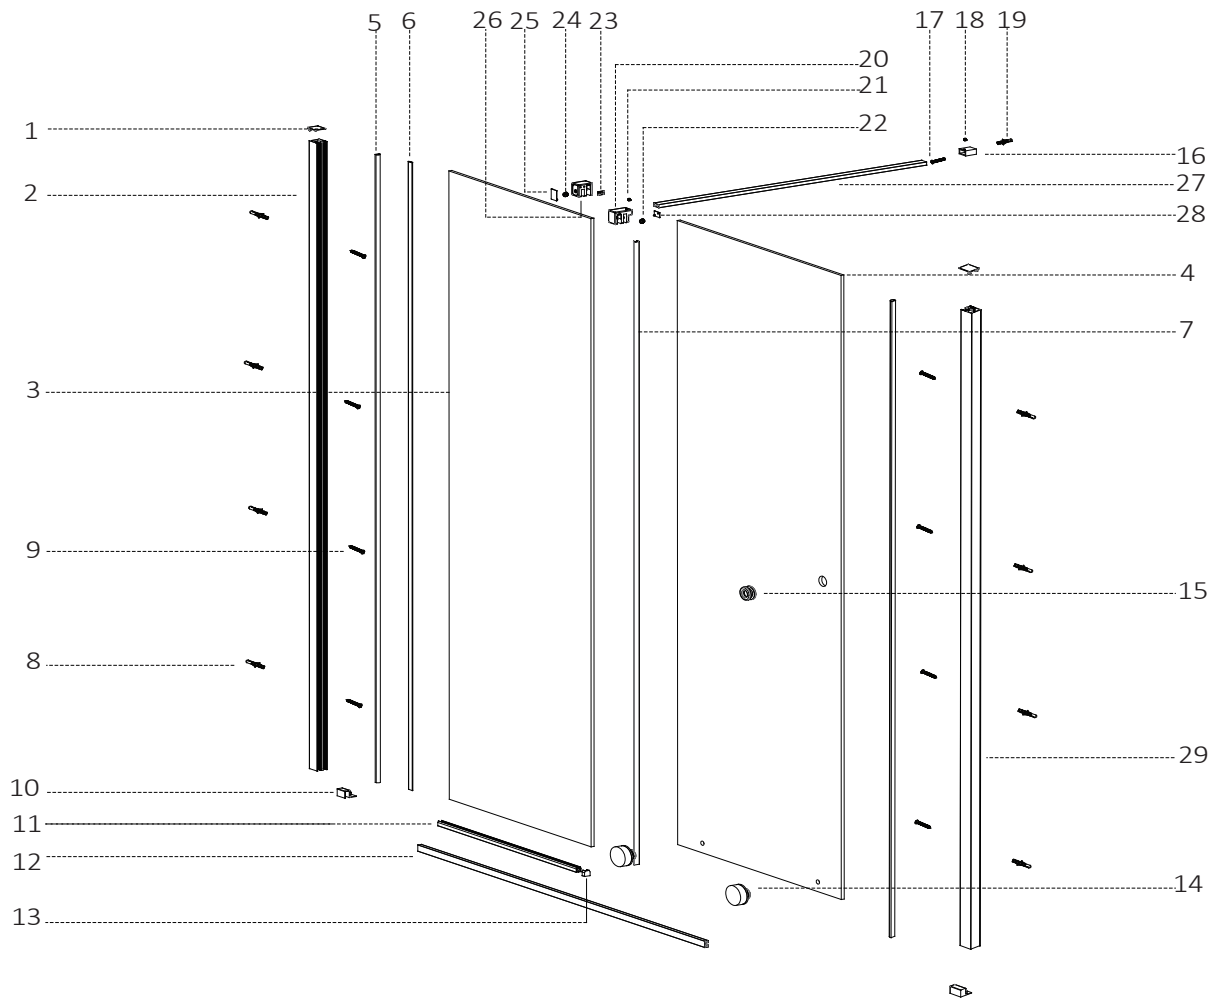


### Box Contents

No.	Description	Qty	No.	Description	Qty
1	Wall Profile Top Cap	2	16	Support Arm Wall Fixing	1
2	Fixed Panel Wall Profile	2	17	ST Screw 4x30	1
3	Fixed Panel	1	18	Allen Grub Screw M5x6	1
4	Door Panel	1	19	Wall Plug	1
5	Closing Seal	2	20	Glass Clamp	1
6	Fixed Panel Fixing Seal	1	21	Grub Screw M5x6	1
7	Vertical Seal(Optional)	1	22	Grub Screw M10x6	1
8	Wall Plug	8	23	Soft Head	1
9	ST Screw 4x30	8	24	Grub Screw M10x6	1
10	Bottom Rail End Cap (L/R)	2	25	Stopper Screw Cover	1
11	Bottom Strip	1	26	Roller Stopper(L/R)	1
12	Bottom Rail	1	27	Support Arm Tube	1
13	Bottom Strip End Cap	1	28	Glass Clamp Screw Cap	1
14	Roller Set	2	29	Closing wall profile	1
15	Handle	1			

## FIXING KIT COMPONENTS, SITE CONDITIONS SLIDING DOOR

### FIXING KIT

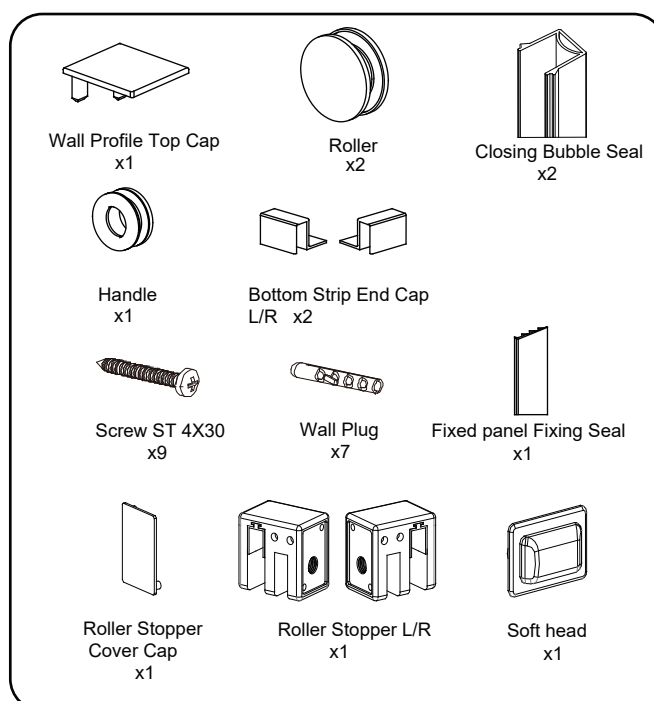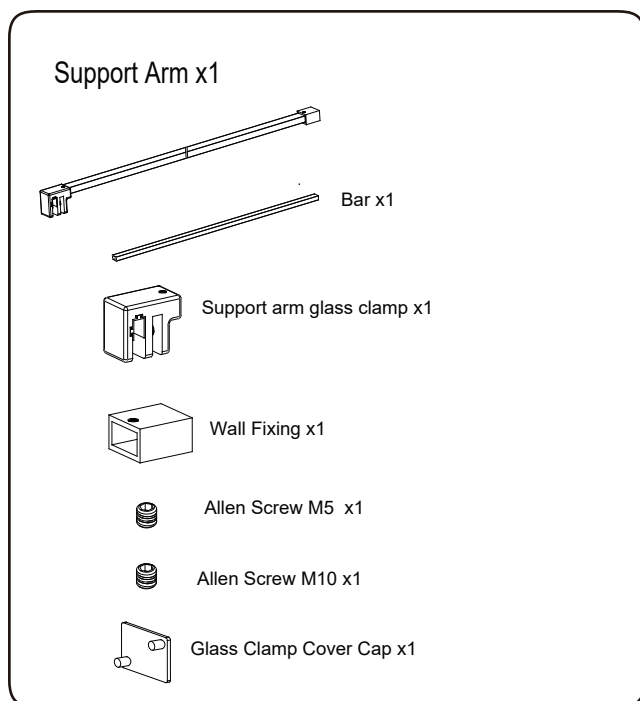

### IMPORTANT - Missing Components


Please check this product for missing components prior to installation.

For spare parts visit [www.aquadart.co.uk](http://www.aquadart.co.uk)

### IMPORTANT - Installation site

1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
2. The tiles or other wall finishing should be effectively sealed at tray edges.
3. Tiles should extend at least to the corner of the tray and a minimum of 2.0 meters from the top of the tray.



### PROCEDURE

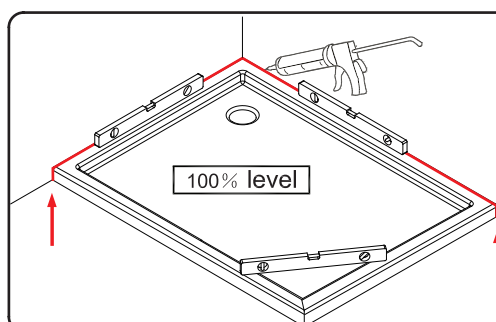


#### TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

**TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.**

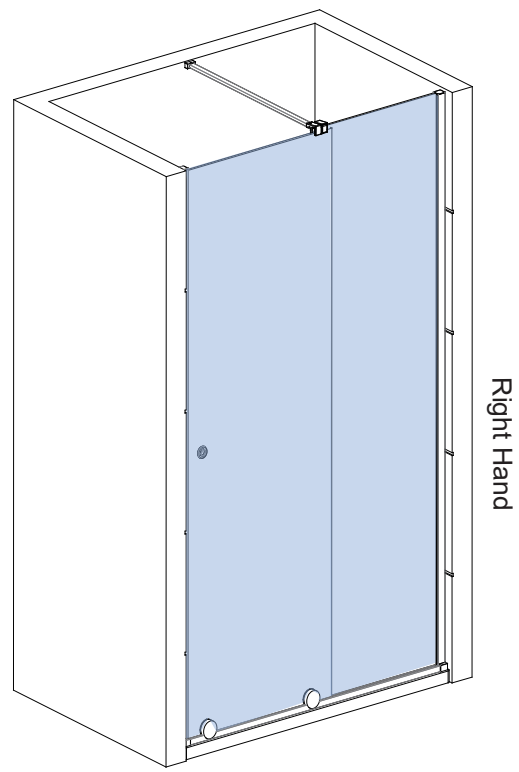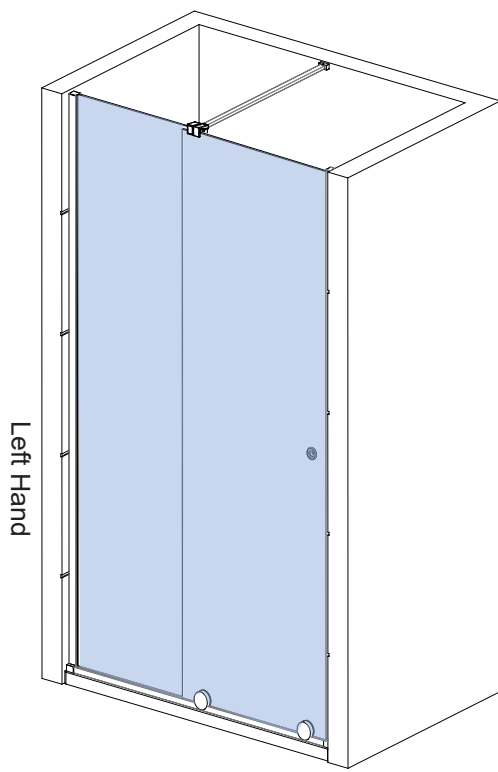

Note: The product can be constructed either way up, for left or right hand opening. This instruction is showing a Left hand opening

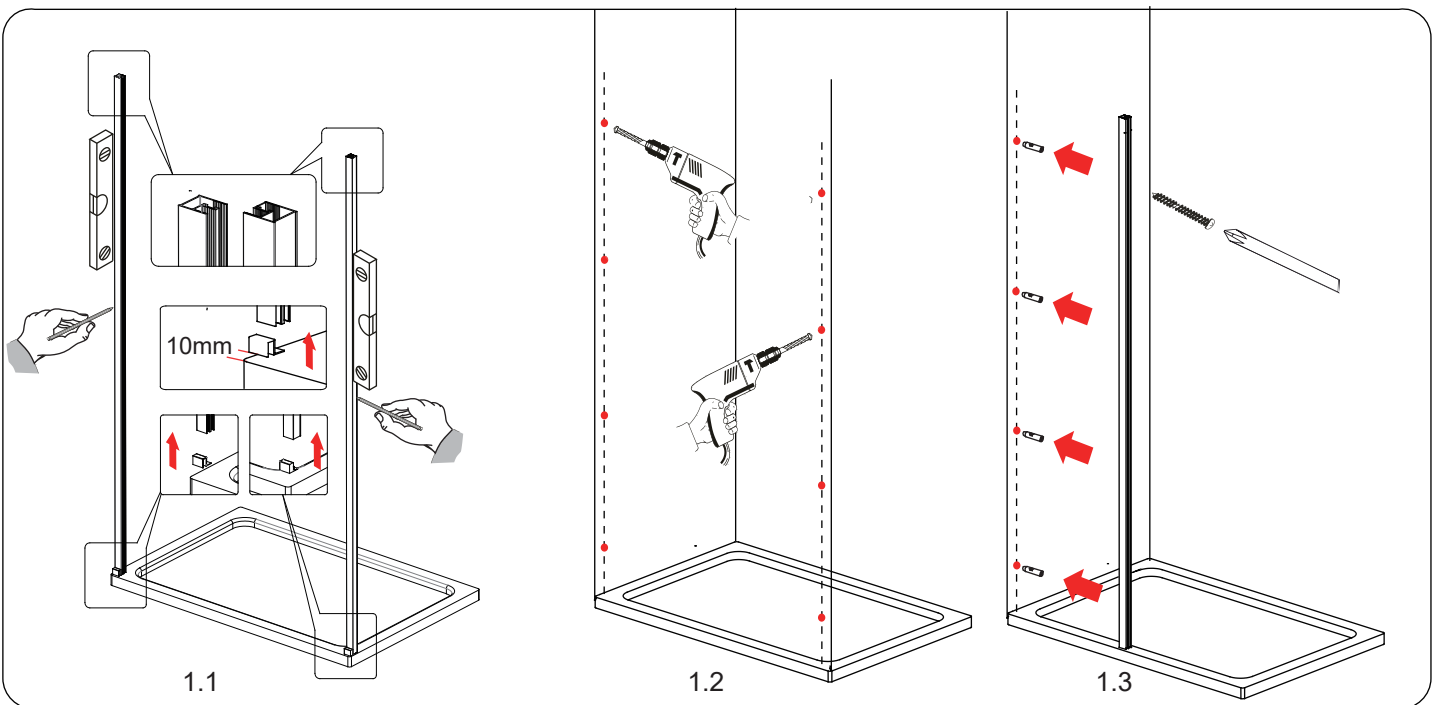


**Step 1.1** Fit the Bottom Rail End Cap L/R (Part 10) on the fixed panel wall profile (Part 2) and closing wall profile (Part 29) from the bottom. Place the wall profiles onto the tray, rough 10mm away from the front edge of the end cap. Level the wall profiles using a spirit level then mark the profile through the pre-drill holes on the wall profiles. (Diagram 1.1)


**Note:** Ensure the channel with the pre-drill holes is facing outwards when placing the Wall Profile onto the tray.

**Step 1.2** Remove the wall profiles and drill the marked points using a 6mm masonry drill bit. (Diagram 1.2)


**Step 1.3** Insert wall plugs (Part 8) then secure the fixed panel wall profile onto the wall using ST4X30 screws x4 (Part 9) (Diagram 1.3)

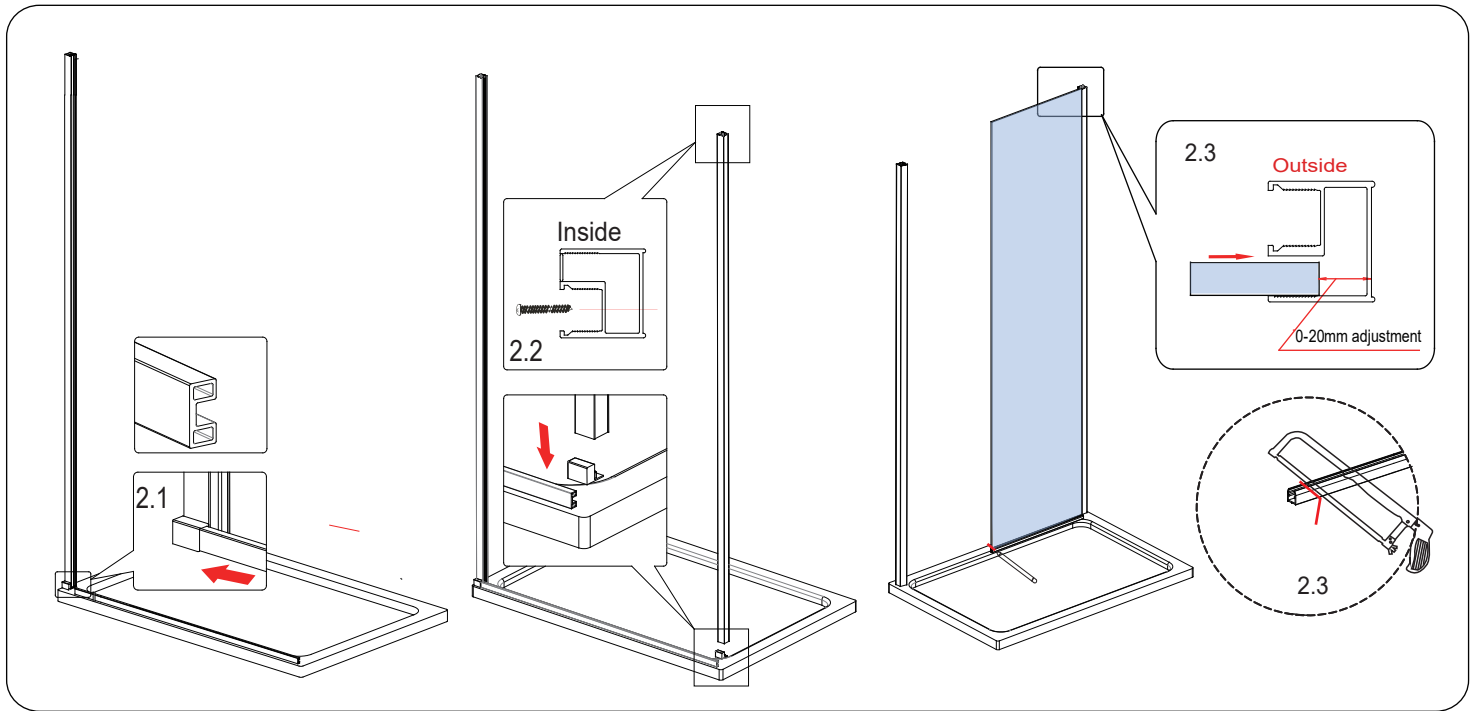

- Step 2.1** Insert the bottom rail into the end cap L(Part 10) fitted on the fixed panel wall profile (Diagram 2.1)
- Step 2.2** Press the bottom strip end cap R(part 10) onto the closing profile (part 29),then sit the closing wall profile onto the bottom rail against the holes drilled on the wall.Secure the closing wall profile onto the wall using ST 4x30 screws x4(Part 9).
- Step 2.3** Carefully lift the fixed panel (Part 3) and insert into the wall Profile groove,it allows 0-20mm for the adjustment. Once the fixed panel is in required adjustment, place the bottom strip(Part 11) onto the tray and mark a line onto the profile. Cut the profile through the marked line to get required length.(Diagram 2.3)

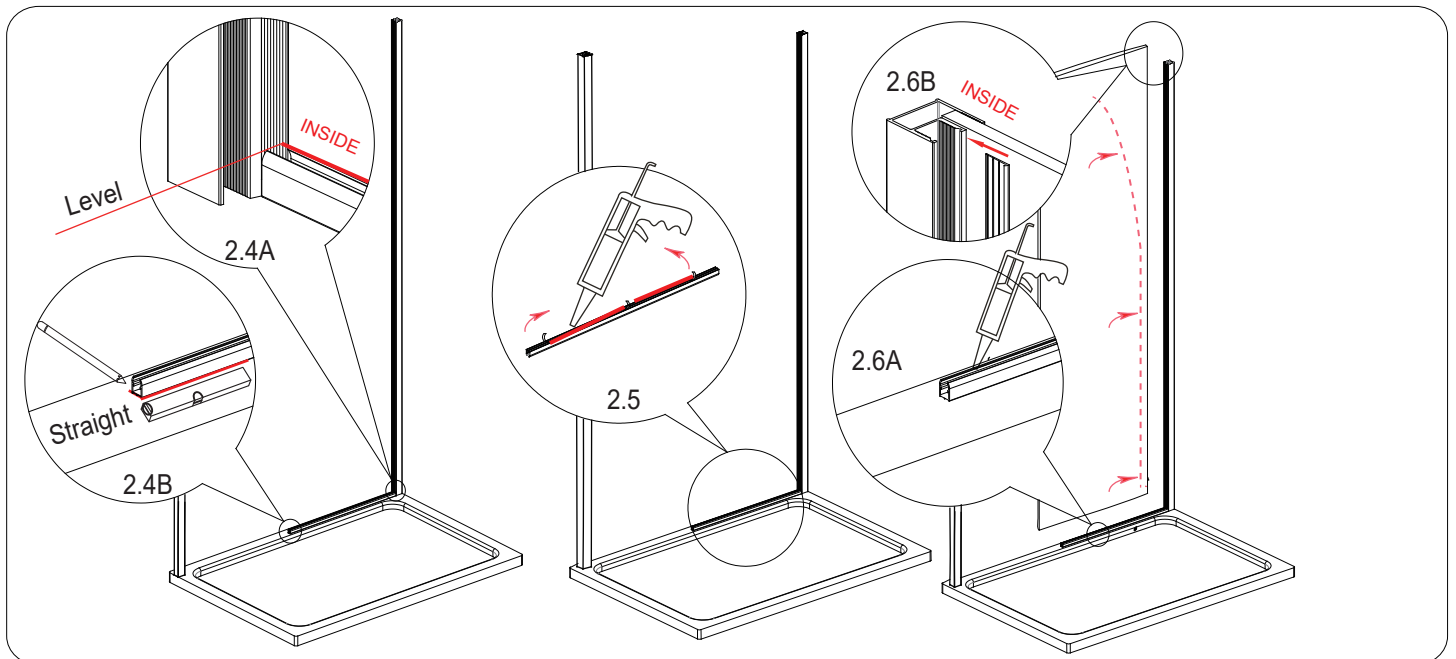


- Step 2.4** Remove the fixed panel then replace the bottom strip (Part 11) onto the tray, ensure the bottom strip groove is level to the wall profile groove on the inside face (Diagram 2.4A). Mark the line on the tray for the bottom strip position once you have ensured it is straight. (Diagram 2.4B)
- Step 2.5** Drop the silicone sealant onto the bottom side of the bottom strip,take the 3M adhesive tape back away then carefully place it onto the tray against the marked line.(Diagram 2.5)
- Step 2.6** Drop the silicone sealant into the groove of the bottom strip(Diagram 2.6A) then carefully lift the fixed panel and insert it into the bottom strip then push it onto the fixed panel wall profile.After the fixed panel has been placed at the required position insert the fixing seal from top to bottom to secure the fixed panel onto the wall profile (Diagram 2.6B).

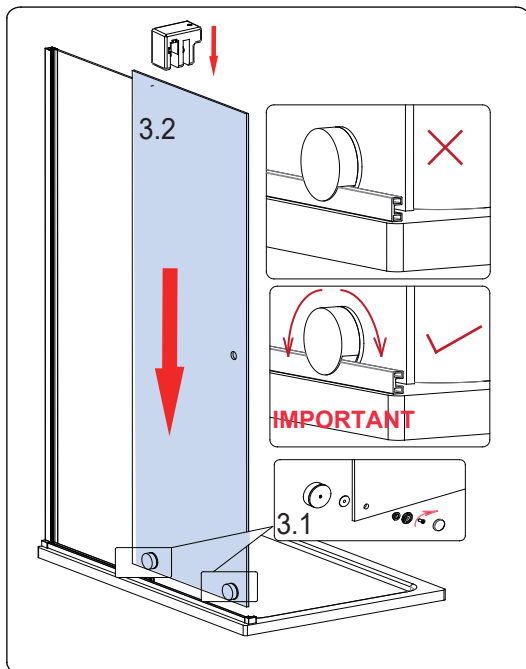

**Step 3.1** Assemble the bottom rollers onto the door panel. Ensure the gasket has been used on both faces of the glass.


**Step 3.2** Carefully lift the door panel and assemble onto the bottom rail, fit the glass clamp((part 20) to hold the fixed panel and door panel in place.

**IMPORTANT:TURN THE ROLLER BODY TO ENSURE THE EDGE OF THE CUT ON THE ROLLER BOTTOM DOES NOT TOUCH BOTTOM RAIL TOP SURFACE BEFORE SLIDING THE DOOR PANEL.**


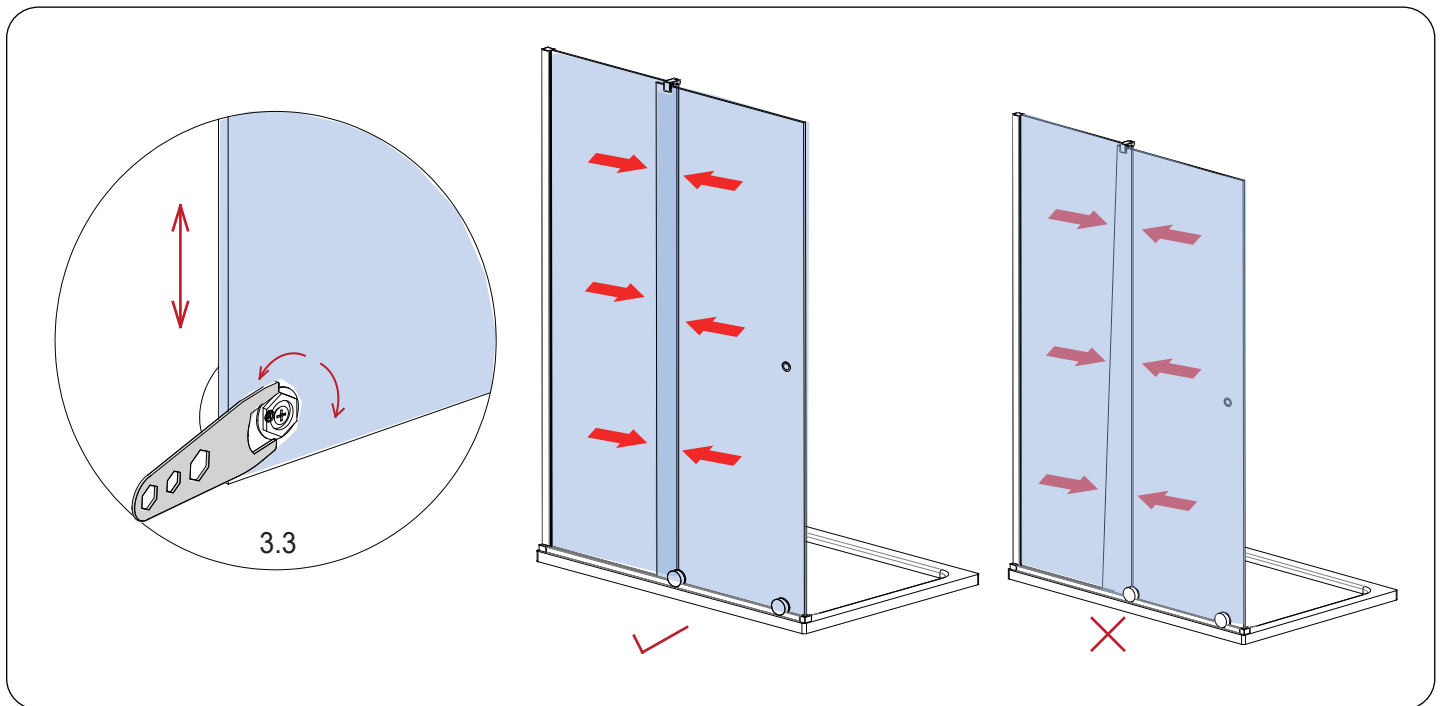


**Step 3.3** Adjust the roller to raise or lower the door panel to ensure it does not touch the ground or tray(Diagram 3.3), also ensure that the overlap of the fixed panel and door panel is equal at the top and the bottom.Slide the door panel to ensure it's running smoothly.

**Tips:**If the door panel does not run smoothly please check that the bottom rail is 100% straight,and check that the wall profile is 100% level.

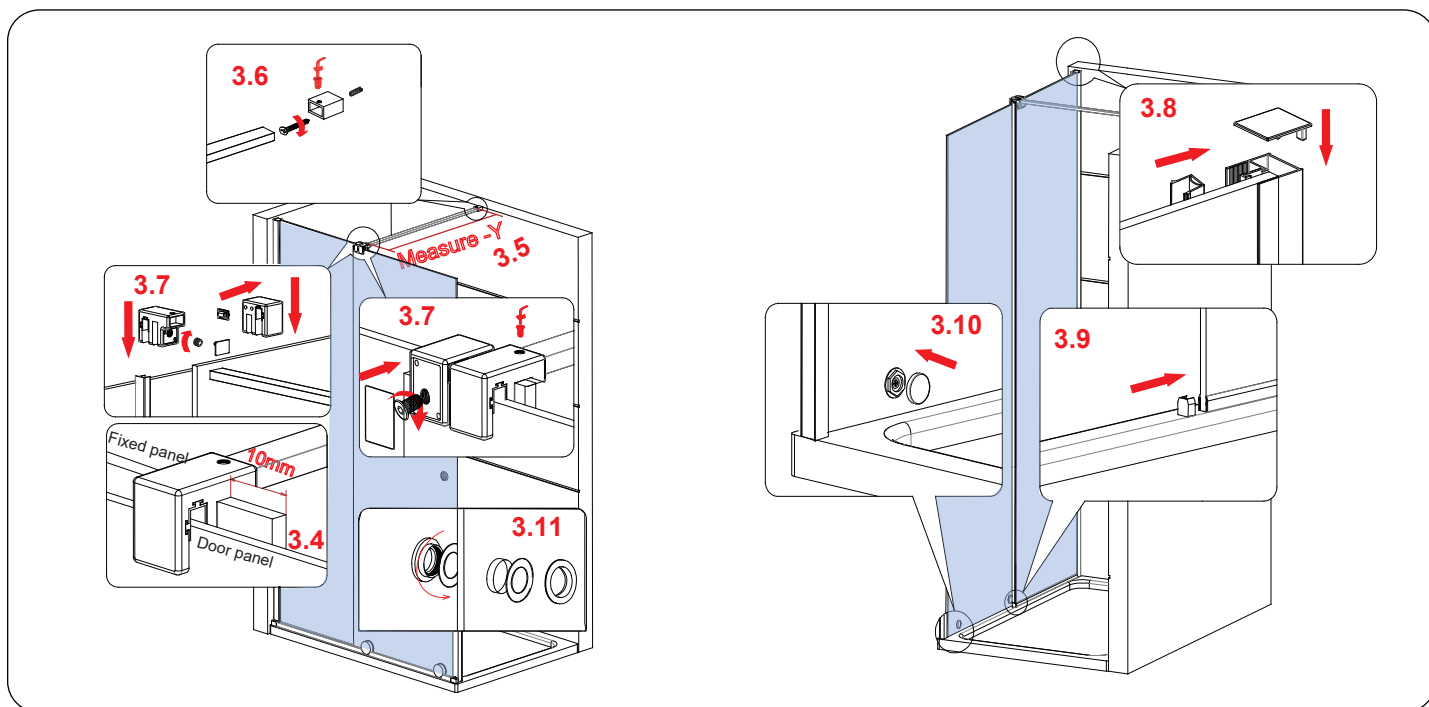

- Step 3.4** Ensure the glass clamp is in about 10mm away from the fixed panel edge(Diagram 3.4) then attach it onto the fixed panel using M10 x6 grub screw(Part 24)
- Step 3.5** Fit the support arm wall fixing onto the support arm bar and place it onto the wall in required position.Measure the dimension from the glass clamp to the wall fixing to get dimension Y.Cut the support arm to the required length X according to the formula  $X=(L-Y)+25\text{mm}$ (L is the original length of the support arm bar,1057mm)
- Step 3.6** Fit the support arm wall fixing onto the support arm bar before inserting the support arm bar onto the glass clamp, move the wall fixing to the wall and level the support arm bar, mark the position of the wall fixing onto the wall.Drill through the marked position on the wall using a 6mm masonry drill bit and insert the wall plug(part 19).Fix the wall fixing onto the wall using screw ST 4X30(Diagram 3.6).
- Step 3.7** Insert the support arm bar to the wall fixing,pull the bar out from the wall fixing to insert into the glass clamp, then secure the support arm bar together with the glass clamp and wall fixing using M5 x6 grub screws. Fit a soft head (part 23) onto the roller stopper (part 26),then slide the door panel to ensure it runs into the closing wall profile fully,fit the roller stopper onto the door panel, ensure the soft head on the roller stopper touches the glass clamp then secure the roller stopper onto the door panel using M10x6 grub screw(Diagram 3.7)
- Step 3.8** Press the closing seal (Part 5) into the fixed panel wall profile and closing wall profile,then fit the wall profile top caps (Diagram 3.8)
- Step 3.9** Fit the bottom strip end cap(part 13) onto the bottom strip.(Diagram 3.9)
- Step 3.10** Press the roller screw cap to cover the screws (Diagram 3.10).
- Step 3.11** Fit the ring handle(part 15) onto the door panel. (Diagram 3.11).
- Step 3.12** Fit the cover cap onto the roller stopper and glass clamp.

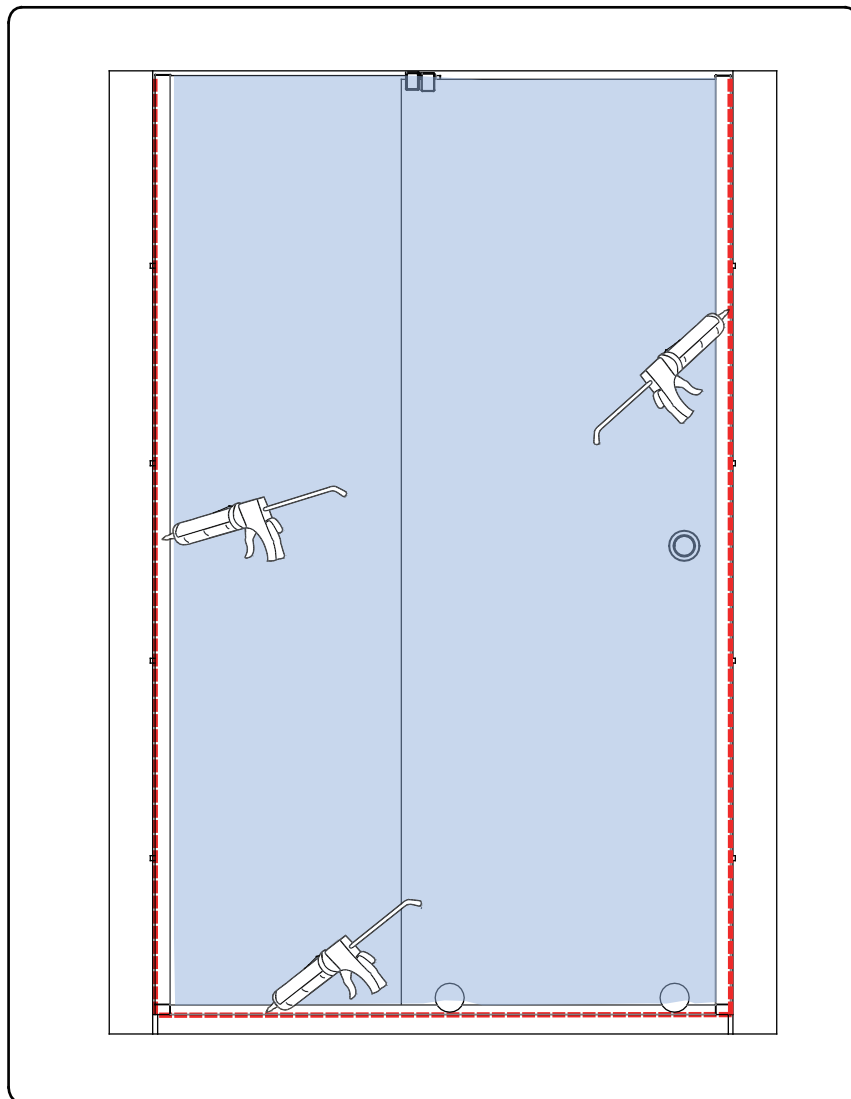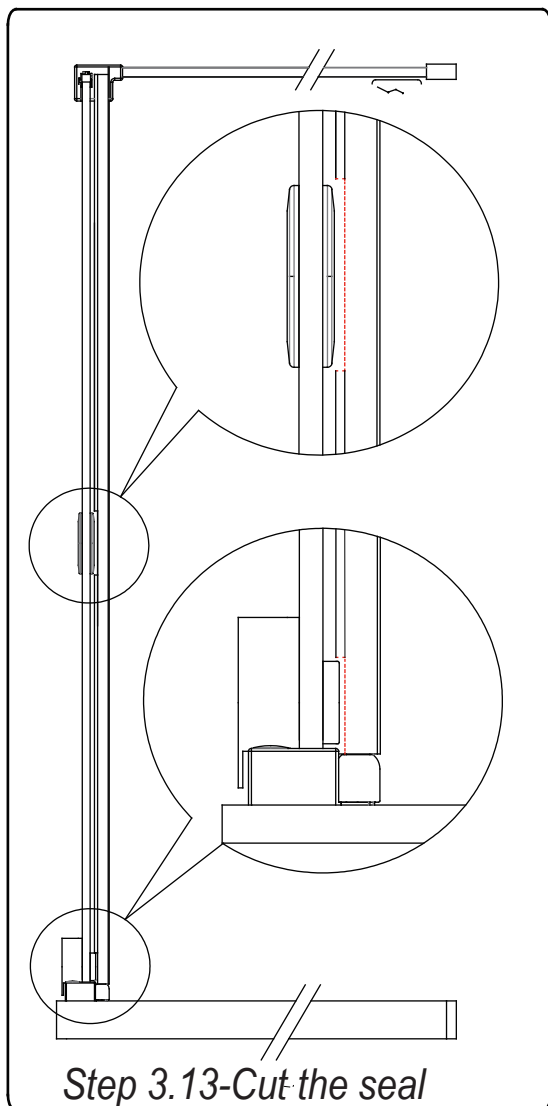

**Step 3.13** We do not recommend fitting the vertical seal (Part 7 ) onto the fixed panel as the overlap between the fixed panel and door panel will be sufficient to avoid any leaks.If you do decide to fit vertical seal please ensure you cut it as detailed in diagram 3.15. to avoid any obstruction to the handle or rollers.



**24 HRS**

**DO NOT USE THE  
ENCLOSURE FOR  
24 HOURS AFTER  
SEALING**

#### Applying Silicone Sealant

##### Sealing Inside

Seal from the top of the wall profile to the bottom on the **INSIDE** between the wall profile and the wall.


**IMPORTANT:** Do not apply sealant on inside of the tray.

##### Sealing Outside

Seal from the top of the wall profile to the bottom between the wall profile and tiles on both sides. Also seal along the bottom where the frame meets the tray. Seal the joints between the bottom profile and any upright profiles.

# SLIDING ENCLOSURE INSTRUCTION

## COMPONENTS AND BOX CONTENTS


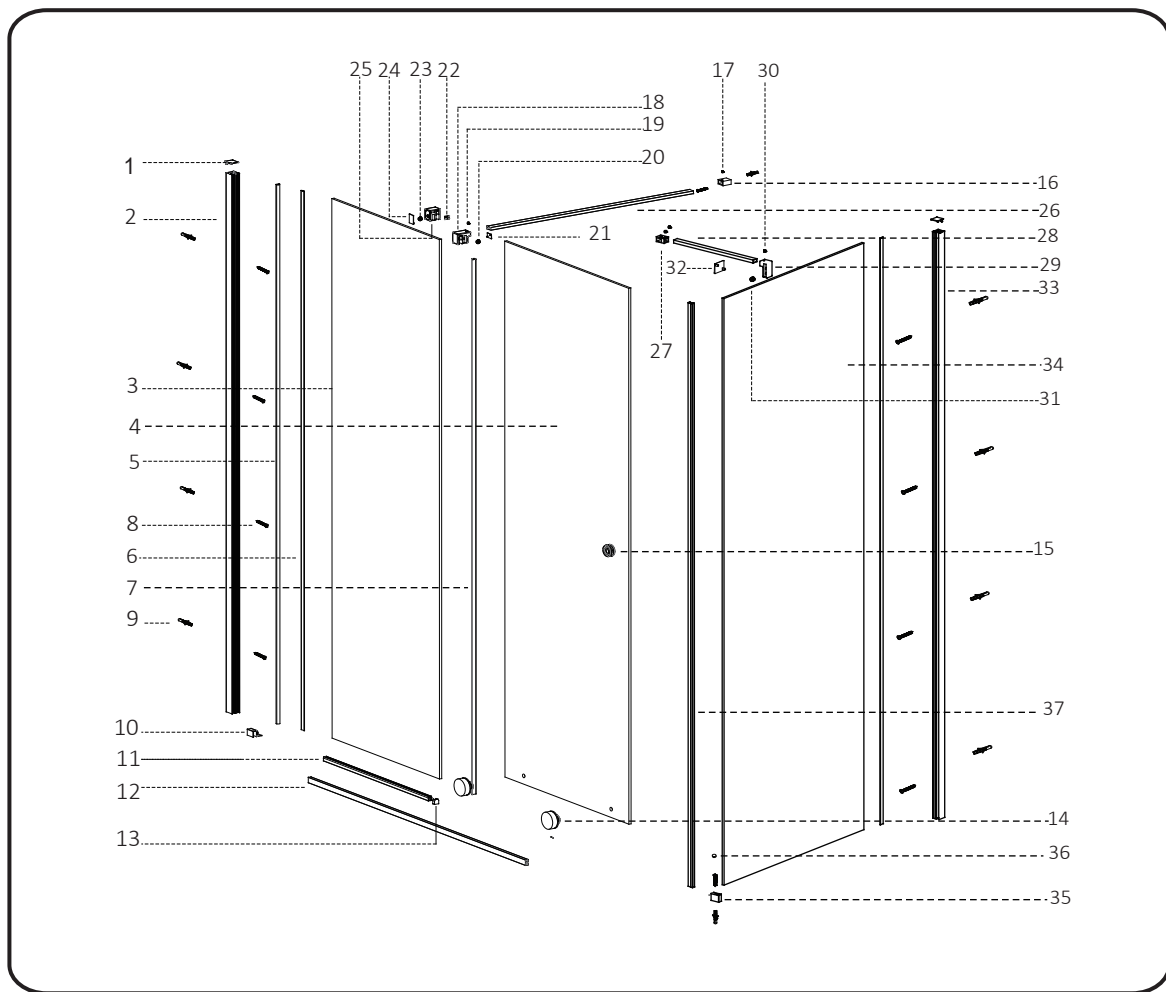


### Box Contents



No.	Description	Qty	No.	Description	Qty
1	Wall Profile Top Cap	2	20	Grub Screw M10 x6	1
2	Wall Profile	2	21	Glass Clamp Screw Cap	1
3	Fixed Panel	1	22	Soft Head	1
4	Door Panel	1	23	Grub Screw M10x6	1
5	Closing Seal	1	24	Stopper Screw Cover	1
6	Fixed Panel Fixing Seal	1	25	Roller Stopper(L/R)	1
7	Vertical Seal(Optional)	1	26	Support Arm Tube	1
8	Wall Plug	10	27	T Piece	1
9	ST Screw 4x30	10	28	Support Arm Tube	1
10	Bottom Rail End Cap (L/R)	2	29	Glass Clamp(Side Panel)	1
11	Bottom Strip	1	30	Allen Grub Screw M5x6	1
12	Bottom Rail	1	31	Grub Screw M10 x6	1
13	Bottom Strip End Cap	1	32	Glass Clamp (Side Panel) Screw Cap	1
14	Roller Set	2	33	Side Panel Wall Profile	2
15	Handle	1	34	Side Panel Glass	1
16	Support Arm Wall Fixing	1	35	Side Panel Bottom Fixing	1
17	Allen Grub Screw M5x6	1	36	Round Cover Cap	1
18	Glass Clamp	1	37	Bubble Seal	1
19	Grub Screw M5x6	1			

## FIXING KIT COMPONENTS, SITE CONDITION SLIDING ENCLOSURE

### FIXING KIT-SLIDING WETROOM

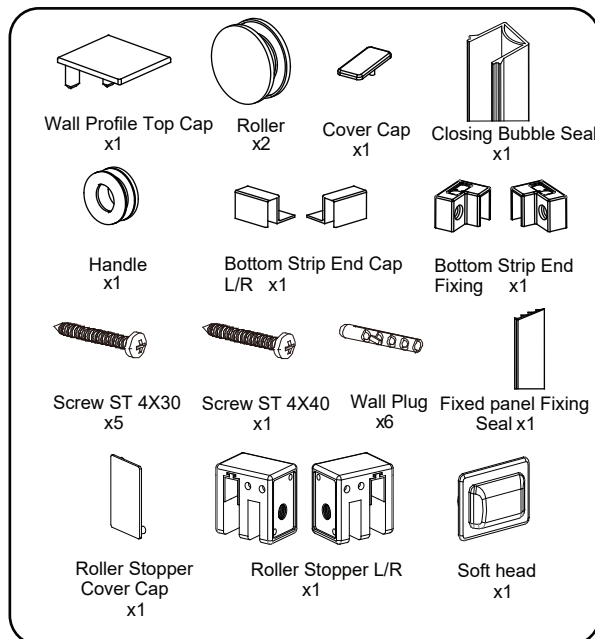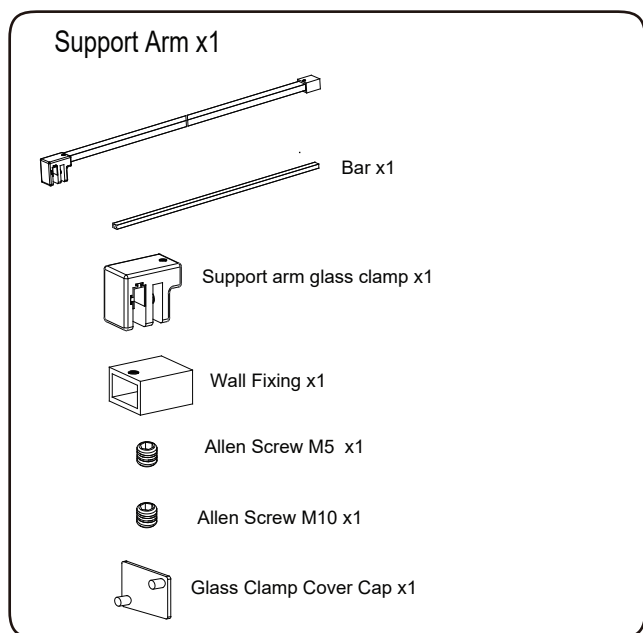

### FIXING KIT-SIDE PANEL

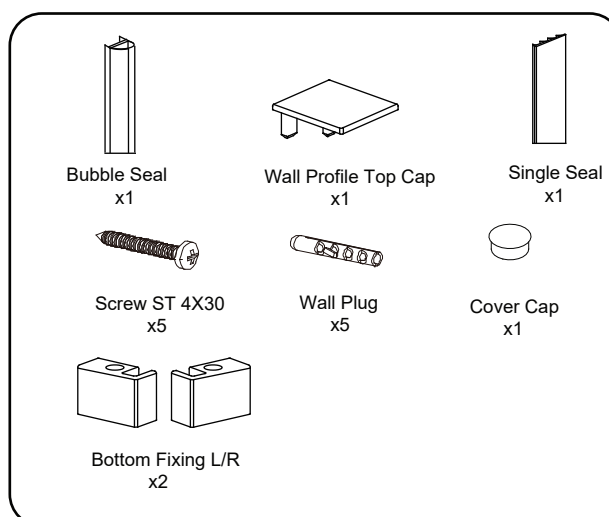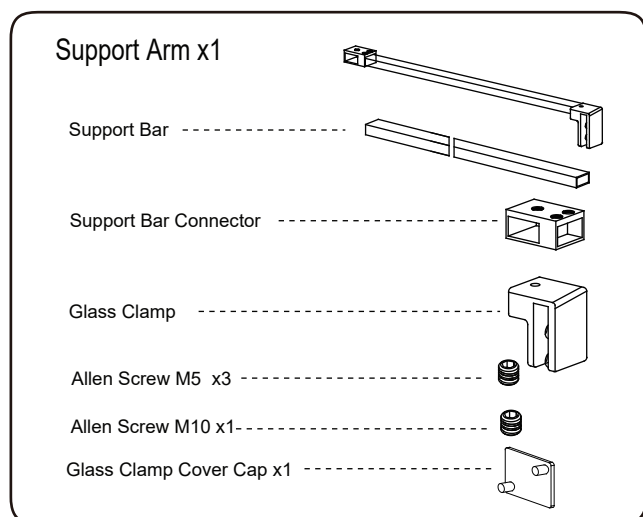

### IMPORTANT - Missing Components


Please check this product for missing components prior to installation.

For spare parts visit [www.aquadart.co.uk](http://www.aquadart.co.uk)

### IMPORTANT - Installation site

1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
2. The tiles or other wall finishing should be effectively sealed at tray edges.
3. Tiles should extend at least to the corner of the tray and a minimum of 2.0 meters from the top of the tray.


### PROCEDURE

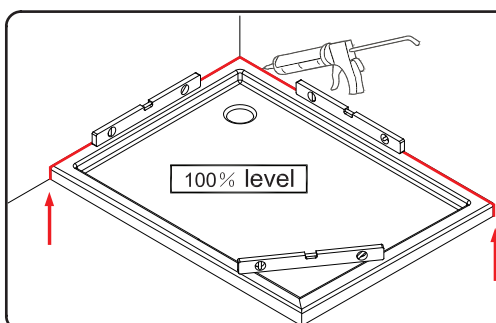


#### TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

**TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.**

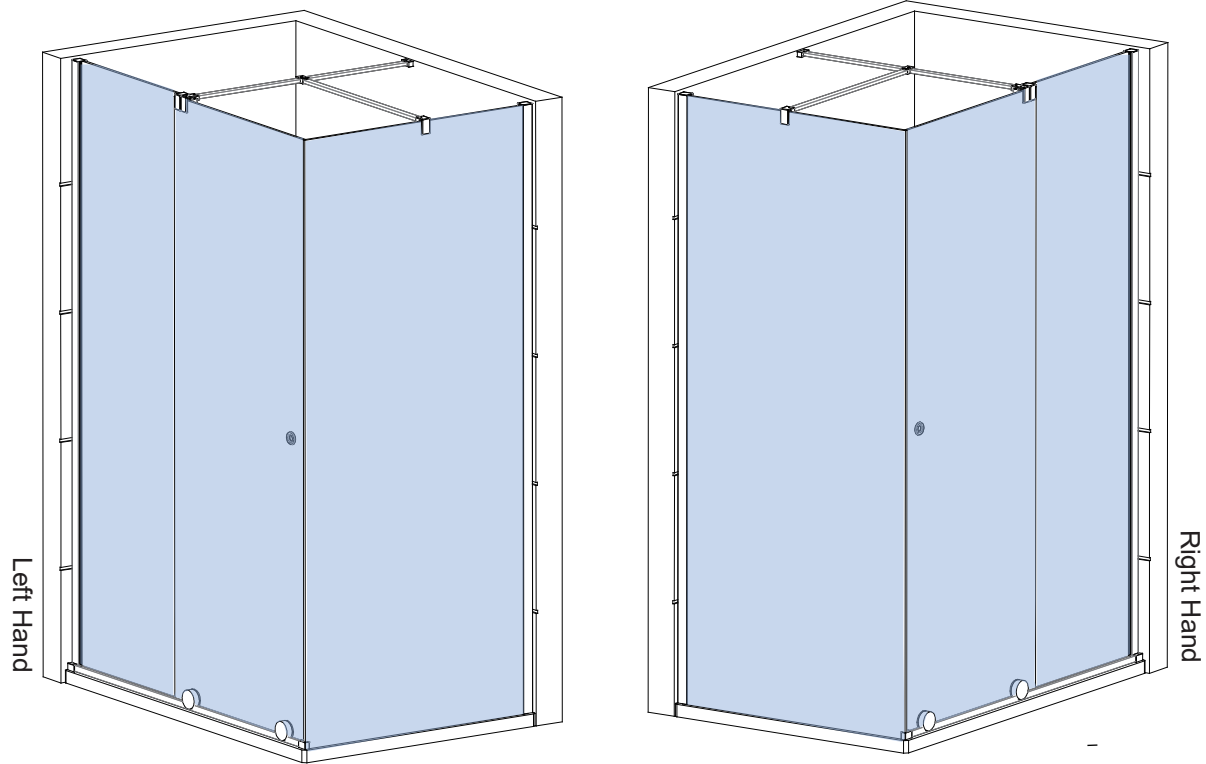

Note: The product can be constructed either way up, for left or right hand opening. This instruction is showing a Left hand opening

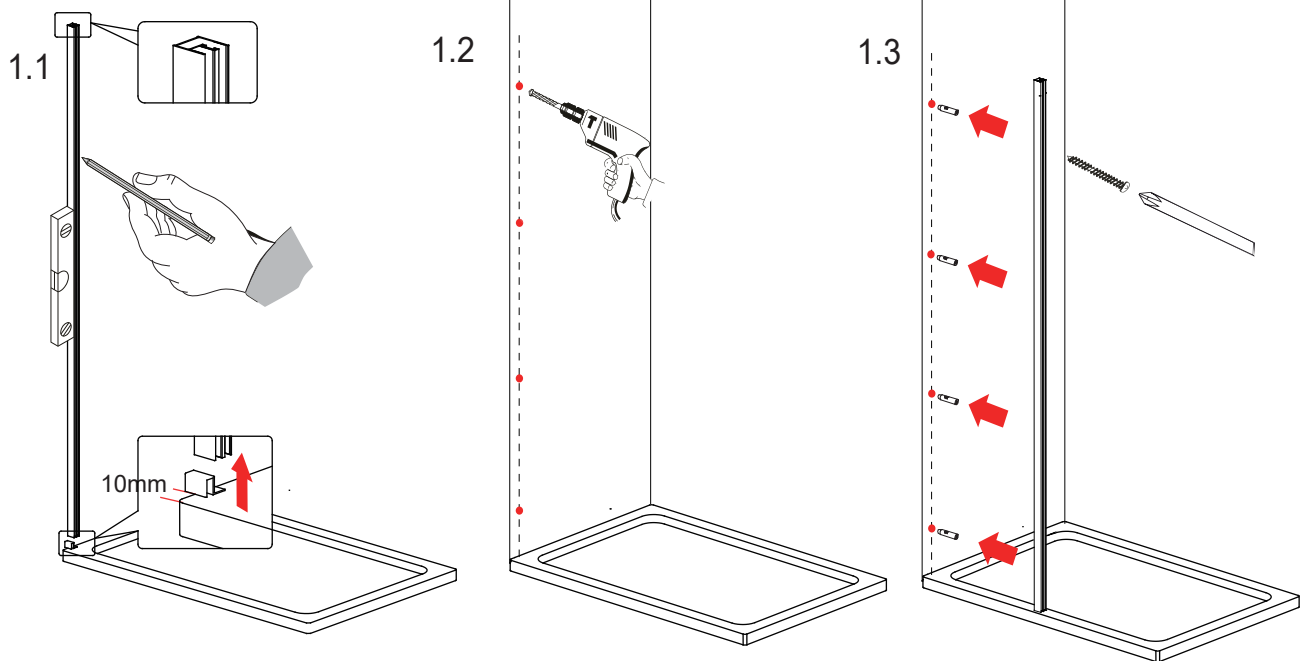


**Step 1.1** Fit the Bottom Rail End Cap L/R (Part 10) on the wall profile (Part 2) from the bottom. Place the Wall Profile onto the tray, roughly 10mm away from the front edge of the end cap. Level the Wall Profile using a spirit level then mark the profile through the pre-drill holes on the Wall Profile. (Diagram 1.1).


**Note:** Ensure the channel with the pre-drill holes is facing outwards when placing the Wall Profile onto the tray.

**Step 1.2** Remove the wall profile and drill the marked points using a 6mm masonry drill bit. (Diagram 1.2)

**Step 1.3** Insert wall plugs (Part 8) then secure the wall profile onto the wall using ST4X30 screws x4 (Part 9) (Diagram 1.3)

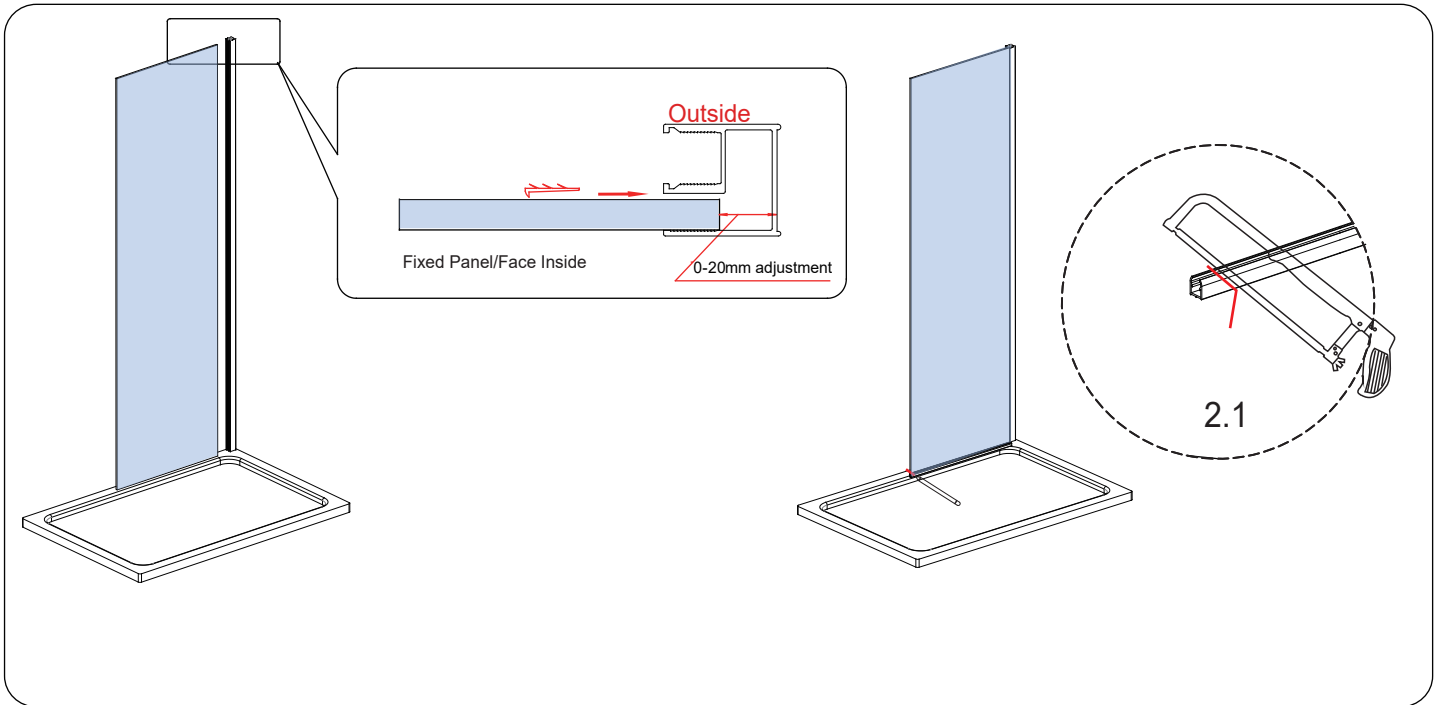


**Step 2.1** Carefully lift the fixed panel (Part 3) and insert into the wall Profile groove, it allows 0-20mm for the adjustment. Once the fixed panel is in required adjustment, place the bottom strip (Part 11) onto the tray and mark a line onto the profile. Cut the profile through the marked line to get required length. (Diagram 2.1)

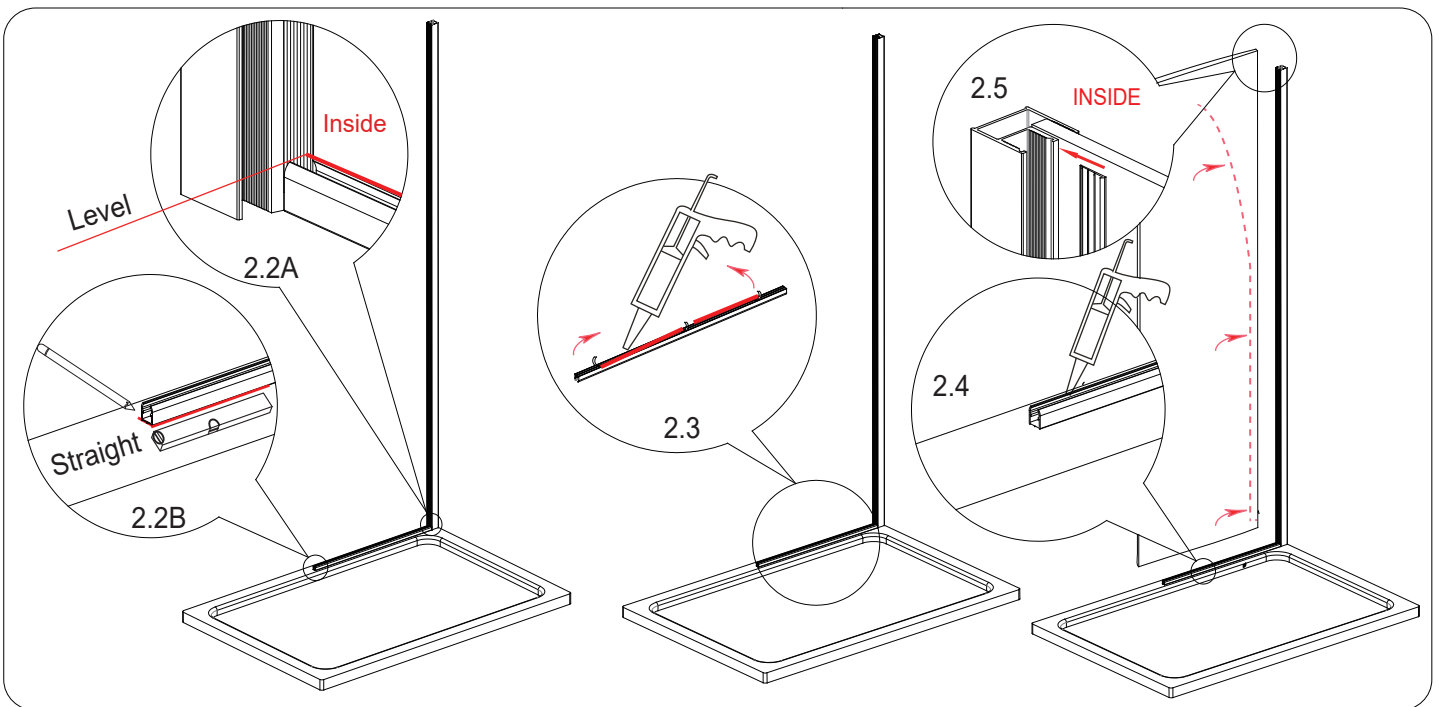

**Step 2.2** Remove the fixed panel then replace the bottom strip (Part 11) onto the tray, ensure the bottom strip groove is level to the wall profile groove on the inside face (Diagram 2.2A). Mark the line on the tray for the bottom strip position once you have ensured it is straight. (Diagram 2.2B)

**Step 2.3** Drop the silicone sealant onto the bottom side of the bottom strip, take the 3M adhesive tape back away then carefully place it onto the tray against the marked line. (Diagram 2.3)


**Step 2.4** Drop the silicone sealant into the groove of the bottom strip (Diagram 2.4) then carefully lift the fixed panel and insert it into the bottom strip then push it onto the wall profile. After the fixed panel has been placed at the required position insert the fixing seal from top to bottom to secure the fixed panel onto the wall profile. (Diagram 2.5)

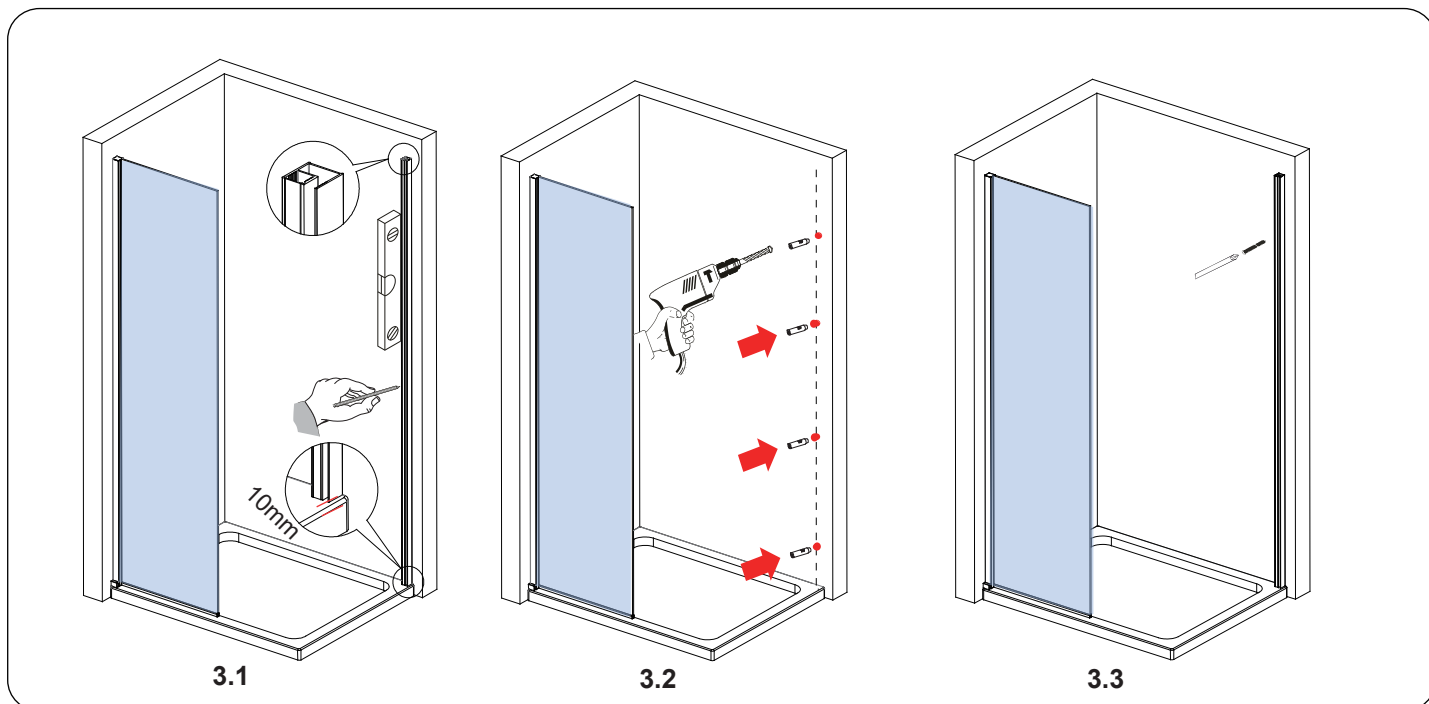

**Step 3.1** Place the side panel Wall Profile (part 33) onto the tray, roughly 10mm away from the front edge of the end cap. Level the wall profile using a spirit level then mark the profile through the pre-drill holes on the wall profile (Diagram 3.1)

**Step 3.2** Remove the wall profile and drill the marked points using a 6mm masonry drill bit, once this is done insert the wall plugs. (Diagram 3.2)


**Step 3.3** Secure the wall profile onto the wall using ST4X30 screw x4. (Diagram 3.3)

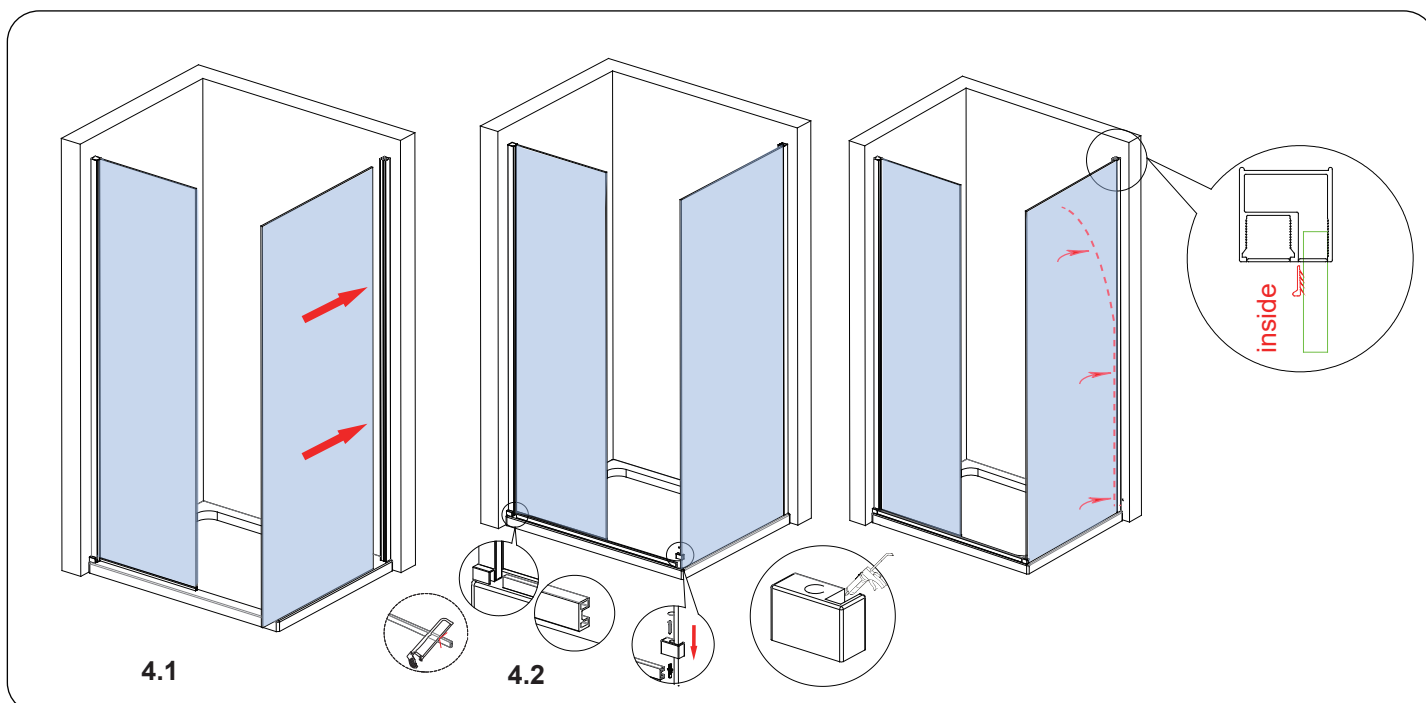

**Step 4.1** Carefully lift the Side Panel Glass (Part 34) onto the tray, insert it into the wall profile channel. It allows 20mm for the adjustment. (Diagram 4.1)

**Step 4.2** Cut the bottom rail (part 12) 25mm away then insert it into the end cap L (Part 10) fitted on the fixed panel wall profile. Drop a little bit silicone sealant into the groove of the side panel bottom fixing (part 35), then fit it onto the side panel glass and bottom rail, drill the hole on the tray/floor then insert the wall plug, attached it onto the tray/floor using screw ST 4X30. (Diagram 4.2)


**Step 4.3** Insert the fixing seal from top to bottom to fix the side panel glass onto the wall profile from inside of the enclosure.

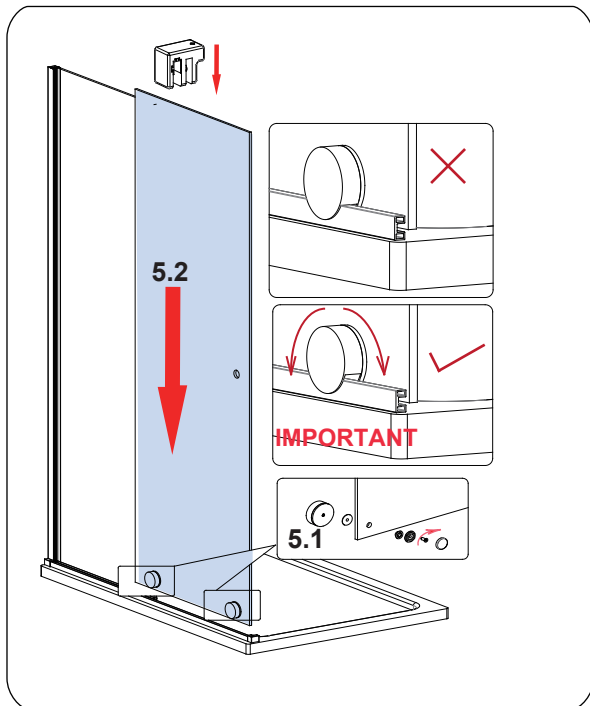

**Step 5.1** Assemble the bottom rollers onto the door panel, ensure the gasket has been used on both faces of the glass. (Diagram 5.1)



**Step 5.2** Carefully lift the door panel and assemble onto the bottom rail, fit the glass clamp (part 18) to hold the fixed panel and door panel in place.

**IMPORTANT: TURN THE ROLLER BODY TO ENSURE THE EDGE OF THE CUT ON THE ROLLER BOTTOM DOES NOT TOUCH BOTTOM RAIL TOP SURFACE BEFORE SLIDING THE DOOR PANEL.**

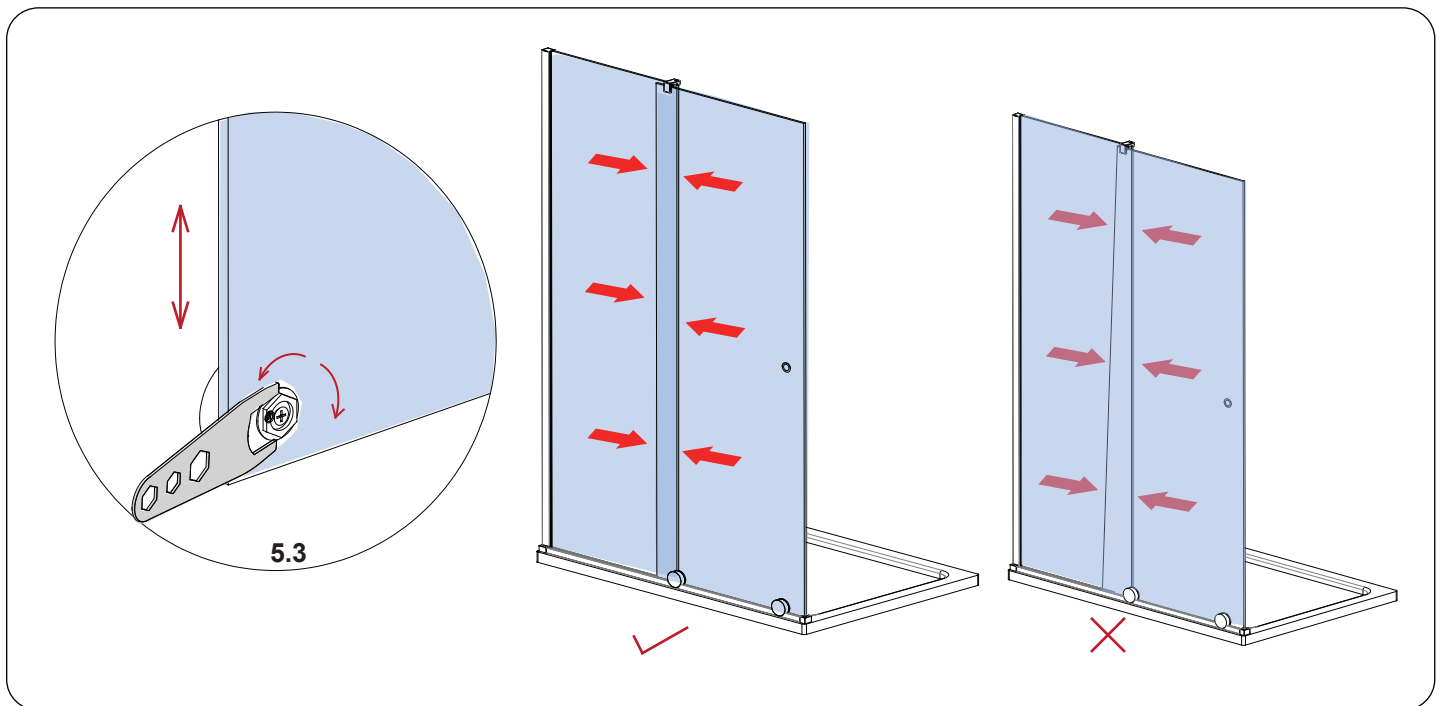

**Step 5.3** Adjust the roller to raise or lower the door panel to ensure it does not touch the ground or tray (Diagram 5.3), also ensure that the overlap of the fixed panel and door panel is equal at the top and the bottom. Slide the door panel to ensure it's running smoothly.


**Tips: If the door panel does not run smoothly please check that the bottom rail is 100% straight, and check that the wall profile is 100% level.**

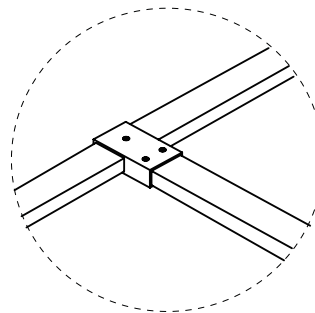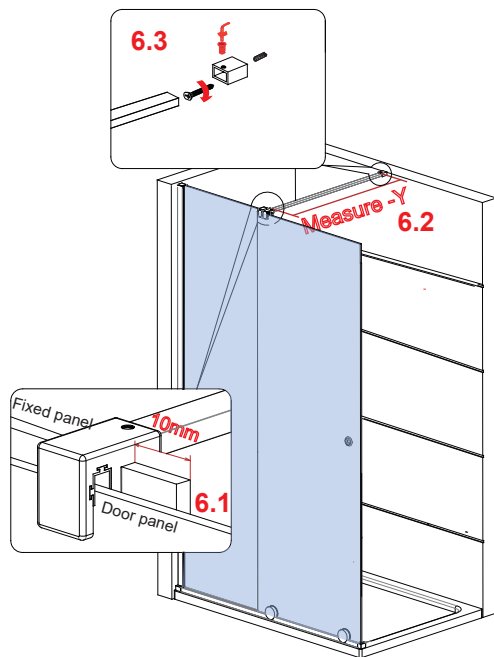


T-piece connector for side panel support bar

- Step 6.1** Ensure the glass clamp is in about 10mm away from the fixed panel edge(Diagram 6.1) then attach it onto the fixed panel using M10 x6 grub screw(Part 20)
- Step 6.2** Fit the support arm wall fixing onto the support arm bar and place it onto the wall in required position.Measure the dimension from the glass clamp to the wall fixing to get dimension Y.Cut the support arm to the required length X according to the formula  $X=(L-Y)+25\text{mm}$ (L is the original length of the support arm bar,1057mm)
- Step 6.3** Fit the support arm wall fixing onto the support arm bar before inserting the support arm bar onto the glass clamp, move the wall fixing to the wall and level the support arm bar, mark the position of the wall fixing onto the wall.Drill through the marked position on the wall using a 6mm masonry drill bit and insert the wall plug(part 8).Fix the wall fixing onto the wall using screw ST 4X30(Diagram 6.3).

Insert the T-piece (part 27) onto the support arm bar then insert the support arm bar to the wall fixing,pull the bar out from the wall fixing to insert into the glass clamp, then secure the support arm bar together with the glass clamp and wall fixing using M5x6 grub screws.

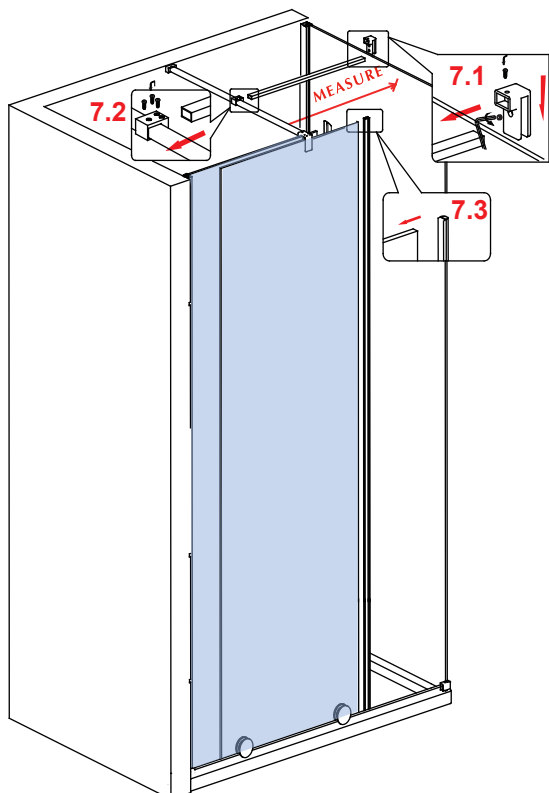

- Step 7.1** Measure the support bar tube length then cut it to the required size,fit the Glass Clamp(Part 29) onto the side panel then secure it onto the side panel using a M10 grub screw(Diagram 7.1)
- Step 7.2** Fit the support bar tube onto the Glass clamp and T piece(part 27) then secure them to each other using M5 grub screws(Diagram 7.2)
- Step 7.3** Stick the Bubble Seal (Part 37) onto the door panel(Diagram 7.3)

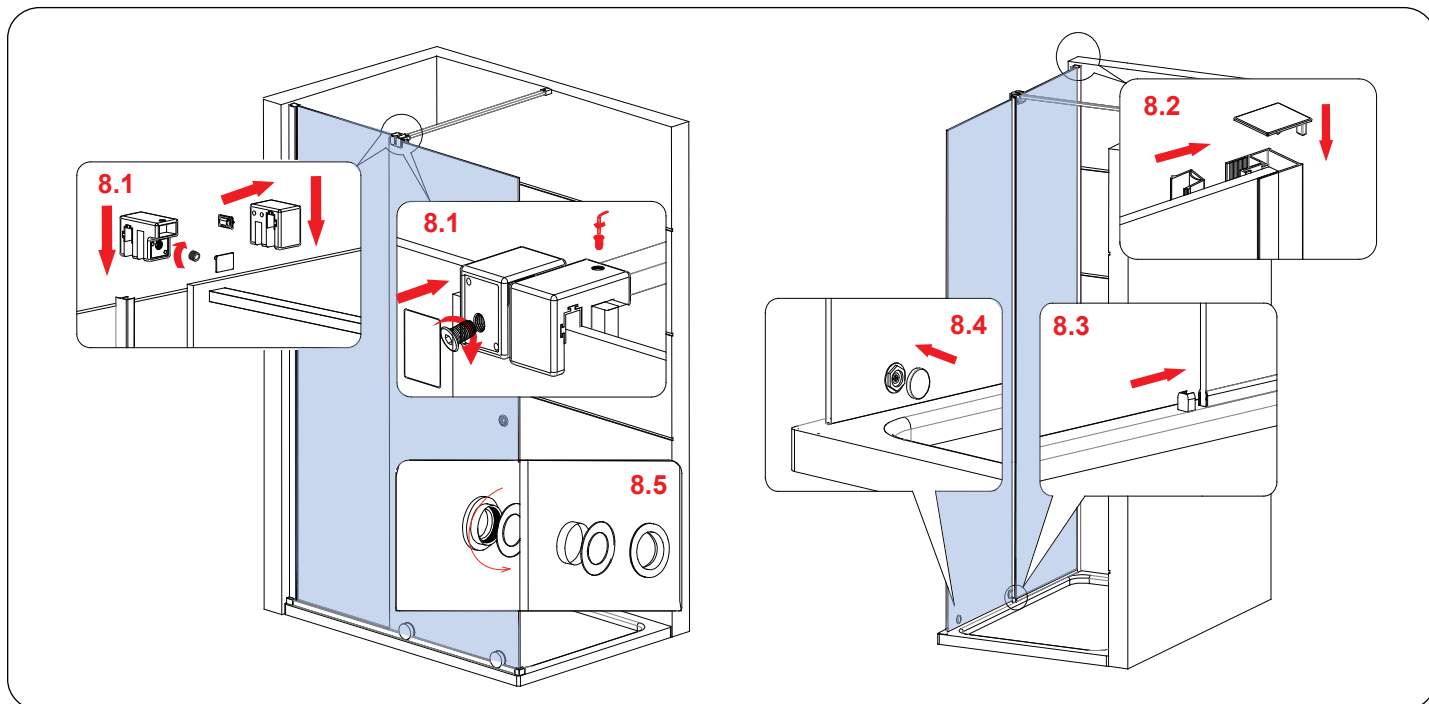

**Step 8.1** Fit a soft head (part 22) onto the roller stopper (part 25), then slide the door panel to ensure it touches the side panel glass, fit the roller stopper onto the door panel, ensure the soft head on the roller stopper touches the glass clamp then secure the roller stopper onto the door panel using M10x6 grub screw (Diagram 8.1)

**Step 8.2** Press the closing seal (Part 5) into the wall profile channel, then fit the wall profile top caps (part 1) onto the wall profiles (Diagram 8.2)


**Step 8.3** Fit the bottom strip end cap (part 13) onto the bottom strip. (Diagram 8.3)


**Step 8.4** Press the roller screw cap to cover the screws (Diagram 8.4)

**Step 8.5** Fit the ring handle (part 15) onto the door panel. (Diagram 8.5)

**Step 8.6** Fit the cover cap onto the roller stopper and glass clamp. (Diagram 8.6)

**Step 9** We do not recommend fitting the vertical seal (Part 7 in the sliding wetroom carton) onto the fixed panel as the overlap between the fixed panel and door panel will be sufficient to avoid any leaks. If you do decide to fit the vertical seal please ensure you cut it as detailed in Diagram 9 to avoid any obstruction to the handle or rollers.

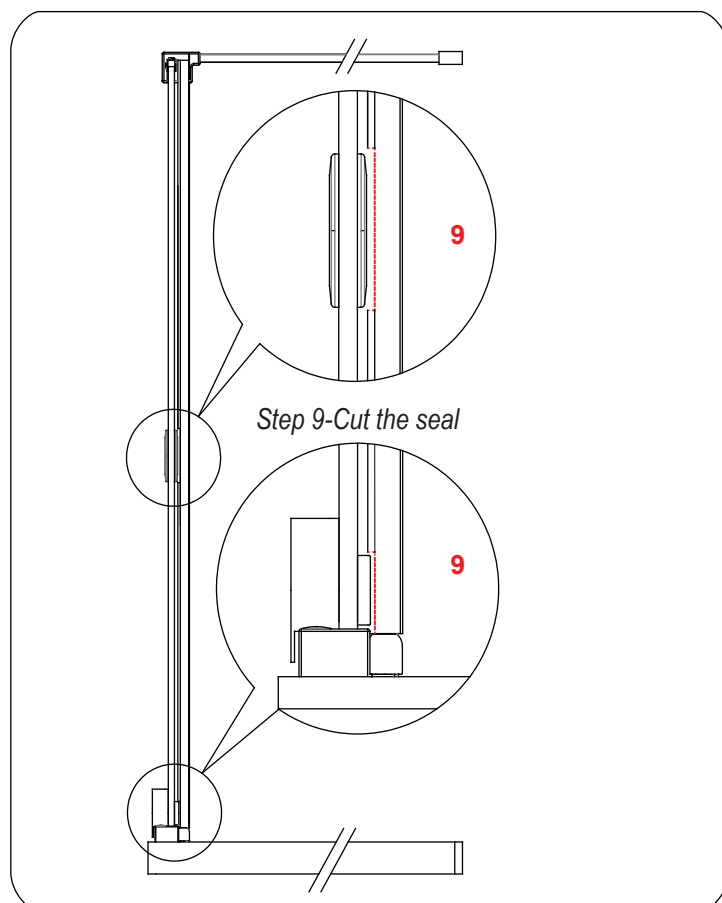

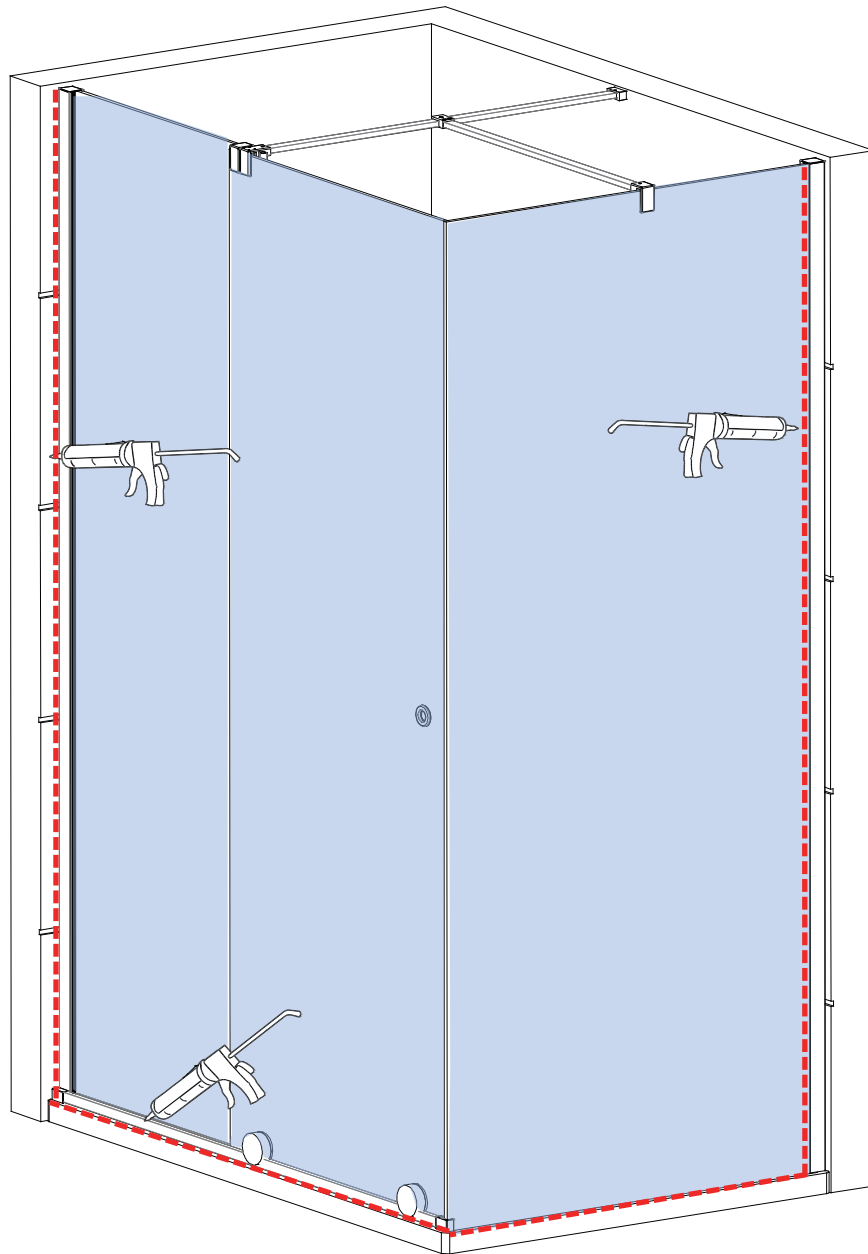

**24 HRS**



**DO NOT USE THE  
ENCLOSURE FOR  
24 HOURS AFTER  
SEALING**

#### **Applying Silicone Sealant**

##### **Sealing Inside**

Seal from the top of the wall profile to the bottom on the **INSIDE** between the wall profile and the wall.

**IMPORTANT:** Do not apply sealant on inside of the tray.

##### **Sealing Outside**

Seal from the top of the wall profile to the bottom between the wall profile and tiles on both sides. Also seal along the bottom where the frame meets the tray. Seal the joints between the bottom profile and any upright profiles.


## AFTERCARE

### Cleaning Instructions

It is important to clean your Aquadart shower enclosure after every use. Please wipe down all glass and metal parts with a clean soft cloth. Ensure that all residual water on the glass is removed after every use.

### Usage

For reliable, watertight performance from your Aquadart enclosure your shower head should not be positioned so that the shower sprays directly onto the enclosure door. Failure to comply with this may cause the shower to leak. Outward opening doors may cause water to drip onto the floor, please ensure that the floor covering immediately outside the enclosure will not be affected by water.

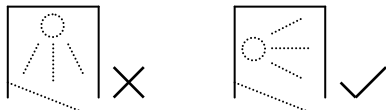

This product has been treated with Clean & Clear™ easy clean glass treatment, a protective barrier which creates a 'non-stick' surface on your glass, helping to resist lime scale build up and water spots. For further information on Clean & Clear™ please visit [www.aquadart.co.uk](http://www.aquadart.co.uk)

### Aftercare

Clean & Clear™ glass can be cleaned with any suitable nonabrasive glass cleaner - with PH value of between 3-11; the coating will not be damaged. Avoid surfactants and heavily perfumed products. Vinegar and water based products are very effective. Do not use abrasive scrubbing cleaners or equipment for cleaning.

### Warranty

Limited 5 year Warranty for Clean & Clear™ treatment: To guarantee treated surfaces will remain more repellent than untreated glass for 5 years from start of use, as long as basic manufacturer maintenance recommendations are followed and no harsh or abrasive cleaners are used.

#### AQUADART PRODUCTS

North Dean Road, Keighley, West Yorkshire, BD22 6QY

For technical / aftersales queries, please visit our website : [www.aquadart.co.uk](http://www.aquadart.co.uk)

or Sales Tel : 0845 0262 55 Fax : 01535 613831 Technical : 01535 613860

