



Robe Hook Soap Basket Tissue Holder without cover A14 CHR A15 CHR A16 CHR Soap Basket A13 CHR
Soap Dish A1 CHR
Tumbler Holder A2 CHR
Towel Ring A3 CHR
Double Robe Hook A4 CHR
WC Brush Holder A8 CHR

Tools required:
















Determine the final installation position, mark the fixing hole positions in pencil.






Using a 6mm drill bit, drill holes on the marked positions.

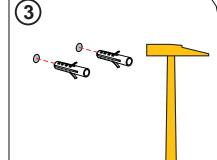

Insert the rawl plugs into the drilled holes.



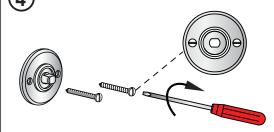

Screw in the stainless steel screws to secure the base to the wall. Please ensure that the screw heads are parallel to the floor.





Insert the Soap Basket body into the base. Fix it with the allen key supplied.

The product is 100% brass chrome plated with polished Stainless Steel Screws.

Suggest cleaning the product surface with cleanwater or soft detergent, and then dry with soft towel.

Please do not use any detergent containing hydrochloric acid or caustic chemicals.

Avoid scratching the surface with hard objects, and do not use a coarse cloth to wipe.

The product should be installed by a professional, following the recommended installation instructions.

http://www.qssupplies.co.uk

1 - 1