

Customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

Guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.
2. The defect is not due to use of an unsuitable or inadequate water or power supply.
3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.
4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

The relevant guarantee periods are:-

1. Twelve years on chrome finish products.
2. Six years on Vado Identity products.
3. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

Vado


Wedmore Road, Cheddar, Somerset, England BS27 3EB
tel 01934 744466. fax 01934 744345
technical@vado-uk.com
www.vado-uk.com

GUARANTEE REGISTRATION

NAME			
ADDRESS			
	POSTCODE		
RETAILER			
ADDRESS			
	POSTCODE		
PURCHASE DATE	ARTICLE NUMBER	(SEE BOX)	
PRODUCT DESCRIPTION			
WHO INSTALLED THE PRODUCT?	RETAILER	PLUMBER	BUILDER
FOR VADO USE			SELF



Installation & maintenance instructions

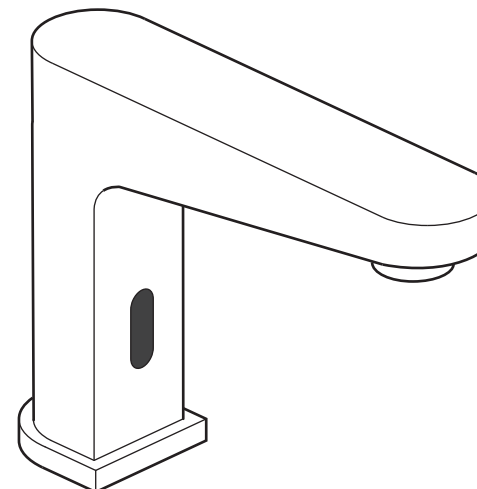

life

Mono basin filler with infrared sensor

Please leave these instructions with the customer

Important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water and electrical regulations and will invalidate the guarantee.
Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

We strongly recommend that you use a qualified and registered plumber and electrician.

Plumbing Connections

The installation must comply with all Local/National Water Supply Authority Regulations/ Byelaws and Building and Plumbing (UK:BS6700) Regulations.

Plumbing Connections

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

Electrical Connections

All electrical connections should be carried out by a qualified electrician.
The installation must comply with current NICEIC regulations and to the requirements of BS7671 (Requirements for electrical installations).
Please ensure that all exposed metal is supplementary bonded.


All electrical connections should be carried out by a qualified electrician.
The installation must comply with current NICEIC regulations and to the requirements of BS7671 (Requirements for electrical installations).
Please ensure that all exposed metal is supplementary bonded.

The installation must comply with current NICEIC regulations and to the requirements of BS7671 (Requirements for electrical installations).

Please ensure that all exposed metal is supplementary bonded.

Please ensure that all exposed metal is supplementary bonded.

All Vado electronic taps are IPX4 rated and are suitable for installation in zone 2 and beyond. The diagram below illustrates this zonal concept and must be followed to ensure safe installation of electrical bathroom products.

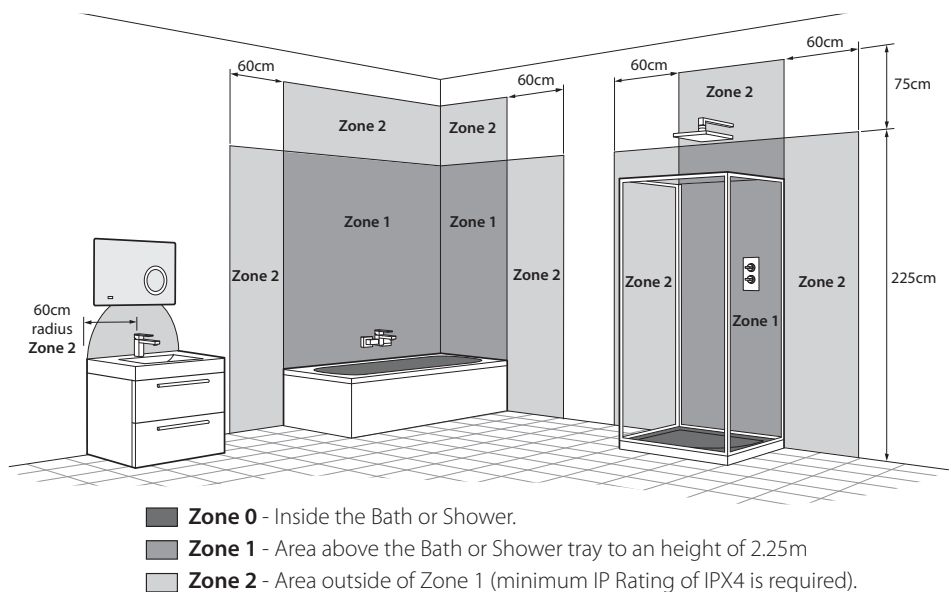

Installers/users notes

Declaration of Conformity



Declaration of Conformity

The infrared taps (electronic taps) listed below, complies with the essential requirements of the following EEC Directives;

2006/95/EC – The Low Voltage Directive

2004/108/EC – The Electromagnetic Compatibility Directive

And is in conformity to the applicable requirements to the following standards;

EN 61558-1:2005+A1:2009 – Safety of power transformers, power supplies, reactors and similar products – Part 1: General requirements and tests

EN 61558-2-6:2009 – Safety of transformers, reactors, power supply units and similar products for supply voltages up to 1100 V. Particular requirements and tests for safety isolating transformers and power supply units incorporating safety isolating transformers

EN 61000-6-1:2007 – EMC, generic standards – immunity for residential, commercial and light-industrial environments

EN 61000-6-3:2007+A1:2011 – EMC, generic standards – emission standard for residential, commercial and light-industrial environments

Model: IR-100/LIF-C/P, IR-100/PRO-C/P, IR-100/SOH-C/P, IR-100/TE-C/P,
IR-100/ZOO-C/P, IR-100/ZOOT-C/P, IR-DSPOUT-C/P, IR-WSPOUT-C/P


Authorised signature

Name: Adam Malein

Position: Approvals and Compliance Officer

Vado, Wedmore Road, Cheddar, Somerset, BS27 3EB

Dimensions

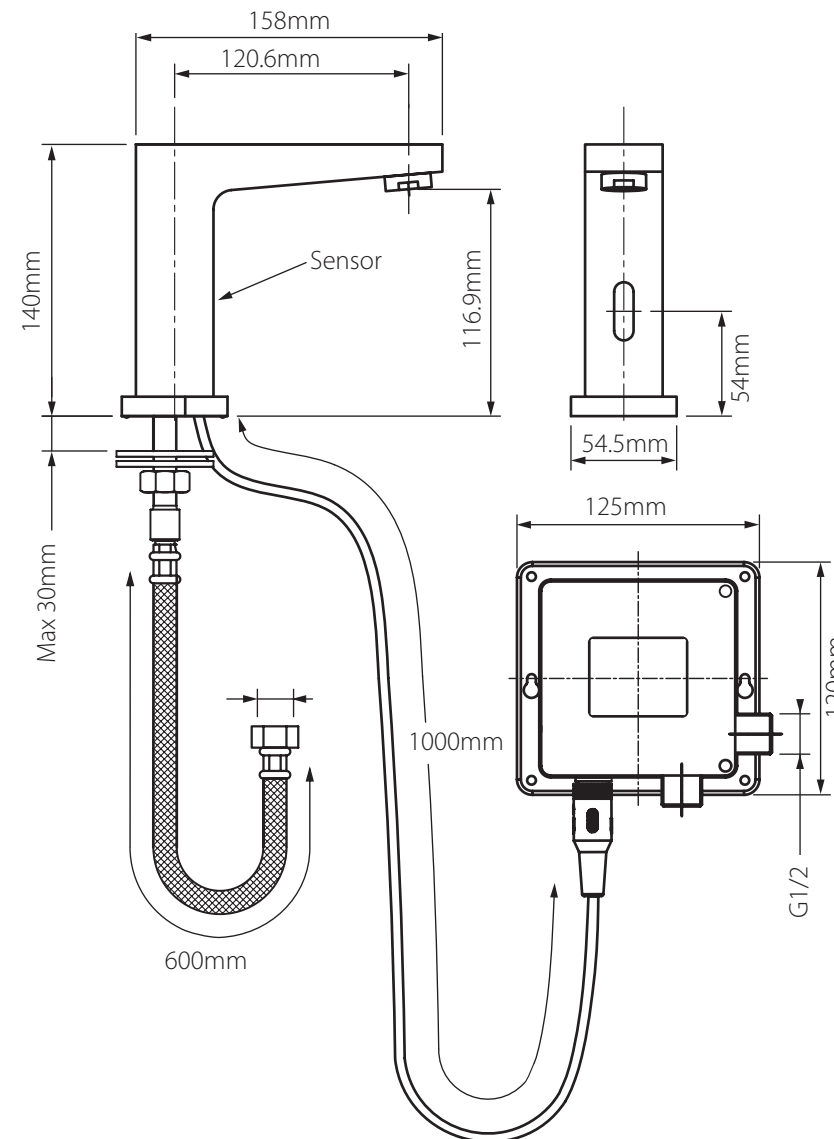

Operating Specifications

Operating Pressure:

Minimum operating pressure 0.5 bar

Maximum operating pressure 5 bar

Electrical connection

Mains electrical connection

Connect the transformer to ~230V 50 Hz AC mains supply with a fused switch outside of the bathroom.

The mains cable can be connected to a 3 or 5 amp plug if required using the following connections.

Brown - (L) Live
Blue - (N) Neutral

Note: If using a plug and socket the socket must not be installed within the bathroom.

Tap installation

Note: Please do not install this product opposite or near any reflective surfaces as this may lead to false or permanent activation.


Position the base ring onto the bottom of the mixer body (ensure the rubber 'O' ring is in place).

Screw the flexible pipe into the bottom of the threaded tube, hand tighten only.

Push the flexible pipe down through the hole and position the mixer on the basin. From the underside of the basin slide the rubber washer and nut onto the threaded tube between the basin and nut, tighten the nut to clamp the tap in position.

CAUTION: Do not over tighten the nut as this may damage the basin.

Connect the tap to the 'water out' connection on the bottom of the control box, when installed.

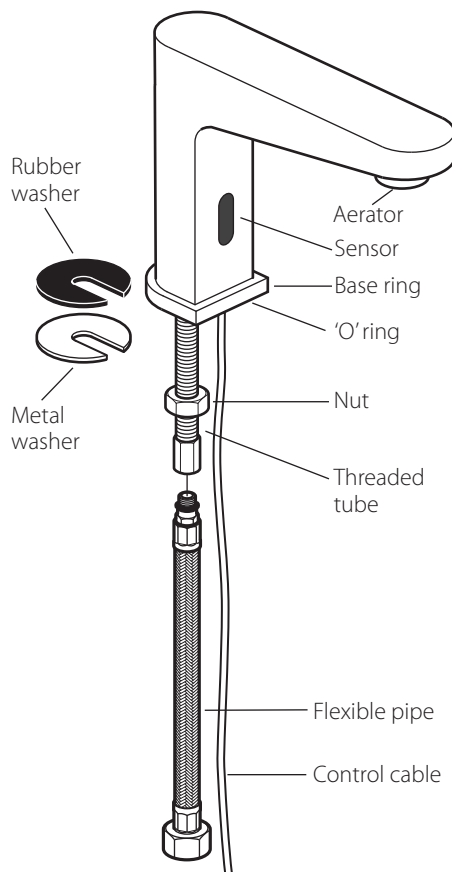

Disposal - please read

Waste electrical and electronic equipment (WEEE)

The wheeled bin symbol means the product is covered by the European Directive 2002/96/EC.


DO NOT dispose of this unit with normal household waste, take to a local authority recycling centre.



Troubleshooting

Description	Cause	Treatment
No water out	The battery is exhausted	Change the battery
	Water supply cut off	Check supply
	Dirt in the filter	Clean the filter
	Water pressure too low	Raise the pressure
Water will not turn off	Dirt on the sensor window	Clean the sensor
Too little water flow	Water supply is turned down	Adjust water supply
	The filter is too dirty	Clean the filter
	Water pressure is too low	Raise the pressure
Too much water flow	Water pressure is too high	Adjust pressure
Short cycles of battery	Incorrect batteries	Change to 4xAA Alkaline batteries
The indicator light is not on	The light is broken	Change the light or circuit board
	The circuit board is wet or signal line is wet	Dry out
	The battery is exhausted	Change the battery
	Poor connection of battery	Check battery connections


Battery installation and replacement

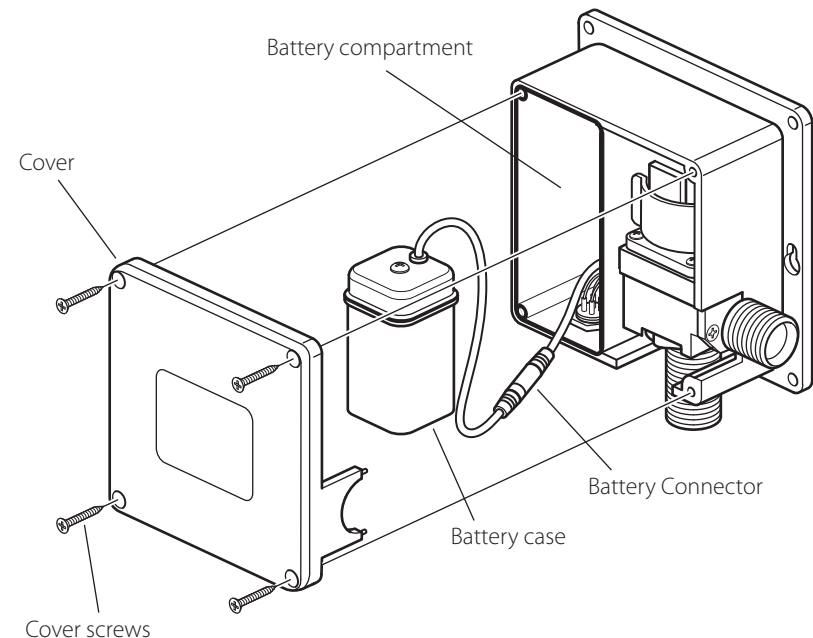

The unit is supplied with a battery backup. Should the mains supply fail and the tap still will not function then the batteries may need replacing. Before installing the control box on the wall fit the supplied batteries as follows.

Remove the 4 screws retaining the cover and pull off, pull out the battery case (see above).


Undo the screw on the top and remove the lid. Insert the 4 batteries according to the diagram in the bottom of the base. Replace the lid making sure that the 2 springs are orientated to match the negative ends of 2 batteries. Place the battery case into the compartment, fit the cover and replace the 4 screws.

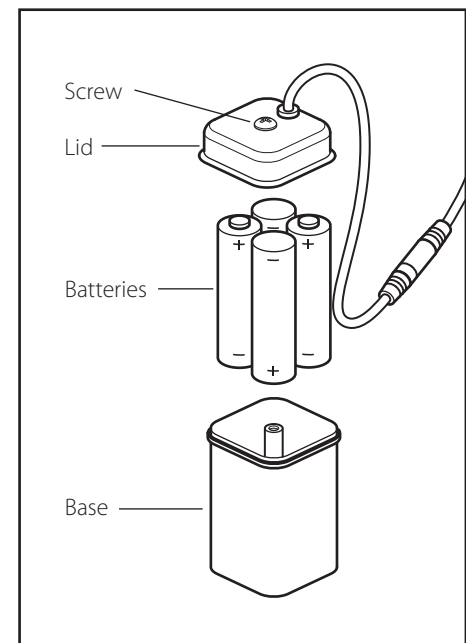

Installation


⚠ Warning! Please check for any hidden cables and pipes before drilling holes in the wall.

Using suitable wall fixings attached the control box in a suitable position under the basin making sure the flexible pipe from the tap will reach.

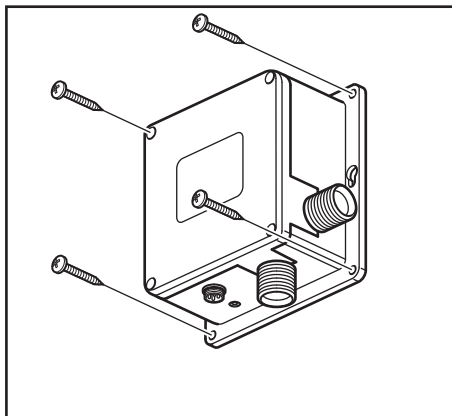


Make sure that the rubber washers are in place in the flexible pipes.

Connect the flexible pipe from the tap to the bottom outlet marked 'Water Out'. Connect the other flexible pipe to the side connection marked 'Water In'.

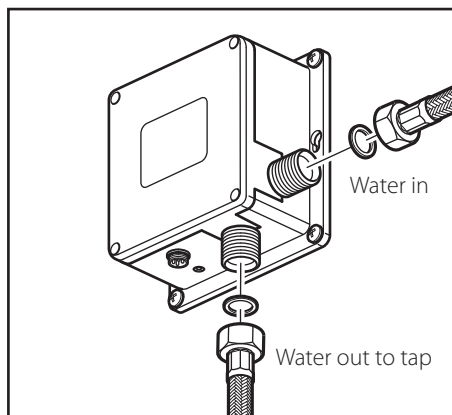

Line up the groove on the 4 pin connector and push into the plug on the underside of the box, tighten the knurled ring to secure in place. Push the DC power jack coming from the transformer (supplied in box) into the socket also on the underside.

Turn on the water and test.

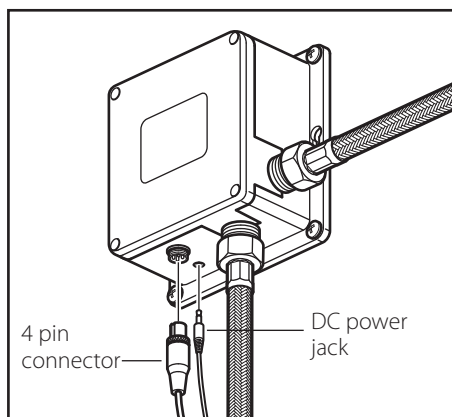

Care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

Maintenance

The inlet connection contains a filter, should you need to clean the filter, remove the inlet connection to the control box. Pull out the filter and clean under running water.

Replace the filter and inlet pipe.