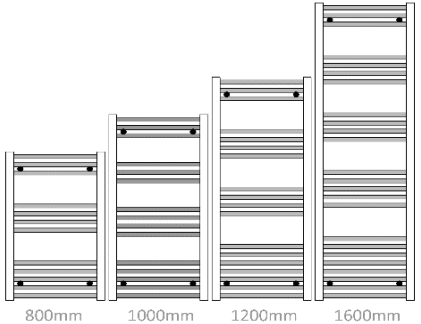
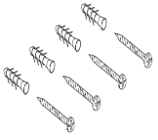





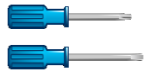








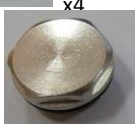

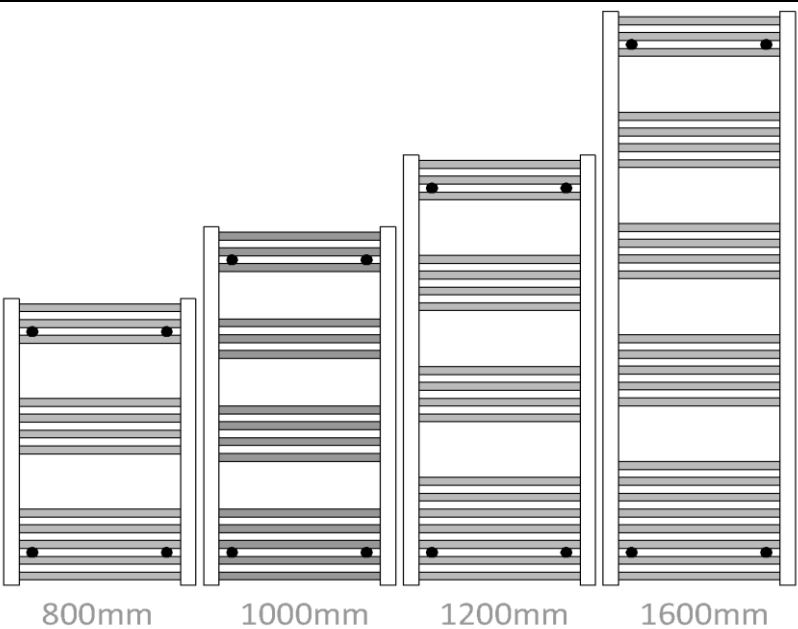
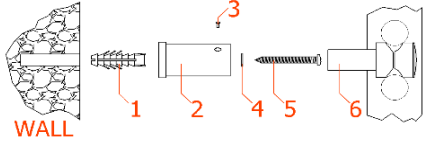


CAPO INSTALLATION GUIDE

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 <p>800mm 1000mm 1200mm 1600mm</p> <p>Radiator x1</p>	<p>Fixing choose the appropriate fixing for the wall material if required</p>	
 <p>PTFE tape</p>	<p>Electric drill</p>	
 <p>Masonry drill bit appropriate to the fixings</p>	<p>Adjustable spanner</p>	
 <p>Radiator valve hex key</p>	<p>Flat head and philips head screw drivers</p>	
 <p>1 lock shield valve and 1 gate or thermostatic valve</p>	<p>Spirit level</p>	
 <p>Measuring tape</p>		
 <p>Brackets x4</p>		
 <p>Wall Anchors x 4</p>		
 <p>Fixing Screws x4</p>		
 <p>Security Screws</p>		
 <p>Washers x4</p>		
 <p>End plug x1</p>		
 <p>Air vent x1</p>		



HIGHT D	VERTICAL HOLES F	WIDTH A	AXIS B	HORIZONTAL HOLES E
800mm	616mm	300mm	255mm	100mm
1000mm	816mm	400mm	355mm	200mm
1200mm	1016mm	450mm	405mm	250mm
1600mm	1416mm	500mm	455mm	300mm
		550mm	505mm	350mm
		600mm	555mm	400mm



This product must be fitted only by a fully qualified installer.

A The radiator should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.

B Drill the wall and insert wall anchors (1) (or other suitable fixings).

C Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).

D Screw the brackets (6) onto the radiator.

E Insert brackets (6) into the brackets (2) and tighten the security screws (3).

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 8 bar.